


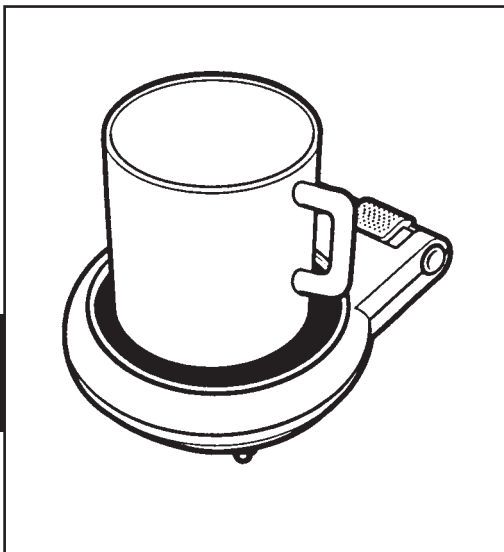

HOT SPOT™ BEVERAGE WARMER AND MUG SET

**OWNER'S
MANUAL**

MODEL
WWMW2000ZE



 White-Westinghouse™

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

1. Do not touch hot surfaces. Handle by plastic sides only.
2. To protect against risk of electrical hazards, do not immerse cord, plug, or the appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet and allow to cool before putting on or taking off parts, and before cleaning.
5. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
6. The use of attachments not recommended or sold by the manufacturer may cause hazards.
7. Keep the cord away from heated surfaces. Do not let cord hang over edge of table or counter, as it could be pulled off.
8. Do not use outdoors.
9. Do not place on or near a hot gas or electric burner or in a heated oven.
10. Do not use the appliance for other than its intended use.
11. Do not move appliance when supporting a container of hot liquids.


SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

This appliance is for HOUSEHOLD USE ONLY. It may be plugged into any 120-volt AC electrical outlet (ordinary household current). Do not use any other type of electrical outlet.

NOTE: This appliance has a polarized plug (one blade is wider than the other): To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

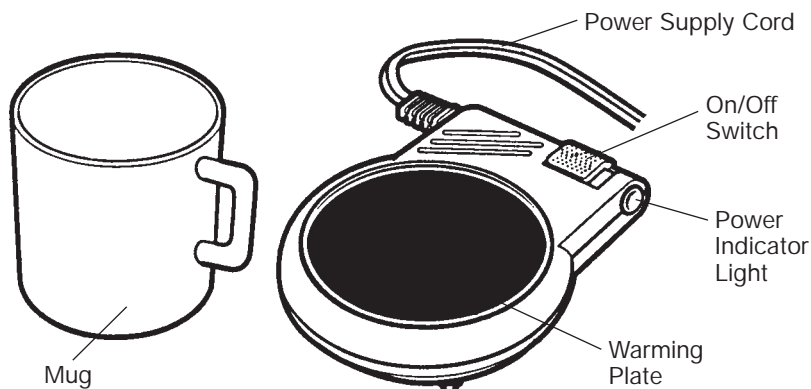

BEFORE INITIAL USE

Before using your Beverage Warmer and Mug for the first time, wash Mug in warm, soapy water. Rinse well and dry thoroughly. Wipe unit with a clean, soft cloth or sponge to remove any packaging dust.

Never immerse unit in water or any other liquid. Do not use harsh detergents or abrasive cleaners to clean the unit or Mug.

HOW TO USE: Enjoy a cup of coffee or any hot beverage or soup at your leisure. Simply plug the Mug Warmer in and switch ON. The Power Indicator Light will glow, letting you know the unit is operating. Place your Mug on the Warming Plate to maintain the perfect temperature.

NOTE: The Warming Plate is not intended to heat cold liquids, only to maintain temperature.

DO NOT use plastic, Styrofoam or paper cups on Warming Plate. Be sure to switch unit OFF when not in use.

CARE AND MAINTENANCE

This appliance requires little maintenance. It contains no user serviceable parts. Refer service to qualified personnel.

TO CLEAN: NEVER IMMERSE UNIT IN WATER OR ANY OTHER LIQUID. Unplug appliance and allow to cool. Use a soft, slightly damp cloth to wipe the surfaces. Wash Mug in warm soapy water and rinse well after each use. Use only mild dishwashing detergent and a soft cloth or sponge. Do not use harsh detergents or scouring pads to clean the Mug.

TO STORE: Unplug appliance, allow to cool, and store in its box or in a dry place. Never store it while it is hot or still plugged in.

ONE YEAR LIMITED WARRANTY

This White-Westinghouse™ product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in Canada, and does not extend to any units which have been used in violation of written instructions or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year period, a product with a defect will be either repaired or replaced with the same or comparable model (at our option) when the product is returned to the store from which it was purchased. The replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such replacement.

Important Notice

If any parts are missing or defective, return this product to the place of purchase.

This White-Westinghouse™ product is distributed by:

Salton/MAXIM Housewares, Inc.

708 South Missouri St.

Macon, MO 63552

USA

Phone 1-800-233-9054

E-mail: white-westinghouse@saltonusa.com

TRADEMARK WHITE-WESTINGHOUSE UNDER LICENSE.

© 1999 WHITE-CONSOLIDATED INDUSTRIES, INC.

PRODUCT OF CHINA/ZELLERS INC.

A subsidiary of Hudson's Bay Company.

Printed in China