

Model No. MMCV1BS

Spa Therapy™



SOUND MAGIC MASSAGE CHAIR™



The Archives of
Milton H. Greene, L.L.C.

Beverly Sorensen™





Marilyn Monroe stands as one of the 20th century's most enduring images, an icon reborn, it seems, with each new generation. The man who best understood and captured - some say invented - this phenomenon was her friend and partner, the late Milton H. Greene.

It was Greene's unique personal friendship and business relationship with Marilyn Monroe that allowed the extraordinary photographs, recording her moods, beauty, talent and spirit, for which he is most widely remembered.

The Monroe collection contains more than 2,000 never before seen photographs of the screen legend.

Greene's remarkable portraits of our most beloved artists, musicians, and personalities are legendary. Some of his subjects are Marlene Dietrich, Frank Sinatra, Judy Garland, Sammy Davis Jr., Ava Gardner, Cary Grant, Bette Davis, Tony Curtis, Paul Newman, Steve McQueen, Audrey Hepburn, Gene Kelly and Sophia Loren.

In a return to an era of lost elegance, The Archives, headed by Milton's eldest son Joshua, is preserving the vision and timeless works of the celebrated photographer. The Archives is dedicated to the restoration, license and sale of an unprecedented wealth of fine photography for use in traditional and interactive marketing, mass media, merchandising, exhibition and private collections.

The Archives, working in conjunction with Salton®, specifically restored and made available the Monroe images used in the packaging of these products.

We invite you to visit our website at **www.archivesmhg.com** or feel free to contact us.

The Archives of
Milton H. Greene, LLC
278 Maple Street Suite E
Florence, OR 97439
541-997-4970 fax: 541-997-5795

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER - To reduce the risk of electric shock:

1. Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
2. Never use pins or other metallic fasteners with this appliance.
3. Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.
4. Keep Dry - Do not operate in a wet or moist condition.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
3. Close supervision is necessary when this appliance is used by or near children, invalids, or disabled persons.
4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged in any manner, or dropped into water. Take appliance to the nearest authorized service center for examination and repair.
6. Do not carry this appliance by supply cord or use cord as a handle.
7. Keep the cord away from heated surfaces.
8. Never block the air openings of the appliance or place it on a soft surface such as a bed, pillow or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.

IMPORTANT SAFEGUARDS (cont.)

- 9.** Never use while sleeping.
- 10.** Do not use outdoors.
- 11.** Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 12.** To disconnect, turn all controls to the OFF position, then remove plug from outlet.
- 13.** Use heated surfaces carefully. May cause serious burns. Do not use over insensitive skin areas or in the presence of poor circulation. The unattended use of heat by children or incapacitated persons may be dangerous.

POLARIZED PLUG

 
This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug fits into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

GETTING TO KNOW YOUR Salton® Sound Magic Massage Chair™

Before attempting to use your Salton® Sound Magic Massage Chair™, you should become familiar with all of the parts. Read all of the instructions and safeguards carefully.

Identify all parts of your Salton® Sound Magic Massage Chair™ according to the drawing below so that you have no doubts when reading the instructions that follow.

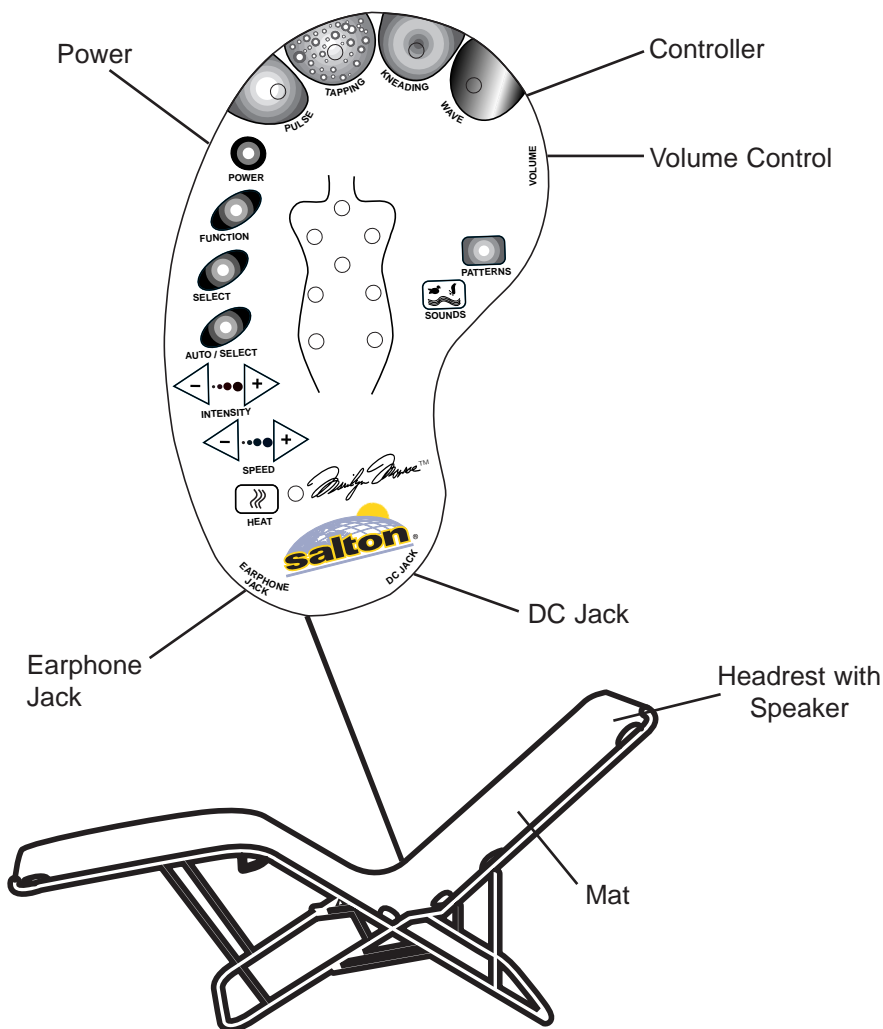

RECOMMENDED MESSAGE TIME

Generally, massage should last only 10-15 minutes on any muscle of the body. For safety purposes and to ensure that overheating does not occur, this appliance will automatically shut off after 15 minutes of use. Allow unit to cool before using it again. To restart the Massage Chair, simply press the POWER button. It is recommended that the Massage Chair not be used for more than 30 minutes in one session. This is to prevent muscles and nerves from being over-stimulated, causing an adverse effect. This appliance should only be used once or twice a day.

FOR BEST RESULTS

If you are pregnant or receiving medical treatment for an illness or disease, please consult a doctor before using this appliance.

Do not step or stand on this unit, as you may cause internal damage to the components.

Do not use this appliance on any part of the body that is swollen, burned or inflamed, or where skin eruptions or sores are present.

If you feel that the Massage Chair gives you too much stimulation, try placing a cloth or towel between you and the Chair. This may act as a buffer to the massaging action.

Massage should be pleasant and comfortable. Should pain or discomfort result, discontinue use and consult your doctor.

INSTRUCTIONS FOR USE

You will now be able to enjoy the full benefits of the Massage Chair that helps relieve the tension of stressful living and provides an overall dimension of quality relaxation. The Mat can be used separately on any soft surface - such as a bed or sofa - or with the Chair provided with the unit. To use, simply plug the Adapter jack into the DC JACK socket on the Controller. Then, plug the Adapter into a 120V AC electrical outlet. Use only the Adapter supplied with this product.

POWER: Press this button to turn Massage Chair "On" and begin your massage. When you have finished your massage, press button again to turn Chair "Off", and then unplug the Adapter from wall outlet.



FUNCTION: There are 8 individual motors to massage away stress from your neck, shoulders, lower back, thighs and calves. There are 5 FUNCTION programs, and each consists of different massage motor sequences. Please note that the first FUNCTION program (FUNCTION 1) is immediately activated when the Massage Chair is first turned "On". Each subsequent press of the FUNCTION button will activate the next programmed FUNCTION. (For example, pressing the FUNCTION button once will activate FUNCTION 2) The LED light(s) corresponding to the massage motor(s) operating will illuminate to indicate the FUNCTION selected. Referring to the diagram below, the FUNCTION descriptions are as follows:



FUNCTION 1 Massage motor sequences:

8 > 5 > 4 > 3 > 1 > 2 > 6 > 7 > 7 > 6 > 2...

FUNCTION 2 Massage motor sequences:

7,8 > 5,6 > 4 > 2,3 > 1 > 1 > 2,3 > 4...

FUNCTION 3 Massage motor sequences:

 
2,5,7 > 3,6,8 > 1,4 > 1,4 > 3,6,8 > 2,5,7...

FUNCTION 4 Massage motor sequences:

7,8 > 5,6 > 2,3,4 > 1 > 1 > 2,3,4 > 5,6...

FUNCTION 5 Massage motor sequences:

7,8 > 4,5,6 > 1,2,3 > 1,2,3 > 4,5,6...

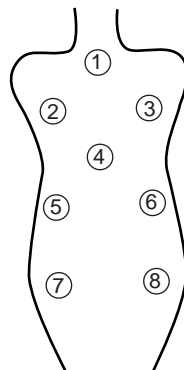

INSTRUCTIONS FOR USE (cont.)

 
SELECT: The SELECT button works in conjunction with the AUTO/SELECT button in order to target a specific tense area. You must first press the AUTO/SELECT button, then press the SELECT button until you have chosen the exact body location you want continuously massaged. The corresponding LED light will illuminate to indicate the area you've targeted. The massage will remain in the area you have selected until you press AUTO/SELECT again, which reactivates the cycling action according to the current Function.




AUTO/SELECT: This button works in conjunction with the SELECT button in order to target a specific tense area. You must first press the AUTO/SELECT button, then press the SELECT button until you have chosen the exact body location you want continuously massaged - **see above for further instructions.** Press AUTO/SELECT again to reactivate the cycling action according to the current Function.



INTENSITY: Choose the strength of your massage. Press "+" to increase the INTENSITY. Press "-" to decrease the INTENSITY. There are 3 strengths for each key.

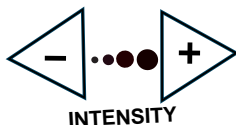

 SPEED: Control the cycle speed of the massage motors. Press "+" to increase the SPEED. Press "-" to slow the SPEED down. There are 3 speeds for each key.

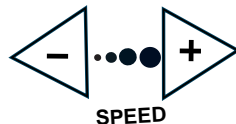

INSTRUCTIONS FOR USE (cont.)

HEAT: Press this button to add a soothing, penetrating heat to the lower back area; press again to turn off. The corresponding LED light will illuminate when the HEAT function is operating.



NOTE: When selecting the HEAT function in conjunction with the massaging action, there will be a slight decrease in the strength of the Massage output. This adjustment is perfectly normal and should not be interpreted as a defect.

PATTERNS: There are 4 Patterns to choose from. The PULSE feature, in which the massage motors pulsate on and off, is immediately activated when the Massage Chair is first turned "On". Press the PATTERNS button once to activate the TAPPING massage, twice for a KNEADING Shiatsu-like massage, and a third time to have the massage motors cycle up and down in a WAVE sensation. The corresponding LED light will indicate your selection.



SOUNDS: Press this button to select from 6 different relaxing sounds: Sea waves, bubbling brook, birds, crickets, white noise, and rain. The Speaker is located in the Headrest of the unit, and you may use the SOUNDS feature with or without the included Earphones. The Earphones plug into the EARPHONE JACK socket on the Controller. Adjust VOLUME as desired by using the VOLUME control located on the Controller.

 
 
 


USER MAINTENANCE INSTRUCTIONS

This appliance contains no user serviceable parts. Do not try to repair it yourself. Refer service, if necessary, to qualified service personnel.

TO CLEAN: NEVER IMMERSE UNIT IN WATER OR ANY OTHER LIQUID. Unplug appliance and allow it to cool. Use a soft, slightly damp cloth or sponge to wipe the Mat surface. Never use abrasive cleaners or solvents, as they may damage the surface.

TO STORE: Unplug appliance, allow it to cool, and store in its box or in a clean, dry place. The Chair has a space saving, foldable design for easy storage. Remove Mat from Chair prior to storing. The Mat can be folded in half at the crease for compact storage and portability. Avoid contact with sharp edges or pointed objects that might cut or puncture the fabric surface. Never store unit while it is hot or still plugged in. Never put any stress on the cord where it enters the unit, as this could cause the cord to fray and break.

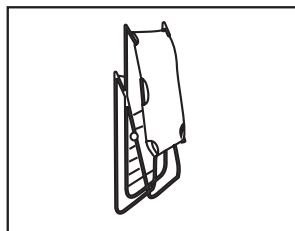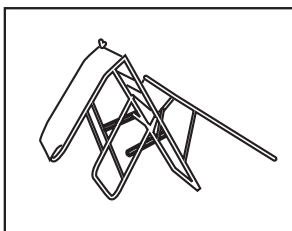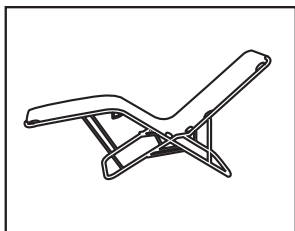

ONE YEAR LIMITED WARRANTY

This Salton, Inc. Product warranty extends to the original consumer of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violations of written instructions furnished by Salton, Inc., or to units that have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract, or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year limited warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at Salton, Inc.'s option), when the product is returned to the Salton, Inc. facility. The repaired or replacement product will be in warranty for the balance of the one year warranty period and an additional one month period. No charge will be made for such repair or replacement.

Service and Repair

If service is required, you should first call toll-free 1-800-233-9054 between the hours of 8:00am and 5:00pm Central Standard Time and ask for Consumer Service stating that you are a consumer with a problem.

In-Warranty Service: For an appliance covered under the warranty period, no charge is made for service or postage. Call for a pre-paid return mailing label (U.S. customers only).

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$8.00 for return shipping and handling. Salton, Inc. cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem; your full return address and daytime phone number; a note describing the problem you experienced; **a copy of your sales receipt or other proof of purchase to determine warranty status.** C.O.D. shipments cannot be accepted.

ATTN: Repair Department, Salton, Inc.
708 South Missouri St.
Macon, MO 63552



For more information on Salton, Inc. products:
visit our website: <http://www.salton-maxim.com>
or email us at: salton@saltonusa.com