 


White-Westinghouse™

6 Speed Hand Mixer w/Stand

OWNER'S MANUAL

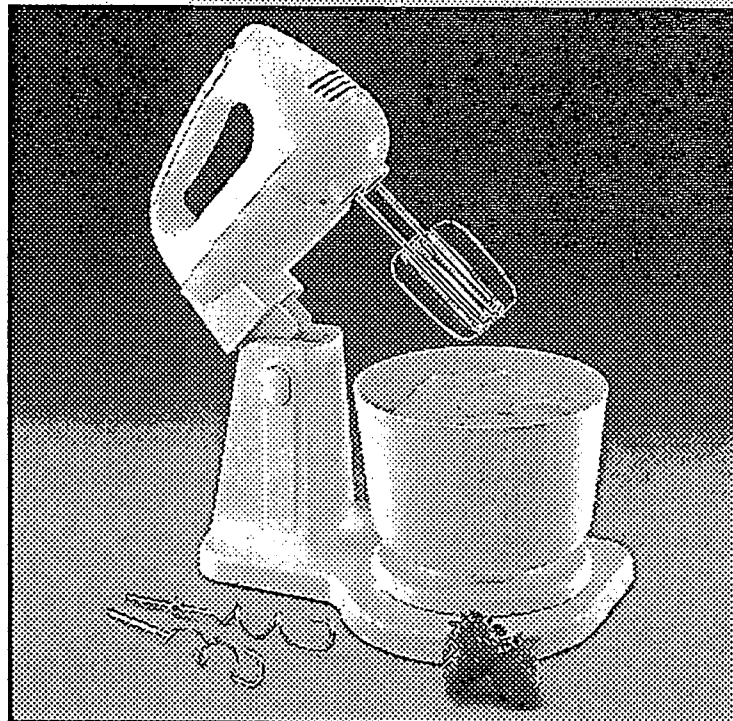

MODEL WMX4000

IMPORTANT SAFEGUARDS

 
When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **Read all instructions before using.**
2. To protect against the risk of electrical shock, do not put the motor body or base of the stand mixer in water or other liquid.
3. Close supervision is necessary when an appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
5. Avoid contacting moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to persons, and/or damage to the mixer.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair, electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.
10. Do not let cord contact hot surfaces, including the stove.
11. Remove beaters and kneading hooks from mixer before washing them.
12. Be sure unit is completely assembled before using.
13. Turn unit "OFF" and unplug from outlet when finished using. Do not disassemble the unit until the motor comes to a complete stop.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

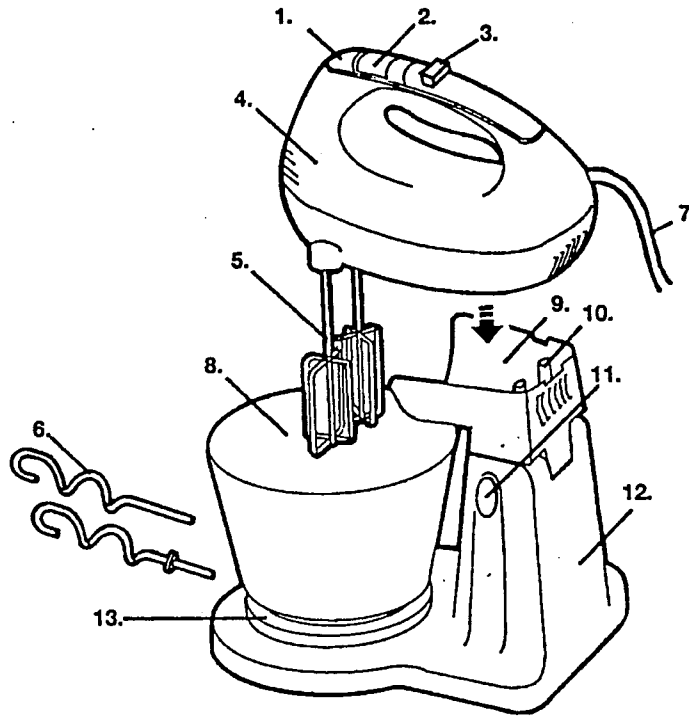

- | | |
|-----------------------------------|----------------------|
| 1. Ejector Knob | 7. Cord |
| 2. On/Off Switch & Speed Selector | 8. Mixing Bowl |
| 3. High/Low Switch | 9. Movable Arm |
| 4. Main Motor Body | 10. Tab |
| 5. Beaters | 11. Unlocking Button |
| 6. Kneading Hooks | 12. Stand |
| | 13. Turntable |

This appliance is for **HOUSEHOLD USE ONLY** and may be plugged into any 120-volt AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

This appliance has a **polarized plug** (one blade is wider than the other). As a safety feature, this plug fits in a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

A **short power-supply cord** is provided to reduce the hazards resulting from entanglement or tripping over a longer cord.

An extension cord may be used with care; however, **its marked electrical rating should be at least as great as the electrical rating of this appliance**. The extension cord should not drape over the counter or tabletop where it can be pulled on by children or tripped over.

BEFORE USING: Carefully unpack mixer and wash beaters, and bowl in warm, soapy water. Rinse and dry thoroughly. Wipe mixer with a soft, slightly damp cloth or sponge to remove packaging dust. NEVER IMMERSE THE MIXER IN WATER OR ANY OTHER LIQUID. Use only a mild liquid detergent for cleaning; do not use flammable or abrasive cleansers to clean the mixer or the attachments.

PREPARING FOR USE

1. Before using the stand mixer, wash beaters, kneading hooks, and bowl in warm, soapy water. Rinse thoroughly and dry.
2. To insert beaters/kneading hooks: Switch the speed control to "OFF." Be sure cord is unplugged from electrical outlet.

Insert one beater at a time by placing stem end of beater into opening on bottom of the mixer. Press and twist lightly until beater clicks into position. (Figure 1)

Fit the kneading hook with disk on stem of hook into the larger socket of your stand mixer.

Note: Always place the beaters or kneading hooks in the main motor body.

3. Mount the mixer on its stand. (Figure 2)

Place mixer onto the movable arm by matching the slot on the bottom of the mixer with the tab on the movable arm.

4. Mixing:
 - a. Lift up the mixer by pressing the unlocking button and pushing the mixer slightly backwards. (Figure 3)
 - b. Place the mixing bowl onto the turntable and lower the mixer. (Figure 4)
 - c. Place beaters or kneading hooks into the mixing bowl with ingredients before switching "ON" to avoid splashes. (Figure 5)



Figure 1

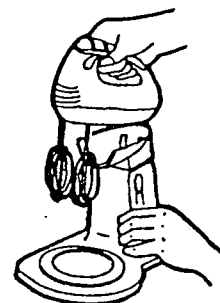 


Figure 2



Figure 3

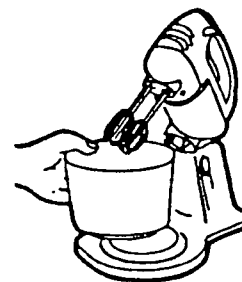 


Figure 4

- d. Always start mixing at a low speed. The operating speed increases as the switch selection is shifted from "1" (LOW) to "6" (HIGH). Select a speed that matches the consistency of the ingredients. Please refer to recommended speed instruction table for the right speed.

Note: DO NOT knead more than 8 oz. of heavy ingredients (bread, dough, heavy cookie dough or candy batter) at one time.

- e. Ingredients can be added slowly during mixing.
- f. Stop the mixer as needed to scrape sides and bottom of mixing bowl with a plastic spatula. Do not attempt to scrape sides or bottom of mixing bowl while mixer is in use.



Figure 5

HOW TO USE THE SPEED CONTROL

The stand mixer will handle a variety of mixing jobs with ease. The speed control and high/low switches located in the front of the handle give instant, accurate settings from the entire range of mixing speeds. The control settings are indicated by speeds 1-3 when the high/low switch is in the "LOW" position. Speeds 4-6 are indicated when the high/low switch is in the "HIGH" position. Each successive speed has greater power.

SPEED SELECTOR GUIDE

Speed	Description
1	For blending or adding dry ingredients into a creamed/liquid mixture. (Use when directions call for "LOW" speed.)
2	For stirring gravies, sauces and mashing vegetables.
3	For creaming together shortening and sugar, mixing cake batter, mixes and puddings.
4	For preparing icings.
5	Use when preparing light, fluffy frostings and candies.
6	For whipping cream, evaporated milk, dry milk, egg whites, yolks or whole eggs. (Use when directions call for "HIGH" speed.)

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing is needed, or return it to the manufacturer. See warranty for details.

NEVER IMMERSE MIXER (MOTOR HOUSING) IN WATER.

Always unplug mixer from electrical outlet when not in use and before cleaning.

TO CLEAN: Be sure unit is unplugged. Eject beater(s) from unit, wash beaters and bowl with warm, soapy water, using a soft cloth or sponge. Rinse well and dry thoroughly. Wipe mixer (motor housing) and base with a slightly damp cloth or sponge.

DO NOT use scouring pads or any type of harsh cleanser to clean the mixer, as this may damage the finish.

TO STORE: Unplug unit; store in its box in a clean, dry place. Never store it while it is hot or still plugged in. **Never wrap cord tightly around the appliance.** Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

ONE-YEAR LIMITED WARRANTY

This White-Westinghouse product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied, and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model (at the store's option) when the product is returned to Kmart. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Important Notice

If any parts are missing or defective, return this product to the place of purchase.

Consumer Service

This White-Westinghouse product is distributed by:

SALTON HOUSEWARES
708 SOUTH MISSOURI ST.
MACON, MO 63552

E-mail: White-Westinghouse@Saltonusa.com

Any questions or comments can be directed to Salton address, or call the Consumer Service Department:

1-800-233-9054
Monday-Friday
9 a.m.-5p.m. CST

Trademark White-Westinghouse used under license.

©1998 White-Consolidated Industries, Inc.

Made in China for
Kmart Corporation
Troy, Michigan 48084
Printed in Hong Kong