


READ AND SAVE THESE INSTRUCTIONS

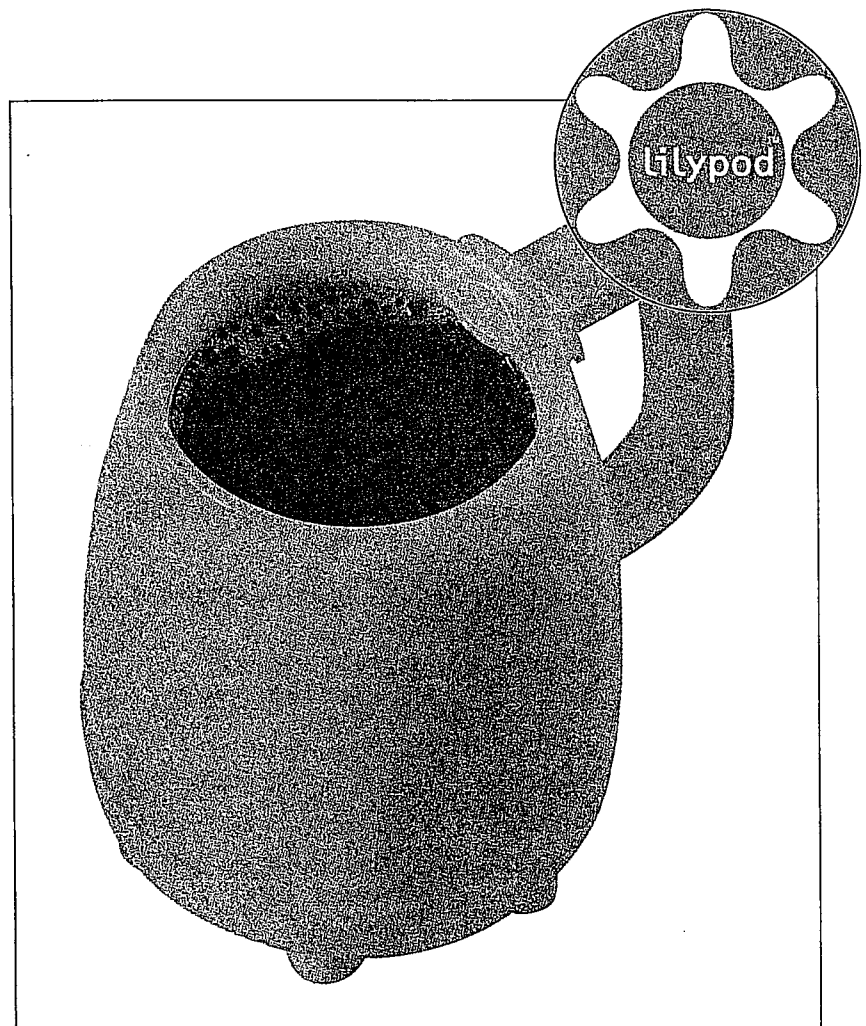

Lilypod™
Microwave Brew Mug

**USE AND CARE GUIDE FOR
MODEL MEMW18/MEMW36**



IMPORTANT SAFEGUARDS

When using the Melitta Lilypod™, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. The Lilypod™ is designed to work exclusively in a microwave oven. Do not use industrial ovens or ovens with browning coils.
3. **ALWAYS MAKE SURE THE PROPER AMOUNT OF WATER HAS BEEN ADDED TO THE BASE/WATER CHAMBER OF THE LILYPOD™ BEFORE PLACING INTO MICROWAVE OVEN. NEVER PLACE LILYPOD™ IN MICROWAVE OVEN WITHOUT WATER.**
4. The maximum microwave cooking time is 5 minutes. **Do not exceed this limit.**
5. **CAUTION: After brewing, the brewed liquid and all other internal contents and surfaces are hot. Do not touch hot surfaces. Use Lilypod™ handle.**
6. Allow Lilypod™ rim to cool before attempting to bring the Lilypod™ close to your face or lips to drink, and before removing the Base. Allow to cool fully before cleaning the appliance.
7. Allow Lilypod™ to depressurize (all hissing noises are stopped) before attempting to bring the Lilypod™ close to your face or lips to drink, and before removing the Base. Allow pressure to fully dissipate before cleaning the appliance.
8. Do not operate any appliance after the appliance malfunctions, or has been dropped or damaged in any manner. Check to make sure the Body of the Lilypod™ is not cracked or damaged. Contact Consumer Service for examination or replacement.
9. Close supervision is necessary when any appliance is used by or near children.
10. The use of an accessory not evaluated for use with this appliance may cause injuries.
11. Be certain the Brewing Lid is securely in place before brewing coffee or tea in the Lilypod™
12. Do not use in microwave oven outdoors.
13. Never remove the Deflector Clip. The Deflector Clip must remain on the appliance at all times.
14. Do not place on or near a hot gas or electric burner, or in a heated oven.
15. Do not use appliance for other than intended use.
16. Scalding may occur if the Brewing Lid or Deflector Clip is removed during the brewing cycle.

SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY


Additional Important Safeguards

WARNING: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.


1. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. Use water only in the Water Chamber of this appliance! Do not put any other liquids or food products in the Water Chamber. Do not mix or add anything to the water placed in the Water Chamber, except as instructed in the User Maintenance Instructions to clean the appliance.
3. Make sure the Bottom Cover is securely screwed into place (to the stop) before placing into microwave oven to brew.
4. To avoid burns, stay clear of the center hole in the Brewing Lid after brewing. Before removing Brewing Lid to drink, before removing the Bottom Cover, or before cleaning the appliance, make sure it is cool enough to handle.
5. Never use the Lilypod™ on a gas or electric cooktop or on an open flame.
6. Do not leave any metal utensils in the Lilypod™ when placing into microwave oven to brew..
7. All components of the Lilypod™ must be present and assembled in the order shown in Figure 1B on page 4 for safe use of the appliance.
8. If the Lower Pod Holder with metal liner is missing, the unit will not work properly and may cause a fire if the Lilypod™ is placed without water into a working microwave oven.

Your product may vary slightly from illustrations.

Parts Identification

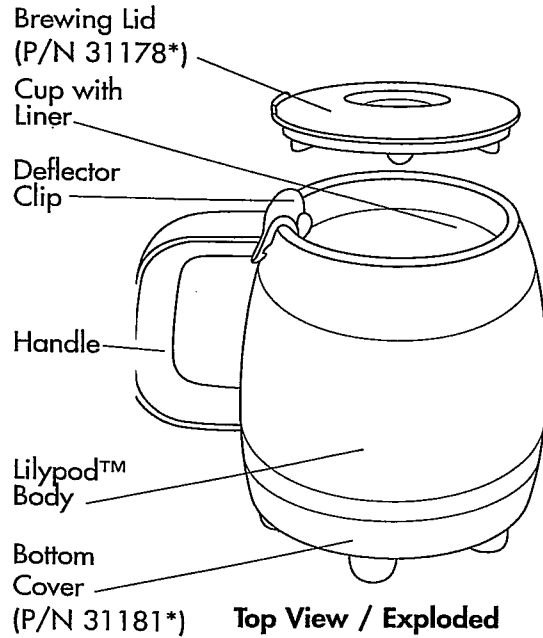

Top View / Exploded
Figure 1A

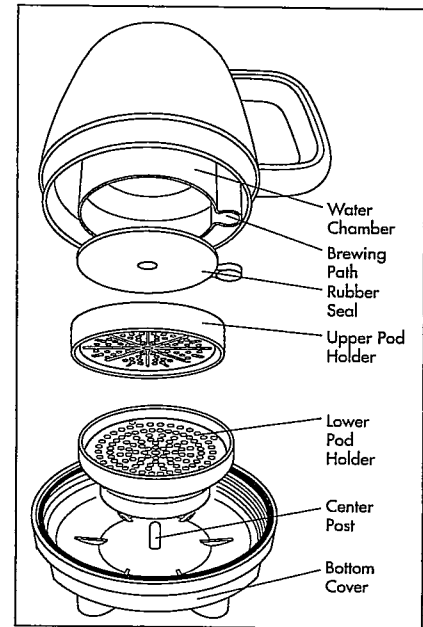

Bottom View / Exploded
Figure 1B

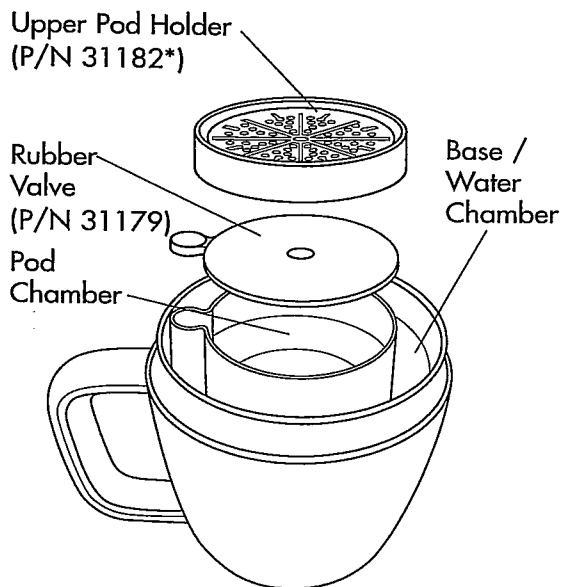


Figure 2
Bottom View / Open

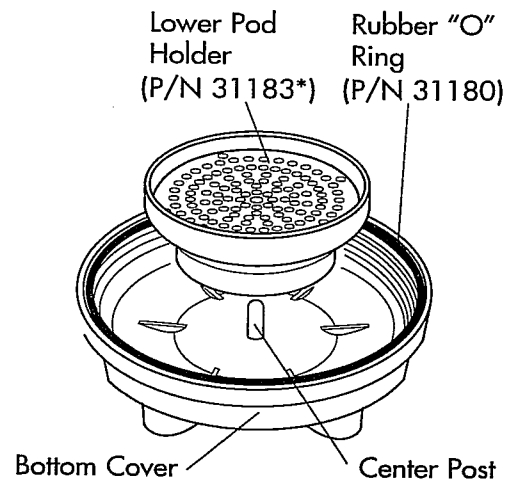


Figure 3

***NOTE:** When ordering replacements parts, please add the suffix letter "K" for KIWI replacement parts; the suffix letter "MG" to the part number for MANGO replacement parts; the suffix letters "B" to the part number for BLUE replacement parts; the suffix letter "R" to the part number for RED replacement parts; the suffix letters "BLK" to the part number for BLACK replacement parts.

Introduction

Before Using For The First Time

1. After unpacking from carton, the inside of your Lilypod™ must be cleaned by an initial brewing of plain water.
2. Following the procedures outlined in the "Instructions For Use" below, fill the Base/Water Chamber to the AMERICAN COFFEE/TEA maximum level. (See Figure 5 on page 6.) **DO NOT ADD ANY COFFEE OR TEA POD.**

NOTE: Brew WATER ONLY for the first time.

3. Follow Brewing Instructions: "To Brew Coffee or Tea" steps 3 and 4.
4. Place the properly assembled Lilypod™ into the center of the microwave oven. Set time for 3-1/2 minutes at full power.
4. After brewing is completed, allow the Lilypod™ to cool for 5 minutes, discard the water. Your Lilypod™ is ready to prepare one mug of delicious fresh coffee, single or double espresso, frothy cappuccino, creamy latte or flavorful brewed tea —at home or in the office in minutes!

Microwave Oven Brewing Times

GENERAL NOTE: Since microwaves vary, it may take some experience with your oven to determine the perfect programming time. Set your microwave oven to the time suggested in this Guide or refer to the Lilypod™ Quick Reference Guide on page 9. The gurgling noise you hear signifies that most of the water has passed through the coffee pod. When this noise peaks and then subsides, the cycle has completed. Stop the oven manually and note elapsed time. Test coffee or tea. If brewing is not completed, adjust in 30-second intervals of additional time. When beverage is brewed exactly to your liking, note the perfect cooking time(s) for future Lilypod™ brewing.

Instructions For Use

To Brew Coffee or Tea

1. Remove the Brewing Lid and turn the Lilypod™ over so that the Base is facing you. Unscrew the Bottom Cover to expose the Water Chamber and Pod holding area. Place a Melitta® javapod™, Cooper's™ teapod™ or coffee pod of your choice into the center of the Pod Chamber. (See Figure 4.)

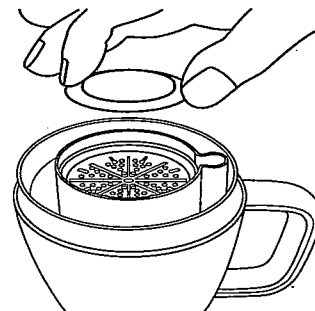


Figure 4

Instructions For Use (Continued)

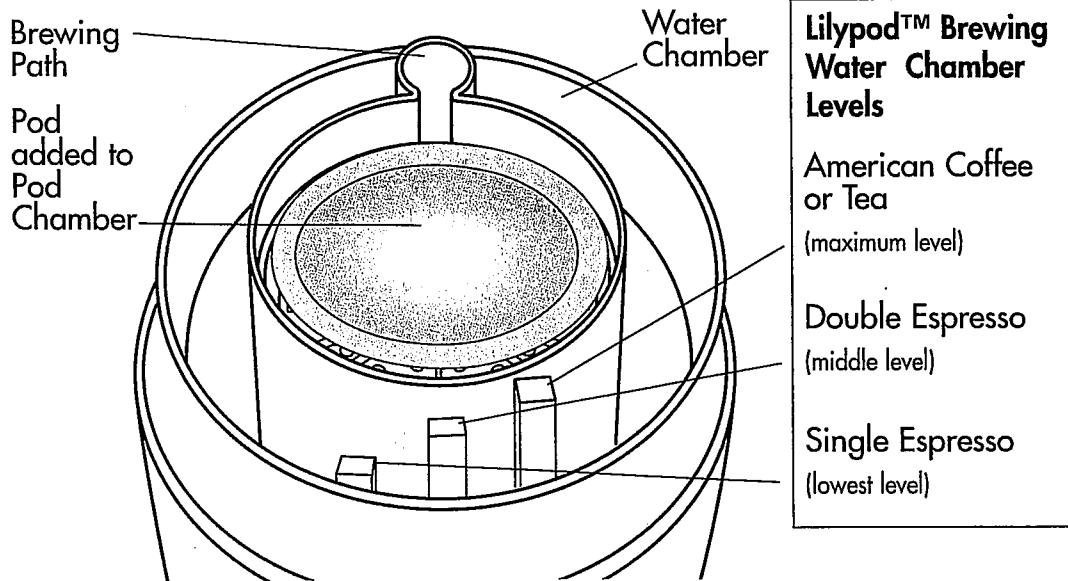


Figure 5

NOTE: TO GET THE FULL INTENSITY OF BREWED TEA, GENTLY PRESS TEA POD ONTO CLEAN WORKING SURFACE AND FLATTEN BEFORE PLACING INTO THE POD CHAMBER. This is to evenly distribute the tea contents.

2. Use fresh, cool water and fill the Lilypod™ Base/Water Chamber to the AMERICAN COFFEE/TEA maximum level. (See Figure 5.)
3. Replace the Bottom Cover and screw it back onto the unit. Make sure the Bottom Cover is securely screwed into place (to the stop).

NOTE: If you are having difficulty threading the Bottom Cover, rotate the Cover counter-clockwise until it sits flat against the bottom of the Mug and then re-thread. Turn clockwise until securely sealed (to the stop).

4. Turn the Lilypod™ upright. Fit the notched edge of the Brewing Lid over the Deflector Clip on top of the Lilypod™ Handle. (See Figure 6.)

WARNING: Never remove the Deflector Clip. The Deflector Clip must remain on the appliance at all times. Always be certain the Brewing Lid is securely in place before brewing in the Lilypod™

5. Place the Lilypod™ into the center of the microwave oven. Set cooking time for 3-1/2 minutes* at full power.

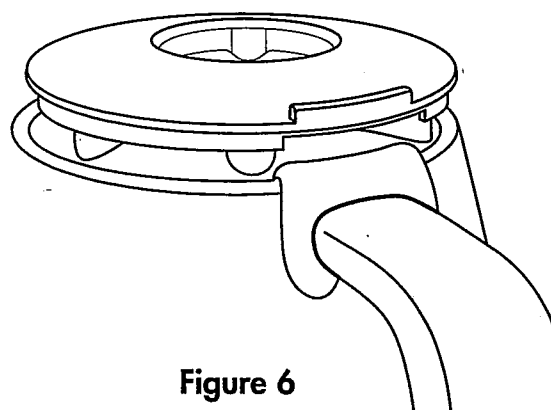


Figure 6

Instructions For Use *(Continued)*

6. After brewing time has elapsed (the gurgling noise peaks and then subsides), allow the Lilypod™ to cool for 1 minute after brewing.

WARNING: To avoid burns, stay clear of the center hole in the Brewing Lid after brewing. Wait until the Lilypod™ is cool enough to handle before removing Brewing Lid to drink.

7. Remove the Brewing Lid, add sugar and cream if desired, and enjoy a delicious cup of fresh brewed coffee or tea.

*Brewing times may vary depending on the wattage of your microwave oven. (Follow instructions described in the section: "Microwave Oven Brewing Times" on page 5.)

To Brew Single or Double Espresso

NOTE: The Lilypod™ is marked to brew either a single espresso or double espresso.

1. Following the procedures previously outlined in the "Instructions For Use," place a Melitta® javapod, or coffee pod of your choice into the Pod Chamber. (See Figure 4 on page 5.)
2. Fill the Base/Water Chamber to the SINGLE ESPRESSO lowest level or to the DOUBLE ESPRESSO middle level with fresh, cool water only. (See Figure 5 on page 6.)
3. Follow Brewing Instructions: "To Brew Coffee or Tea" steps 3 and 4. Place the Lilypod™ in the center of the microwave oven. Set full-power cooking time for 2 minutes* for single espresso or 2-1/2 minutes* for double espresso.
4. After brewing time has elapsed, allow the Lilypod™ to cool for 1 minute after brewing.

WARNING: To avoid burns, stay clear of the center hole in the Brewing Lid after brewing. Wait until the Lilypod™ is cool enough to handle before removing Brewing Lid to drink.

5. Remove the Brewing Lid. Add sugar if desired, relax and enjoy a delicious cup of single or double espresso.

*Brewing times may vary depending on the wattage of your microwave oven. (Follow instructions described in the section: "Microwave Oven Brewing Times" on page 5.)

To Brew Cappuccino

(SINGLE ESPRESSO WITH FROTHED MILK)

1. Following the procedures previously outlined in the "Instructions For Use," place a Melitta® javapod, or coffee pod of your choice into the Pod Chamber. (See Figure 4 on page 5.)
2. Use cool water to fill the Base/Water Chamber to the SINGLE ESPRESSO lowest level.
3. Replace the Bottom Cover and screw it back onto the unit. Make sure the Bottom Cover is securely screwed into place (to the stop).

NOTE: If you are having difficulty threading the Bottom Cover, rotate the Cover counter-clockwise until it sits flat against the bottom of the Mug and then re-thread. Turn clockwise until securely sealed (to the stop).

4. Turn the Lilypod™ upright. Add 1/4 cup skim milk to the Cup with Liner. (**NOTE: Skim milk is preferred for frothing.**)

5. Fit the notched edge of the Brewing Lid over the Deflector Clip on top of the Lilypod™ Handle. (See Figure 6 on page 6.) Using a milk frother, froth the milk until the foam reaches the top of the Liner. (See Figure 7.) **Make sure the foam DOES NOT EXCEED the metal edge of the Liner.**

NOTE: In some microwave ovens there is a tendency for the foam to over-expand. If you notice that the milk foam has spilled over, froth milk only half-way to the metal edge. Due to the differences in microwave ovens, some experimentation may be necessary to determine the perfect frothing level.

6. Place Lilypod™ into the center of the microwave oven. Set cooking time for 2 minutes* at full power. The fresh espresso will brew and then pour into the frothed milk as the cycle completes.
7. After brewing time has elapsed, allow the Lilypod™ to cool for 1 minute after brewing.

WARNING: To avoid burns, stay clear of the center hole in the Brewing Lid after brewing. Wait until the Lilypod™ is cool enough to handle before removing Brewing Lid to drink.

8. Remove the Brewing Lid and enjoy a thick, rich cappuccino. Add sugar if desired. Sprinkle with cinnamon or chocolate for a special treat.

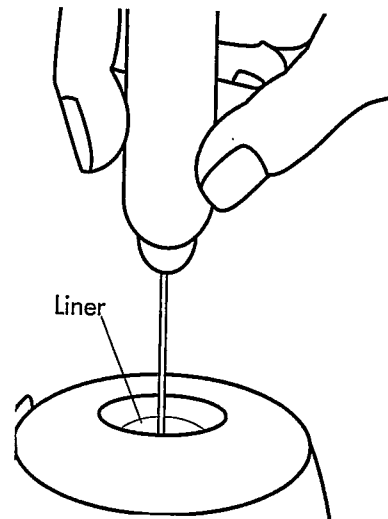


Figure 7

*Brewing times may vary depending on the wattage of your microwave oven. (Follow instructions described in the section: "Microwave Oven Brewing Times" on page 5.)

To Brew Latte

(SINGLE ESPRESSO WITH STEAMED MILK)

1. Following the procedures previously outlined in the "Instructions For Use," place a Melitta® javapod, or coffee pod of your choice into the Pod Chamber. (See Figure 4 on page 5.)
2. Use cool water to fill the Base/Water Chamber to the SINGLE ESPRESSO lowest level. (See Figure 5 on page 6.)
3. Replace the Bottom Cover and screw it back onto the unit. Make sure the Bottom Cover is securely screwed into place (to the stop).

NOTE: If you are having difficulty threading the Bottom Cover, rotate the Cover counter-clockwise until it sits flat against the bottom of the Mug and then re-thread. Turn clockwise until securely sealed (to the stop).

4. Turn the Lilypod™ upright. Pour 1/4 cup milk (almost to the top) into the Cup with Liner. (You may adjust to personal preference.)
5. Fit the notched edge of the Brewing Lid over the Deflector Clip on top of the Lilypod™ Handle. (See Figure 6 on page 6.)
6. Place Lilypod™ into the center of the microwave oven. Set cooking time for 2 minutes* at full power. The milk will reach a moderate warm temperature, while the hot espresso will pour into it as the cycle completes.


NOTE: If your milk is very cold or you would prefer the latte slightly warmer, increase microwave cook time 30 seconds.

7. After brewing time has elapsed, allow the Lilypod™ to cool for 1 minute after brewing.

WARNING: To avoid burns, stay clear of the center hole in the Brewing Lid after brewing. Wait until the Lilypod™ is cool enough to handle before removing Brewing Lid to drink.

8. Remove the Brewing Lid and enjoy.

*Brewing times may vary depending on the wattage of your microwave oven. (Follow instructions described in the section: "Microwave Oven Brewing Times" on page 5.)

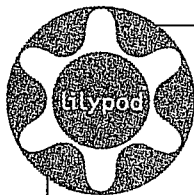

Lilypod™ Quick Reference Guide

	Water Chamber Levels	Water (ounces)	Microwave Oven Cook Time (Minutes) @ 100% Power	Cool Down (Minutes)
Coffee	Maximum	8	3-1/2	1
Tea	Maximum	8	3-1/2	1
Espresso	Lowest	3	2	1
Double Espresso	Middle	5	2-1/2	1
Cappuccino	Lowest	3	2	1
Latte	Lowest	3	2 to 2-1/2	1

User Maintenance Instructions

Disassembly/Cleaning Instructions

NOTE: Always allow the Lilypod™ to cool down before removing the Bottom Cover or before cleaning the appliance.

1. Working over a sink, empty the contents of the Cup with Liner into the sink.
2. Turn the Lilypod™ Body over and unscrew the Bottom Cover. Remove and discard the used pod.
3. **Rinse the Lower Pod Holder and Bottom Cover in running water after every use.** If you are preparing coffee and tea alternately, it may be necessary to clean the Lower Pod Holder to prevent the coffee taste from infiltrating your tea. The Lower Pod Holder may be removed from the Bottom Cover by sliding it from the center post. Using a small nylon-bristle kitchen brush, gently brush the Upper and Lower Pod Holders to remove any coffee or tea particles.
4. After preparing coffee, tea, latte or cappuccino with milk products or sugar, it is very important to clean the Liner with warm soapy water after use. Rinse thoroughly. If necessary, dry with a soft, clean cloth or paper towel to remove any remaining milk or soap residue.
5. When properly maintained, your Lilypod™ requires little care. After 8 to 12 weeks of constant use, make sure that the Brewing Path is clear and unobstructed by foreign objects. Test by removing both the Upper Pod Holder and Rubber Valve from the unit. As the fit is snug, it may be necessary to use a tool such as the blunt end of a fork or spoon to lift the Upper Pod Holder out of its Chamber and then to gently pry the Rubber Valve (see Figure 2 on page 4) up and out from its center. ***Be careful not to pierce the soft rubber.***
6. Holding the Lilypod™ Brewing Path under running water, check to see that water flows easily through the unit. If necessary, clean using a small utility brush.
7. Your Lilypod™ is dishwasher-safe. After disassembly, place Brewing Lid, Upper Pod Holder, Lower Pod Holder, and Bottom Cover in dishwasher basket. Place Lilypod™ sideways into the top rack of the dishwasher and wash normally. If you prefer, the Lilypod™ can be hand washed with mild detergent and rinsed thoroughly. It is not necessary to dry before next use.

WARNING: To ensure proper Lilypod™ operation, after cleaning, all components of the Lilypod™ must be assembled in their original positions as shown in Figure 1B on page 4. Make sure the Rubber Valve lies flat against the bottom of the unit. The Upper Pod Holder is reversible and will snap easily into place. Please follow previously described assembly instructions and illustrations carefully.

IMPORTANT NOTICE

*If any parts are missing or defective,
DO NOT return this product.*

Please call our Customer Service Department for assistance.

800-841-1628 Monday - Friday 9:00 am - 5:00 pm CST

Thank You

LIMITED ONE YEAR WARRANTY

Warranty: This Melitta® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any unit which has been used in violation of written instructions furnished with the product, or to units which have been altered or modified, or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1-800-841-1628 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number MEMW18K (kiwi), MEMW18MG (mango), MEMW18BLK (black), MEMW18R (red), MEMW18B (blue), MEMW36K (kiwi), MEMW36MG (mango), or MEMW36MGK (mango/kiwi) when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1-800-841-1628.

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$ 8.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For products purchased in the USA, but used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return appliance, ship to:

Attn: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call or email:

Salton, Inc.
P.O. Box 6916
Columbia, MO 65205-6916
1-800-841-1628
Email: Salton@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and in no event shall Salton, Inc. be liable for any incidental or consequential damages, losses or expenses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products:
Visit our website: www.eSalton.com

© 2004 Salton, Inc.
All Rights Reserved

P/N 61622
Printed in China