


# IMPORTANT SAFETY INFORMATION


**FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE COVER OR BLADE HOLDER TO BECOME LOOSE DURING OPERATION.**

1. With empty processing bowl properly locked in place on the power base, place the BLADE HOLDER STEM on the drive shaft. (see Fig. 1)

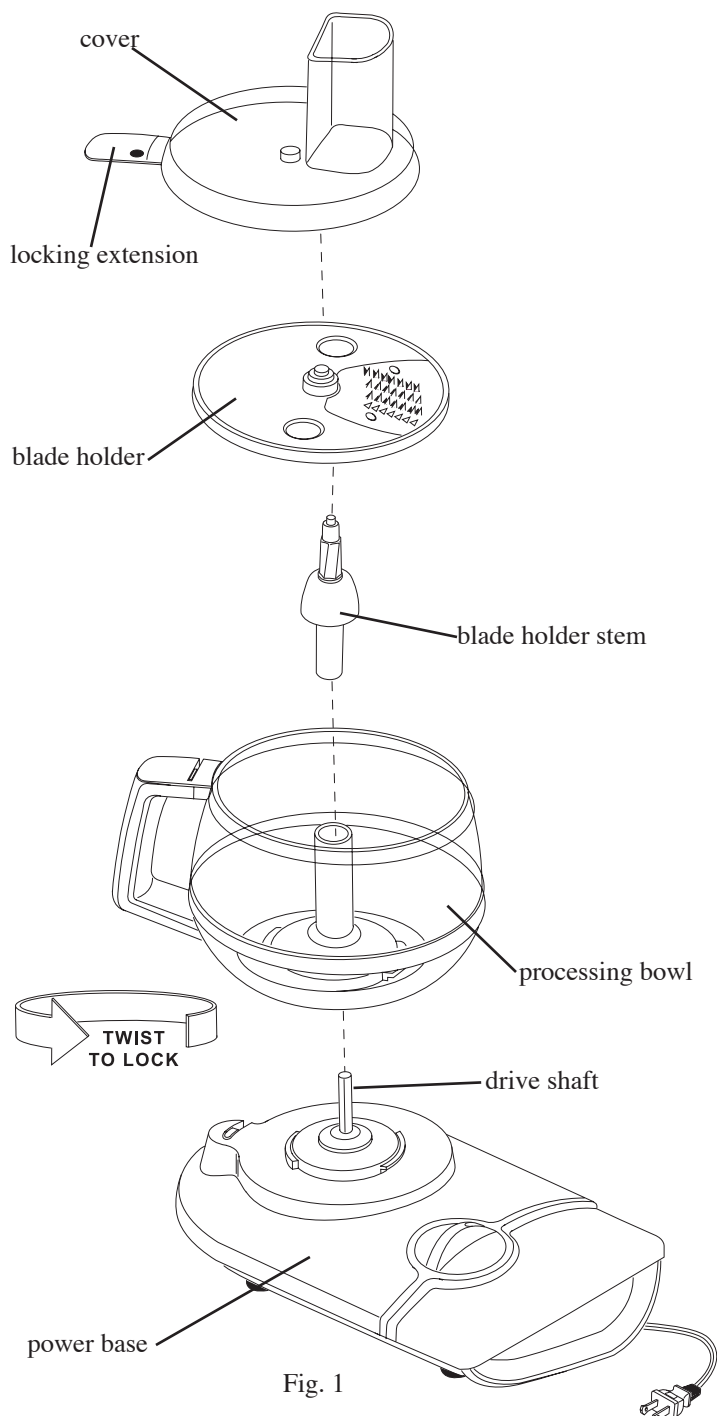


2. Determine which blade attachment is to be used.

Insert the appropriate BLADE into the top side of the BLADE HOLDER by pressing the tab on the BLADE, making sure it snaps into place. (see Fig. 2)

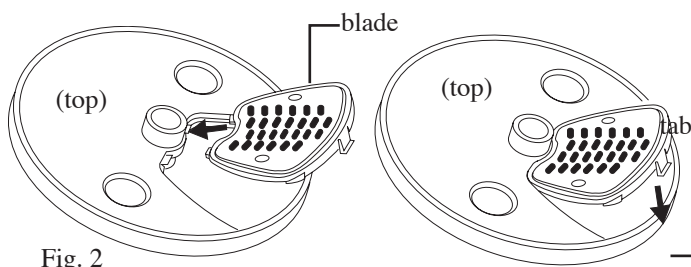

3. Assemble BLADE HOLDER to the BLADE HOLDER STEM. Make sure to turn clockwise and press the BLADE HOLDER down so that it is **FULLY** seated onto the BLADE HOLDER STEM. (see Fig. 3)



When the BLADE HOLDER is fully seated it should be approximately 5/8" below the top of the processing bowl. (see Fig. 5)

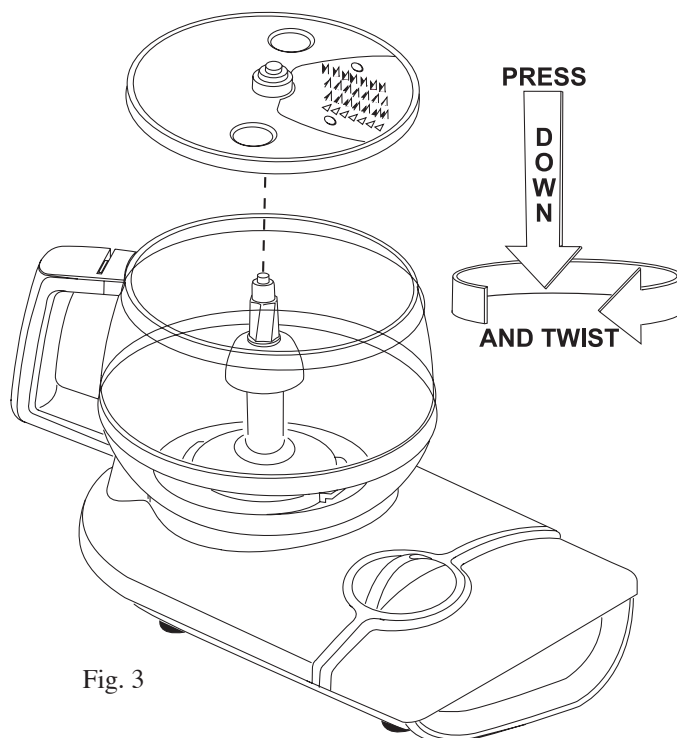


(over please)

4. Assemble the cover making sure that the LOCKING TABS are properly engaged, and then turn the cover to engage the LOCKING EXTENSION to the switch on the handle (see Fig. 4)

Check the cover to assure that ALL FOUR ( 4 ) LOCKING TABS are locked PRIOR to starting the unit.  
(see Fig. 5)

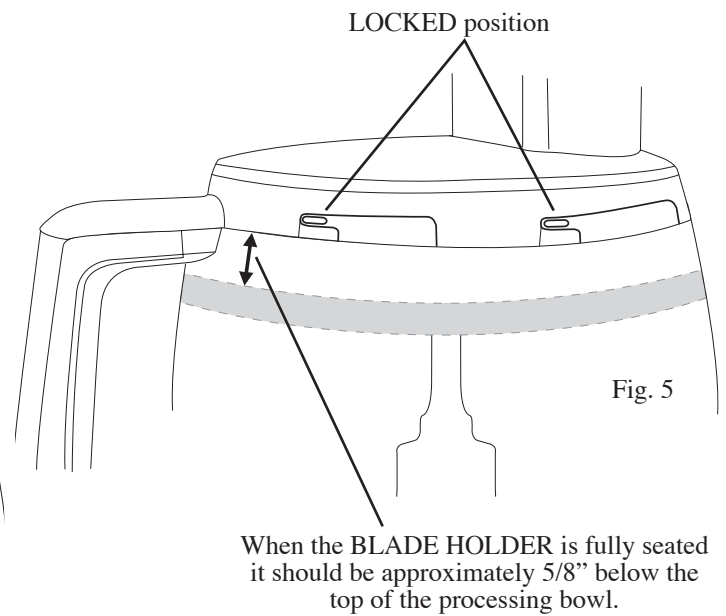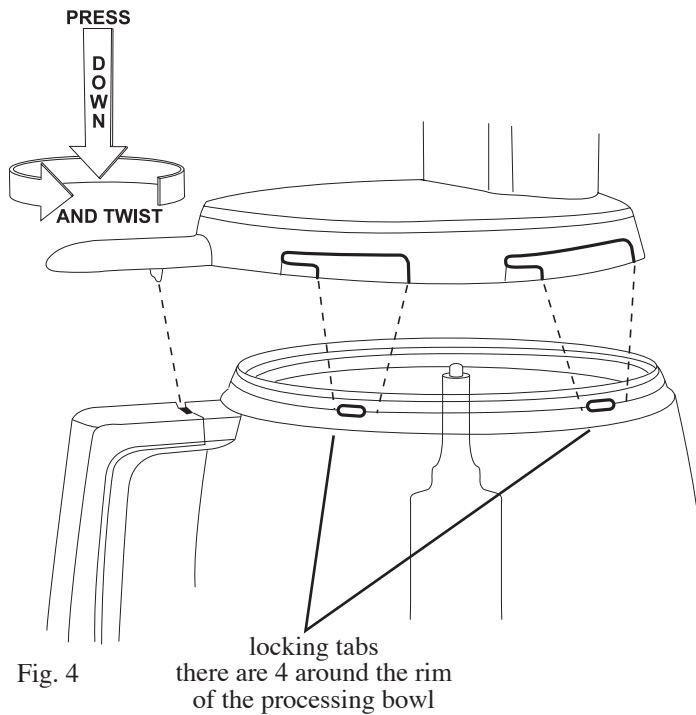

**CAUTION:** To remove or replace BLADE from the BLADE HOLDER push up from the bottom.  
(see Fig. 6)

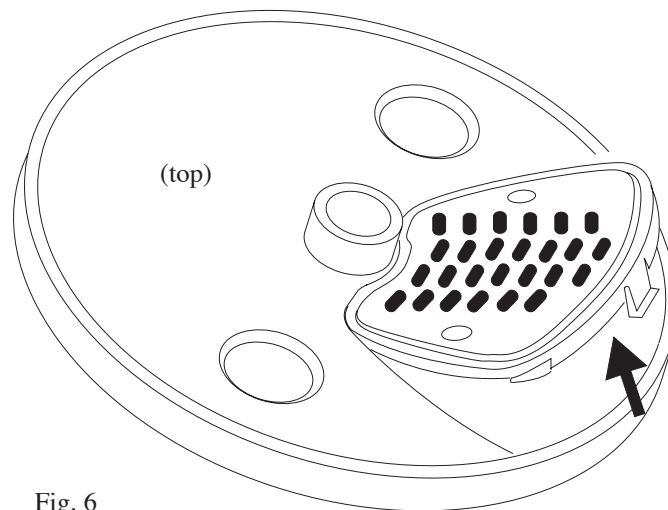

***For more detailed safety and operating instructions please thoroughly read the owner's manual for this food processor.***