


OWNER'S MANUAL
MODEL No. JC-3

VITAMIN BAR™

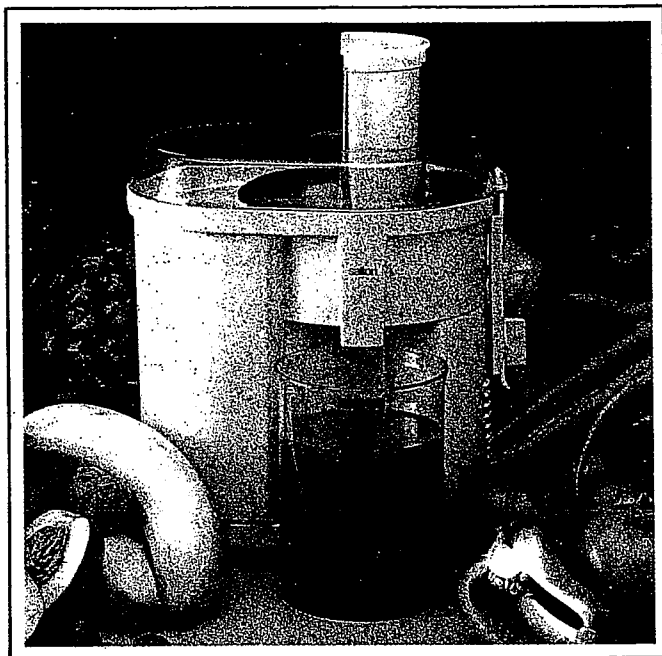

salton®

Get a taste of the good life with Salton.


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions carefully.
2. To protect against risk of electrical shock, do not immerse motor base in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Always make sure lid is clamped securely in place before motor is turned on. Do not unfasten lid latches while juicer is in operation.
7. Never operate without pulp collector in place.
8. Be sure to turn switch to "OFF" position after each use of your VITAMIN BAR™. Make sure the motor stops completely before disassembling.
9. Do not put your fingers or other objects into the VITAMIN BAR™ opening while it is operating. Never feed food by hand — always use the Food Pusher. If food becomes lodged in opening, use Food Pusher to push it down. When this method is not possible, turn the motor off and disassemble juicer to remove the remaining food.
10. Do not operate any appliance with a damaged cord set or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to Salton/MAXIM for examination, repair or electrical mechanical adjustment.
11. The use of attachments not recommended by Salton/MAXIM may cause fire, electrical shock, or injury.
12. Do not use outdoors.
13. Do not let cord hang over edge of table or counter or touch hot surfaces.
14. Do not leave the VITAMIN BAR™ unattended while it is operating.
15. Blades are sharp. Handle carefully.

SAVE THESE INSTRUCTIONS

Description of Parts

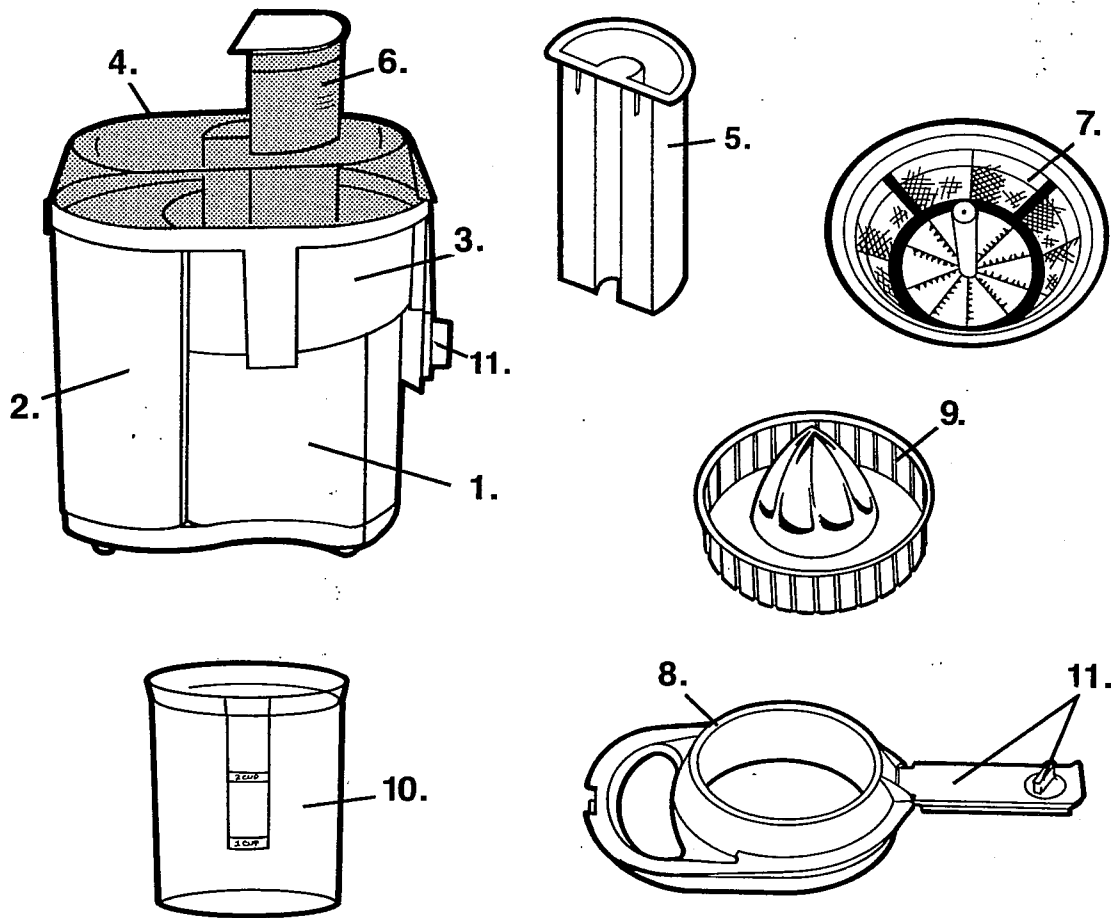

- | | | |
|-------------------|---------------------|-------------------------------------|
| 1. Motor base | 5. Food pusher | 9. Citrus juicer cone |
| 2. Pulp collector | 6. Feed tube | 10. Juicer cup |
| 3. Housing unit | 7. Extractor filter | 11. Locking clip with On/Off switch |
| 4. Lid | 8. Splash guard | |

Disassembling Your VITAMIN BAR™

1. Turn the switch to the unlock position, pull the locking clip off and release the lid.
2. Remove the extractor filter by pulling the center pillar in an upward direction.
3. Remove the housing unit and deep pulp collector by turning clockwise and pulling in an upward direction.

Assembling for Juicing Vegetables and Fruits

1. Reverse the order of the disassembly procedures.
2. Insert the plug into a 120V electrical outlet.

Assembling for Citrus Juicing

1. Place the housing unit and deep pulp collector on the motor base.
2. Place the citrus juicer cone in the housing unit.
3. Place the splash guard over the top of the citrus juicer cone and press it down.
4. Press the locking clip in and turn it to the locked position.
5. Insert the plug into an 120V electrical outlet.

How to Juice Vegetables and Fruits Other than Citrus

1. Always choose fresh fruits and vegetables, (those which have been stored will have dried out.)

Prepare the food:

- Trim away any brown spots.
 - Wash all fruits and vegetables well to remove pesticides, dust, etc.
 - Scrub carrots with a brush to remove all dirt.
 - Remove skin from thick-skinned fruits such as rock-melon and pineapple.
 - Remove seeds from stone fruits such as cherries, peaches etc.
 - Fruits with small seeds such as apples, need not be cored.
 - Cut fruits into pieces which fit comfortably into the feed tube. Do not cut smaller than necessary.
 - Leafy vegetables and herbs should be rolled tightly.
2. Position the juice cup under the spout.
 3. Turn the motor ON by turning the switch to the on-position on the right. ***Be certain this appliance is properly assembled before operating.***
 4. Feed the food into the feed tube. Use the pusher to guide the food down, gentle pressure only. Exerting excess pressure will cause less juice to be extracted from the food and larger pieces of food to remain unprocessed.

How to Juice Vegetables and Fruits Other than Citrus *(continued)*

5. Juice will flow into the cup and pulp will fall into the pulp collector. The clear cover allows you to see when the pulp collector is full. If it fills before juicing is complete, interrupt the process to empty it. Turn the motor off, turn power off and remove plug. Disassemble unit, empty pulp. Then reassemble.

Juicing Citrus

1. Place juice cup under spout. Cut fruits in half. Turn the juicer on by turning the switch to the on-position on the right.
2. Place cut edge of fruit on top of the citrus juicer cone. Exert gentle pressure to hold fruit in position.
3. When pulp inside the peel is quite dry, discard and turn unit OFF or continue as desired.

User Maintenance Instructions

1. Before cleaning, unplug the appliance from outlet and then totally disassemble.
2. Wash all removable parts in warm, soapy water, rinse and dry — citrus juicer cone and extractor filter are top-rack dishwasher safe.
3. Discoloration of the plastic may be caused by some vegetables, such as carrots. Reduce this by washing immediately after use. To remove any discoloration, use a small amount of a non-abrasive cream cleanser on a cloth and rub gently, then rinse well and dry.
4. Do not use steel wool, scouring pads or abrasive cleaners.
5. The motor base may be wiped with a damp cloth.
6. The motor base must never be immersed in water or any other liquid.
7. THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.
8. No user serviceable parts inside; see additional instructions in "Service and Repair" section.

LIMITED WARRANTY

Machines distributed by Salton/MAXIM Housewares Inc. are warranted for one year from date of purchase against defects in workmanship and material. During that period these defects will be repaired or the product will be replaced at Salton/MAXIM's option, without charge. This warranty covers normal consumer usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, neglect, installation, commercial use or improper maintenance. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares Inc. or to units which have been altered or modified without authorization of Salton/MAXIM Housewares Inc. or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Service and Repair

DO NOT attempt to repair your SALTON JC-3 VITAMIN BAR™. Should the appliance malfunction, you should first call toll free 1-800-233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER CUSTOMER SERVICE stating that you are a consumer with a problem. If the problem cannot be resolved, you will be asked to return the machine to the factory for repair. Under no circumstances should you attempt to open the housing and repair the machine. Should you do this, your warranty will be voided.

To Return for Service

1. Securely package and return the product, PREPAID to: Salton/MAXIM Housewares Inc. Repair Department, 550 Business Center Drive, Mt. Prospect, IL 60056
2. Be sure to enclose:
 - a. Your name, address and phone number.
 - b. The date of purchase (or receipt as a gift).
 - c. An explanation of the malfunction or reason for return.
 - d. Eight dollars (\$8.00) Check or Money Order payable to Salton/MAXIM Housewares Inc. for return postage and handling.
 - e. To insure prompt "In-Warranty" service, be sure to include proof of date of purchase.

We recommend you take the necessary precaution of insuring the parcel.

3. **Toll Free** Number: 1-800-233-9054.



salton®