


**OWNER'S MANUAL**  
**MODEL No. BT-1**

# Hair & Beard Trimmer

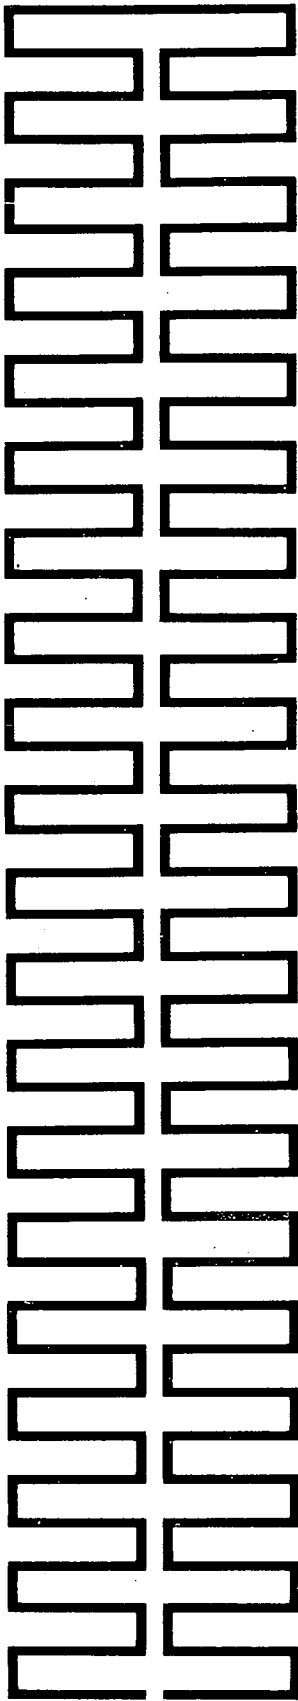

**salton<sup>®</sup>**

*Get a taste of the good life with Salton.*


# IMPORTANT SAFEGUARDS

1. Read all instructions carefully.
2. Use the Hair & Beard Trimmer only for its intended use as described in the Owner's Manual.
3. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
4. **WARNING!** *To avoid injury, do not use the Hair & Beard Trimmer if the blade is broken or damaged in any way.*
5. **WARNING!** *To avoid injury, never use the Hair & Beard Trimmer to trim ear hair, nose hair, eyebrows or eyelashes.*
6. **WARNING!** *To avoid irritation that could lead to injury, do not use the Hair & Beard Trimmer when you have moles, skin tags, pimples or other blemishes.*
7. **WARNING!** *To avoid injury, never clean or remove blades or comb attachment while the Hair & Beard Trimmer is turned on.*
8. **CAUTION:** *To avoid damaging the blades, do not allow the blades to come into contact with hard objects and do not apply pressure to the blades.*
9. **CAUTION:** *Do not use while bathing or in the shower. Do not immerse the unit in water or other liquid.*
10. Use alkaline batteries only.
11. The usual precautions should be taken while using the scissors. Keep out of the reach of children.

## SAVE THESE INSTRUCTIONS

# Getting to Know Your BT-1 Hair & Beard Trimmer

Before using your Hair & Beard Trimmer for the first time, become familiar with all of the parts.

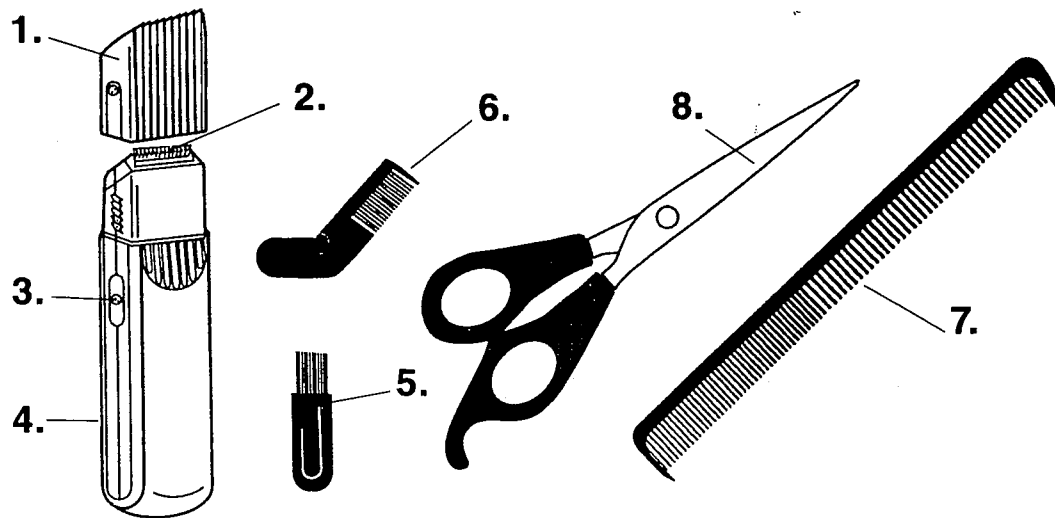

- |                    |                   |
|--------------------|-------------------|
| 1. Comb Attachment | 5. Cleaning Brush |
| 2. Cutter Blade    | 6. Mustache Comb  |
| 3. On/Off Switch   | 7. Barber Comb    |
| 4. Battery Cover   | 8. Scissors       |

## Operating Instructions

### Battery Installation

1. Remove the battery cover by pressing in direction indicated by arrow. Place two AA alkaline batteries in the positions indicated inside the battery compartment.

Make sure the batteries are inserted properly, otherwise the appliance won't work.

2. Replace the battery case.

# Operating Instructions *(continued)*

## How to Use Your BT-1 Hair & Beard Trimmer

1. Adjust the comb attachment to the desired mustache or hair length you want to trim.
2. Set the comb side of the attachment against the mustache or hair. Switch on the appliance and start trimming.
3. After trimming, switch the appliance off.
4. For shaping your beard, sideburns or your neck hairs, remove the comb attachment.
5. Switch on the appliance and begin shaping.
6. After shaping, switch off your Hair & Beard Trimmer.

---

# User Maintenance Instructions

1. This appliance is for household use only.
2. Make sure the appliance is switched off before cleaning.
3. Push the cutter blade away from the main body and brush it out with the cleaning brush.
4. Then replace the cutter blade back into its original position.
5. Clean the unit with a damp cloth. Do not use abrasive cleaners as these might scratch the surface.
6. Avoid dropping the appliance and keep away from water, heat source, flame and chemicals.
7. Remove the batteries from the unit if it will not be used for an extended period of time.

## LIMITED WARRANTY

Products distributed by Salton/MAXIM Housewares, Inc. are warranted for one year from date of purchase against defects in workmanship and material. During that period these defects will be repaired or the product will be replaced at Salton/MAXIM's option, without charge. This warranty covers normal consumer usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, neglect, installation, commercial use or improper maintenance. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares, Inc., or to units which have been altered or modified without authorization of Salton/MAXIM Housewares, Inc., or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible. This warranty does not cover damage which results from unauthorized repairs.

## Service and Repair

DO NOT attempt to repair your SALTON® BT-1 Hair & Beard Trimmer. Attempts to repair this appliance yourself may render it dangerous to use. Should the appliance malfunction, you should first call our CONSUMER SERVICE DEPARTMENT toll free at 1-800-233-9054 Mon.-Fri. between the hours of 9:00 am and 5:00 pm Central Standard Time, stating that you are a consumer with a problem. If the problem cannot be resolved, you will be asked to return the appliance to the factory for repair. Under no circumstances should you attempt to open the housing and repair the appliance. Should you do this, your warranty will be voided.

## To Return for Service

1. Securely package and return the product, PREPAID to:  
Salton/MAXIM Housewares, Inc., Repair Department  
550 Business Center Drive, Mt. Prospect, IL 60056
2. Be sure to enclose:
  - a. Your name, address and phone number.
  - b. The date of purchase (or receipt as a gift).
  - c. An explanation of the malfunction or reason for return.
  - d. Eight dollars (\$8.00) Check or Money Order payable to Salton/MAXIM Housewares, Inc. for return postage and handling.
  - e. To insure prompt "In-Warranty" service, be sure to include proof of date of purchase.

We recommend you take the necessary precaution of insuring the parcel.
3. **Toll Free** Number: 1-800-233-9054.



**salton®**

