

# scünci<sup>®</sup>

## PROFESSIONAL<sup>™</sup>



1000 watt  
hot air styler  
seven interchangeable  
styling attachments

---

Model No. S73024  
Instructions and Warranty

# IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING.**

**KEEP AWAY FROM WATER.**

**DANGER:** As with most electrical appliances, electrical parts are electrically live even when the switch is in the **OFF** position.

To reduce the risk of death by electrical shock:

1. Always “unplug” the appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or any other liquid.
5. If appliance falls into water, “unplug it” immediately. Do not reach into the water.

**WARNING:** TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE OR INJURY TO PERSONS:

1. Do not leave appliance unattended while it is operating or plugged in.
2. Close supervision is necessary when this appliance is used by, on or near children or invalids.
3. Use this appliance only for its intended use as described in this manual. Do not use Attachments that are not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged in any manner or if it has been dropped into water. Take appliance to the nearest authorized service facility for examination and repair.
5. Keep the cord away from hot or heated surfaces. Do not wrap the cord around the appliance.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed, pillow or couch where the air passages may be blocked. Keep air openings free of lint, hair, etc.
7. Never use while sleeping or while drowsy.
8. Never drop or insert any object into any opening.
9. Do not use outdoors or operate when aerosol (spray) products are being used. Do not operate when oxygen is being administered.
10. Do not direct hot air toward eyes or other heat-sensitive areas.

11. Attachments will become hot during use. Allow them to cool before handling.
12. Do not place Hair Styler on any surface while it is operating.
13. While using the appliance, keep your hair out of it.  
Keep hair away from Air Intake Grill.
14. Do not operate with a voltage converter.
15. Do not use an extension cord with this appliance.

# **SAVE THESE INSTRUCTIONS**

**THIS PRODUCT IS FOR HOUSEHOLD USE ONLY**

## **ADDITIONAL IMPORTANT SAFEGUARDS**

1. Never block Air Intake Grill, as this will cause the unit to overheat. Should this happen, a built-in safety system will operate, and the unit will shut off automatically. At this point, slide the Speed Switch to **OFF** position and wait a while before attempting to operate appliance again. If the unit fails to operate after 10 minutes, it may indicate that the appliance has sustained extensive internal damage.
2. Do not try to repair it yourself. Refer to a qualified appliance repair technician.
3. This product has been designed to operate safely when held by the Handle. When operating, do not hold it by the AC power cord. Avoid contact with the hot Attachment.
4. Never store Hair Styler or Attachments while the Hair Styler is still operating or when hot from use. Unplug appliance from outlet and allow to cool before attempting to place Attachments into the Carrying Case.
5. To extend the life of your Hair Styler, it is advisable to switch it to **LO** setting for a few seconds before sliding the Speed Switch to **OFF** position.

### **Polarized Plug**

This appliance has a polarized plug (one blade is wider than the other is.) To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

 
### **Electric Power**

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.






# Getting to Know Your 1000 Watt Hot Air Styler


---

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

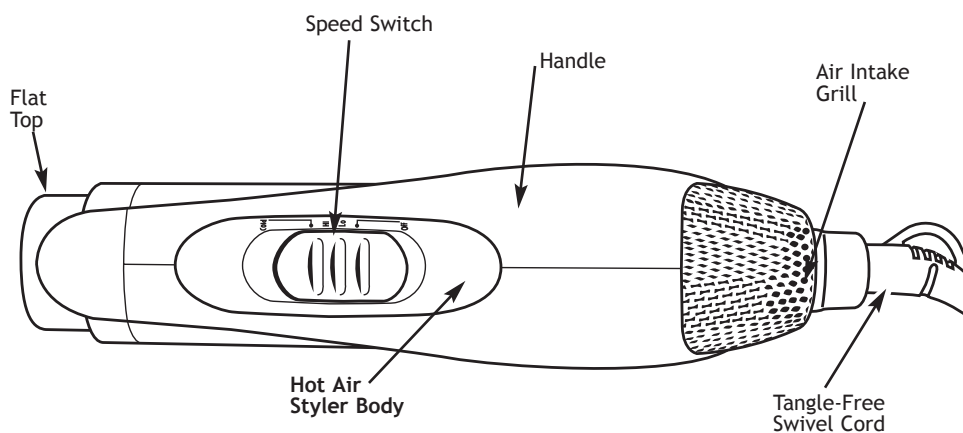

Carrying Case  
P/N 50711

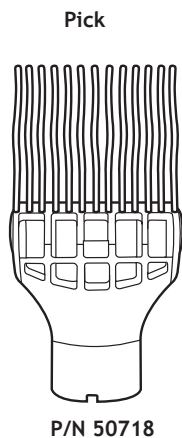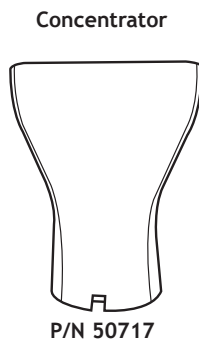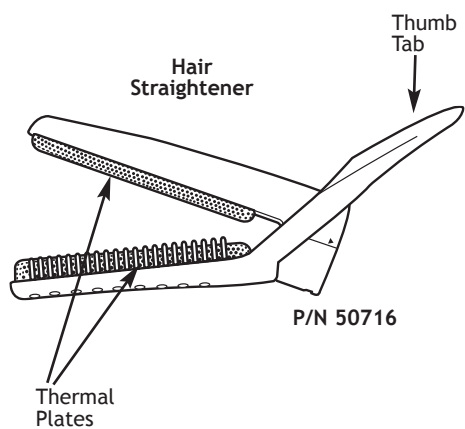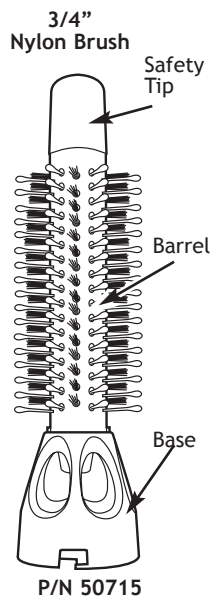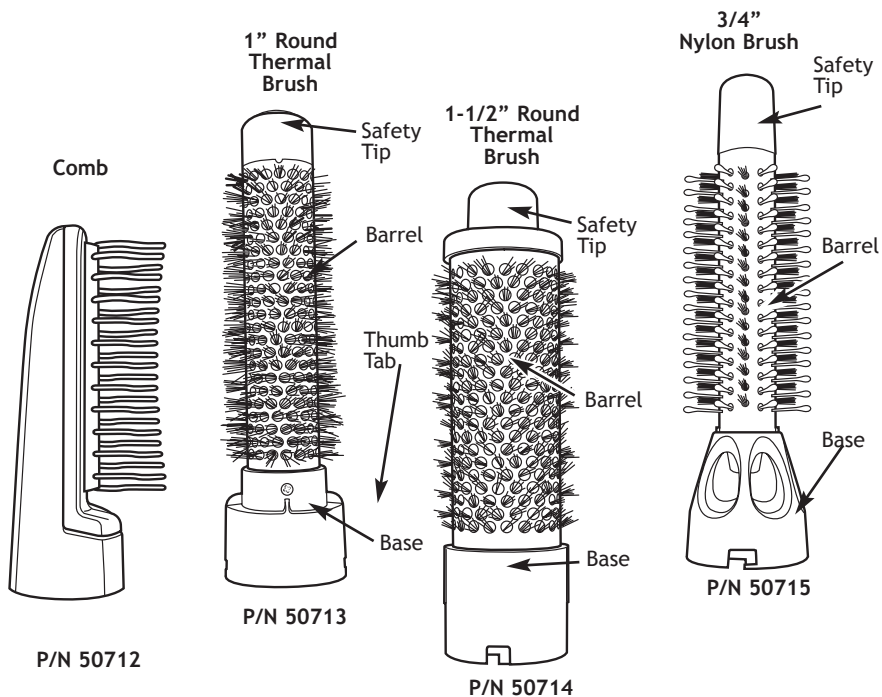     

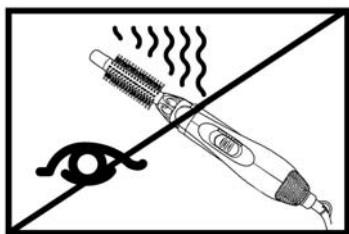 


**CAUTION: THIS PRODUCT CAN BURN EYES**



**KEEP AWAY FROM CHILDREN**
 
## CHECK ALCI SAFETY FEATURE EVERY TIME YOU USE THE HOT AIR STYLER

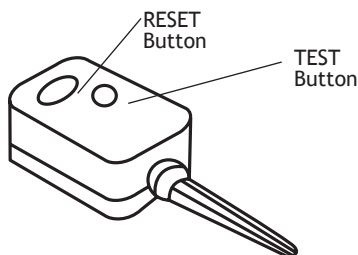

ALCI (Appliance Leakage  
Circuit Interrupter)

This Hair Styler is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as accidental immersion in water. To make sure the ALCI is functioning properly, perform the following test:

1. Plug the appliance into electrical outlet. Press the RESET Button on the ALCI Safety Device.

2. Press the TEST Button.
3. The Hair Styler will immediately stop, you will hear an audible click. The RESET Button will pop out. This verifies that the Safety Device is operating properly.
4. Press the RESET Button to reactivate the ALCI Safety Device and use your Hair Styler.
5. If the ALCI is not functioning properly, call Consumer Service.

**NOTE:** Be sure to repeat test every time you use Hair Styler to confirm ALCI is operational.

Should this appliance encounter an electrical shock hazard at any time, it will immediately shut off. To restore power, the RESET Button on the ALCI Safety Device must be pressed to reactivate the circuit. If the appliance is immersed in water, do not attempt to reset the ALCI Safety Device. Contact Consumer Service.



**G**ROUND

**F**AULT

**C**IRCUIT


**I**NTERRUPTERS

***...can save a life***
 
# IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI NOW!

Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet, or a permanent unit installed by your electrician. The National Electrical Code now requires GFCI's in the bathroom, garage, and outdoor outlets of all new homes.

## **WHY DO YOU NEED A GFCI?**

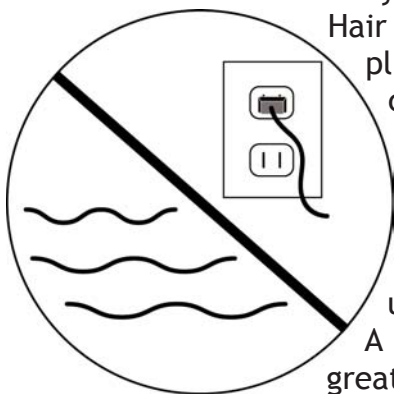

Electricity and water don't mix! If your Hair Dryer falls in water while it is plugged in, the electric shock can kill you even if the switch is in the **OFF** position!

A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

**A GFCI CAN SAVE YOUR LIFE! COMPARED TO THAT,  
THE PRICE IS SMALL! Don't wait, install one now!**

GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow.

## HOW TO USE YOUR HOT AIR STYLER

 
**LO / HI SETTING:** For initial hair drying and for most hair styling/setting procedures and hair types.

**COLD SETTING:** For finishing your hairstyle or for styling fragile, damaged, over-processed or permed hair.

## USING THE ATTACHMENTS

Choose the particular Styling Attachment you wish to style your hair with, depending on the effect you wish to achieve.


**CAUTION: NEVER USE THE HOT AIR STYLER BODY WITHOUT FIRST PROPERLY ASSEMBLING UNIT WITH THE ATTACHMENT OF YOUR CHOICE.**

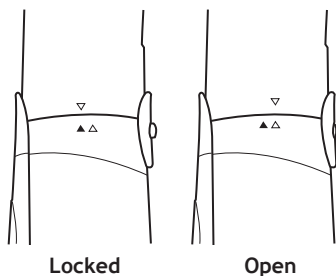

## Removing and Replacing Attachments

The Hot Air Styler and Attachment should be completely cooled; the Speed Switch should be in the **OFF** position before removing or replacing Attachments.
 
## Attachment Diagram

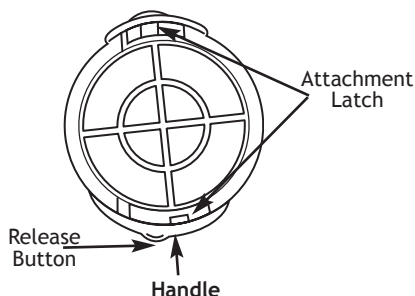

## Replacing Styling Attachments

On the inside of each Attachment there are two notches and outside there is a silver triangle to help with placement. Align the silver triangle of the Attachment with the silver "Open" triangle on the Handle while sliding the notches on the Attachment onto the Attachment Latches on the unit's Handle, and slide into place. Then turn until you hear a click signifying the Attachment is secure. Pull up on the Attachment to make sure it is securely attached.

## Removing Styling Attachments

While pressing the Attachment Release Button, turn the Attachment off Air Styler with your other hand.

**CAUTION:** Thermal Attachments will become hot during and after use. Handle Attachment by the plastic Base or Safety Tip to avoid burns.

## STYLING TIPS

Use your Hot Air Styler as a styling/finishing tool. It may be used on dry hair or hair that has been towel dried thoroughly. **Hair must be tangle-free prior to using the Hot Air Styler.**

### Styling Times

Styling time will vary with different hair textures and depending how damp the hair is before styling. Average styling times can range from 20 seconds to 1 minute. Test a section of hair to judge drying time. Repeat as necessary until the section is dry. When properly dried, the hair should be completely dry and warm to touch.

### Volumizing the Hair

Whenever you brush hair and partly blow-dry it against its natural growth pattern, you will add bulk to your hair and body to the style. After partially drying hair in this manner, you can then brush hair and blow-style it in the direction you want the finished style to go.

### Avoiding Hair Tangles

***If your hair gets caught in one of the Attachments, don't panic!***

Immediately slide the Speed Switch to **OFF** position. Unplug the Hot Air Styler. Depending on the situation, you may want to detach the Attachment or leave it on for better manageability. First try loosening the hair on the Attachment and then slowly unwinding. Twisting the Attachment up and down will only cause worse tangles. Using the end of a tail comb is sometimes useful to loosen up the tangled area. When using the Thermal Brush, or the Nylon Brush, never wrap the hair around more than 2 complete turns around the brush.

Use caution for hair that is past the shoulders when using the following Attachments: Nylon Brush, Thermal Brush, and the Bristle Brush.

Use small sections and take your time to avoid tangles.

### Cool Setting

While the Attachments are being used, it is a good idea to slide the Speed Switch to **COLD** or cold setting before letting the hair down. Cold air helps to set the curl for longer lasting style. The hair must be completely dry and warm to touch before using the Cold Setting.

### Damp Hair

If styling damp hair, the use of a mousse or styling spray is helpful to maintain volume and hold curl. Use the Concentrator Attachment to remove excess moisture from the hair before using the Styling Attachments. The hair should feel moist to touch (a little more than halfway dry.)

### Dry Hair

Hair that is dry should be misted slightly with a water bottle, then combed through. Although the Air Styler may be used on dry hair, misting allows the hair to be more responsive to styling.

## OPERATING THE HOT AIR STYLER

1. Place and lock the desired Attachment onto the Hot Air Styler. (See "Using the Attachments" section.)
2. Plug the Styler into a 120V AC electrical outlet.
3. Test the ALCI plug following the procedure described earlier.

During the first few minutes of initial use, you may notice smoke and a slight odor. This is normal and will quickly disappear.

4. Set Styler to desired setting. Direct Styler through a section of hair at a time. Sections should be used when using the Hot Air Styler. The average section size is 1" thick, 2" wide. (See "Attachments: Suggested Uses" section.)
5. When finished, slide the Speed Switch to **OFF** position and unplug the unit.

 
## ATTACHMENTS: SUGGESTED USES

### Concentrator




The Concentrator allows you to direct the air flow on small sections of hair as you style and shape hair with a brush or comb. You can build body and fullness into fine, thin hair by directing the air flow against the natural growth pattern of the hair. Use the Concentrator to remove moisture and partially dry the hair before using Styling Attachments.

### Pick



 Use the Pick to build body and add fullness to hair. Insert the Pick into hair and lift up 2" from scalp. Slide out of hair when finished. It is best to move around the hair in different areas (scalp, midsection, ends.) Keep the Pick in place for about 15 seconds, then move on to the next area.

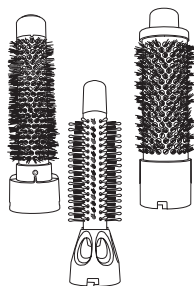

**1" Thermal Round Brush,  
1-1/2" Thermal Round Brush,  
3/4" Nylon Brush**


Add volume and gentle curl to the hair with these brushes. The Thermal Brush's heated barrel adds curling power. Style hair until warm to the touch.

## Comb



 Using the Comb Attachment As you would any regular comb, only with the added benefit of, if the unit is on, drying while styling.

## Straightener



**WARNING:**  
Use care not to touch hot Thermal Plates.

For smooth sleek looks, the Straightener features 2 Thermal Plates that direct warm air to both sides of the section of hair.

Beginning 1/2" away from the scalp, insert hair and press down gently on the Thumb Tab to hold hair in place between the Thermal Plates. Slowly glide the Hot Air Styler to the ends of the hair. May take a few passes for really smooth hair.

## USER MAINTENANCE INSTRUCTIONS

This appliance contains no user serviceable parts. Do not try to repair this appliance yourself. Refer service, if necessary, to qualified service personnel.

Untwist cord to avoid tangling.

### To Clean

If cleaning is needed, unplug the Hot Air Styler and allow it to cool. Use a soft, damp cloth to wipe the Hot Air Styler Body and all of the Attachments' surfaces.

**NOTE:** If the unit is not functioning properly, slide the Speed Switch to **OFF**, unplug and allow to cool. Check the Air Intake Grill to make sure it is free of dust and debris. If it is not clear, clean with a small brush and then try to turn it on again.

**CAUTION:** Do not allow water or any other liquid to get into the Hot Air Styler.

To clean the Carrying Bag, wipe with a damp cloth.

### To Store

Never store Hot Air Styler while it is hot or still plugged in.

While not in use, store the Hot Air Styler and 7 Attachments in its specially fitted Carrying Case.

Never wrap the cord tightly around the appliance.

Never hang unit by the cord. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

## REPLACEMENT PARTS

Replacement parts are available, and may be purchased through our Consumer Relations Department by calling 1-800-934-7455, Mon-Fri. 9am-5pm Central Time, with Visa, Mastercard, Discover, or American Express. Please be ready to give the part number(s) when you call.

Or log into our website to order at: [www.eSalton.com](http://www.eSalton.com)

### Scunci 1000 Watt Ultimate Hot Air Styler (\$73024)

#### REPLACEMENT PARTS

<u>PART #</u>	<u>DESCRIPTION</u>
50712	Comb
50714	1-1/2" Round Thermal Brush
50713	1" Round Thermal Brush
50715	3/4" Nylon Brush
50716	Hair Straightener
50717	Concentrator
50718	Pick
50711	Carrying Case

## LIMITED TWO YEAR WARRANTY

**Warranty:** This Scunci product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (2) years from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

**Warranty Coverage:** This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Implied Warranties:** ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO TWO (2) YEARS FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**Warranty Performance:** During the above two-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the two-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

**Service and Repair:** Should the appliance malfunction, you should first call toll-free 1 (800) 934-7455 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number S73024 when you call.

**In-Warranty Service (USA):** For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (800) 934-7455.

**Out-of-Warranty Service:** A flat rate charge by model is made for out-of-warranty service. Include \$ 8.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

**For Products Purchased in the USA, but Used in Canada:** You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

**Risk During Shipment:** We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

**To return the appliance, ship to:**

ATTN: Repair Center  
Salton, Inc.  
708 South Missouri Street  
Macon, MO 63552

**To contact us, please write to, call, or email:**

Salton, Inc.  
P.O. Box 1637  
Columbia, MO 65205-1637  
1 (800) 934-7455  
E-mail: Salton@Saltonusa.com

**Limitation of Remedies:** No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall Salton be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**Legal Rights:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products: visit our website: [www.eSalton.com](http://www.eSalton.com)

©2004 Salton, Inc. All rights reserved.  
Made in China

P/N 61582  
Printed in China