

White-Westinghouse™

# **4-Cup Automatic Drip Coffee Maker**

**OWNER'S MANUAL**



**MODEL WCM0004**

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING.
2. Do not touch hot surfaces. Use handle or knobs.
3. To protect against electric shock, do not place cord, plug or appliance in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
7. The use of an accessory not evaluated for use with this appliance may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. Do not use appliance for other than intended use.
12. The glass container is designed for use with this appliance. It must never be used on a range top. Do not set a hot container on a wet or cold surface. Do not use a cracked container or a container having a loose or weakened handle. Do not clean container with cleaners, steel wool pads or other adhesive materials. Do not place in microwave oven.

## SAVE THESE INSTRUCTIONS

# OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

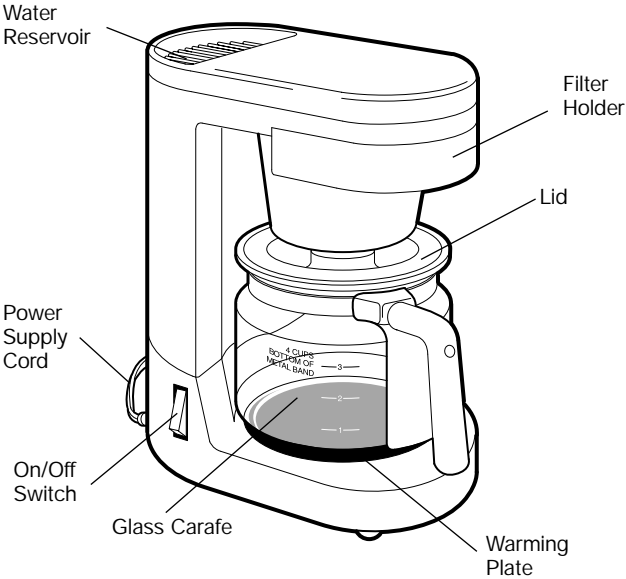 


FIG. 1

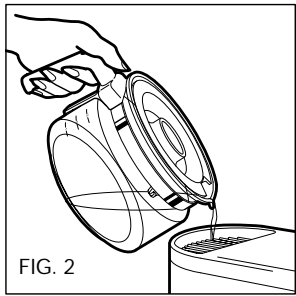 


FIG. 2

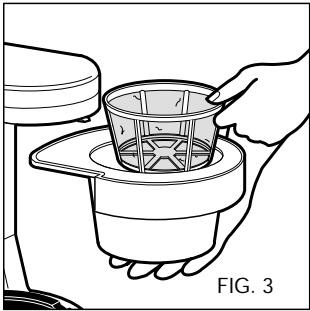 


FIG. 3

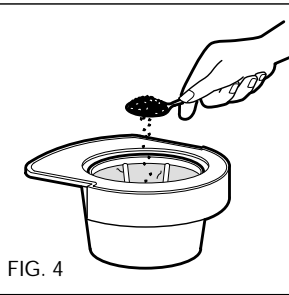 


FIG. 4

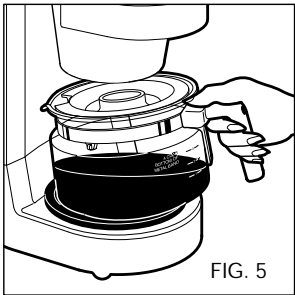 


FIG. 5

This appliance is for **HOUSEHOLD USE ONLY** and may be plugged into any 120-volt AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

This appliance has a **polarized plug** (one blade is wider than the other). As a safety feature, this plug fits in a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

A short **power-supply cord** is provided to reduce the hazards from entanglement or tripping over a longer cord. An extension cord may be used with care; however, **the marked electrical rating should be at least as great as the electrical rating of this appliance**. The extension cord should not be allowed to drape over the counter or tabletop where it can be pulled on by children or tripped over.

#### **BEFORE USING:**

Wash the glass carafe and lid in warm, soapy water, rinse well and dry thoroughly, then wipe unit with a soft cloth or sponge. **Never immerse unit or cord in water or other liquid, and do not allow water to get into the unit.** Now, fill carafe with cool water and pour the water into the water reservoir. Place carafe over the warming plate, plug unit into electrical outlet and switch ON. Allow water to cycle through, without coffee; this will clean the water reservoir, filter and filter holder prior to initial use.

#### **BREWING COFFEE:**

Be sure power switch is in the OFF position. Use carafe to measure and pour cold water into water reservoir (Fig. 2). NOTE: The amount of coffee brewed will be slightly less than original water due to absorption of water by the coffee grounds. Carefully pour water into the reservoir.

Pull filter holder out and place filter in holder (Fig. 3). Add 1 level tablespoon or scoop of coffee for every 2 cups of coffee (Fig. 4). Adjust to suit your taste by increasing or decreasing amount of coffee used. Spread coffee evenly and push filter holder back until it snaps into place.

Place lid on carafe, and then place the carafe on the warming plate. Plug unit into electrical outlet and switch ON. When the switch is lighted, the coffeemaker is ON.

When brewing is complete, remove carafe from warming plate (Fig. 5). For safety, always pour coffee from carafe with lid in place. To maintain serving temperature, keep carafe on warming plate. The warming plate will keep the coffee at serving temperature.

Switch OFF when carafe is empty.

**FOR A SECOND POT:** Turn unit off and allow to cool for 10 minutes before brewing a second pot. If you wait less than 10 minutes, hot water left in the tubes could splash out.

## USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. **To reduce the risk of electric shock, do not open or remove bottom cover of unit.** It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing is needed.

Always switch OFF and allow to cool before cleaning.

### TO CLEAN:

At least once a month, pour one quart of white vinegar into carafe. Add cold water until carafe is filled. Pour water and vinegar into water reservoir. Place filter in filter holder. Place carafe on warming plate and turn unit ON. Allow to steam and drip until carafe is full. Turn unit OFF.

Allow unit to cool for 10 minutes; then rinse unit by filling water reservoir with clean, cold water and allowing water to drip into carafe. Turn unit off and discard water. Wash and dry carafe, lid, filter and filter holder. When unit has cooled, wipe with a dry cloth.

The carafe, lid, filter and filter holder may be washed in warm, soapy water. The unit can be wiped clean with a soft, slightly damp cloth. Never use abrasive scouring pads or cleanser. **Never immerse unit in water or any other liquid.**

### TO STORE:

Unplug unit; store in its box in a clean, dry place. Never store it while it is hot or still plugged in. **Never wrap cord tightly around the appliance.**

Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

# ONE-YEAR LIMITED WARRANTY

This White-Westinghouse product warranty extends to the original consumer purchaser of the product.

**Warranty Duration:** This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

**Warranty Coverage:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Warranty Disclaimers:** This warranty is in lieu of all warranties expressed or implied, and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model (at the store's option) when the product is returned to Kmart. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

## Important Notice

If any parts are missing or defective, return this product to the place of purchase, or contact our Consumer Service Department for assistance.

## Consumer Service

This White-Westinghouse product is distributed by:

Salton/MAXIM Housewares, Inc.  
708 South Missouri St.  
Macon, MO 63552  
E-mail: Salton550@aol.com

Any questions or comments can be directed to Salton/MAXIM's address, or call the Consumer Service Department:

1-800-233-9054  
Monday-Friday  
9 a.m. - 5 p.m. CST

You will be charged 95 cents per minute, with a maximum charge of \$3.80 for this call.

Trademark White-Westinghouse used under license.  
©1997 White-Consolidated Industries, Inc.

Made in China for  
Kmart Corporation  
Troy, Michigan 48084

Printed in Hong Kong