



# SNOW PENGUIN<sup>TM</sup> ICE SHAVER

OWNER'S MANUAL  
MODEL ISP2



# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. To protect against risk of electrical shock do not put cord, plugs, or appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts. Never place fingers or other utensils into feed or discharge areas.
6. Blades are sharp. Handle carefully.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact Consumer Service for examination, repair or electrical or mechanical adjustment.
8. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter.
11. Do not let cord contact hot surface, including the stove.
12. Check Ice Shaving Chamber for presence of foreign objects before using.
13. Be certain Motor Assembly is securely locked in place before operating appliance.
14. Do not attempt to defeat the Motor Interlock Mechanism.

## **SAVE THESE INSTRUCTIONS**

**THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY**

**THIS IS NOT A TOY**

# ADDITIONAL IMPORTANT SAFEGUARDS


1. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Do not leave this appliance unattended during use.
4. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
5. If this appliance falls or accidentally becomes immersed in water, unplug it immediately. Do not reach into the water! Do not use this appliance after it has fallen into or becomes immersed in water.
6. To reduce the risk of injury to persons or property, never use this appliance in an unstable position.
7. Do not use this appliance for other than its intended use.

## POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## CORD GRIP ATTACHMENT


This appliance comes equipped with a Cord Grip (suction cup) Attachment that is used to secure the cord in place while in use or while sitting on your countertop.

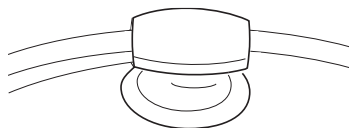


**Cord Grip  
(suction cup)**

# GETTING TO KNOW YOUR SALTON® SNOW PENGUIN™ ICE SHAVER

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

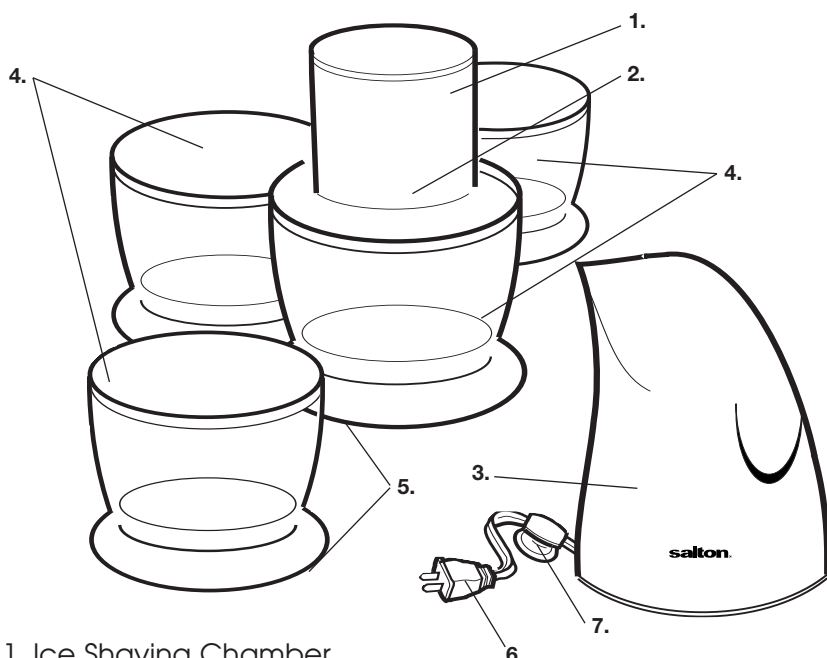

1. Ice Shaving Chamber  
(P/N 70937)
2. Stainless Steel Shaving Blade  
(inside)
3. Penguin Head (Motor Assembly)  
(P/N 70938)
4. 4 Snow Bowls (P/N 70948)
5. Non-Skid Rubber Grip Bottoms  
(P/N 70949)
6. Polarized Plug
7. Cord Grip Attachment  
(suction cup)
8. 4 Freezer Discs (P/N 70950)
9. 4 Color-Changing Snow Spoons  
(P/N 70951)

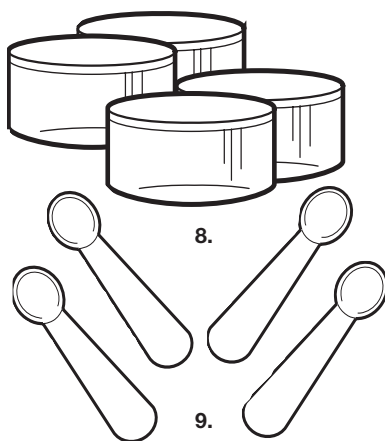

# INSTRUCTIONS FOR USE

**CAUTION!** When taking apart the unit, be aware that there is an exposed Blade that can cause injury.

**ALL CHILDREN MUST BE SUPERVISED BY AN ADULT WHEN USING THIS PRODUCT! THIS IS NOT A TOY!**

1. Before using the Penguin Ice Shaver, add water, juice, or other liquid to just below 1/4" from the rim of the Freezer Disc. Always leave room for the liquid to expand — **DO NOT OVERFILL**. When the liquid is frozen solid, you are ready to use the Penguin Ice Shaver.

**NOTE: Juice and other beverages will take longer to freeze than water.**

2. Separate the Snow Penguin head from the Ice Shaving Chamber by pulling up.
3. Place the Ice Shaving Chamber onto an empty Snow Bowl. Make sure the Ice Shaving Chamber is securely and properly seated inside the lip of the Snow Bowl.
4. Place a pre-made ice round down into the Ice Shaving Chamber. (See illustration.) If the ice round is difficult to

remove, run under tap water for a few seconds to loosen. Turn the Freezer Disc upside-down over the Ice Chamber and press down on the bottom of the Freezer Disc, working your way around until the ice round is removed.

**NOTE: Do not use regular ice cubes.**

5. Replace the Snow Penguin Head (Motor Assembly) over the Ice Shaving Chamber. Rotate the Head until it easily slides over the Ice Shaving Chamber.

6. Plug the unit into a standard 120V AC wall outlet. To begin making shaved ice, apply pressure to the top of the Snow Penguin Head. The Head will wobble a little bit as you are shaving the ice disc. This is normal.

**NOTE: As a safety feature, if the Snow Penguin Head is not properly assembled over the Ice Shaving Chamber, the unit will not operate.**

7. While pressing the Penguin Head down, the pressure-activated internal switch will shave ice directly into the Snow Bowl. When you release pressure, the unit will stop.

**NOTE: Do not continuously run the Motor for more than 5 minutes at a time. Allow it to cool before restarting.**



## INSTRUCTIONS FOR USE (Continued)

The pressure on the Penguin Head should be applied vertically downwards. If excessive side force is applied, the system may jam and the motor will not rotate. If this happens, just release the pressure, and apply the vertical pressure again.

8. After one ice round is shaved, the following should be done to ensure proper shaving performance:
  - Unplug the cord from the electrical outlet. Remove any unshaved ice from inside of the Shaving Chamber and any ice which may be on the metal Ice Grip (located at the bottom of the Penguin Head) by running under warm water. **CAUTION: Avoid touching blade or sharp metal Ice Grip.**
  - Always use an empty Snow Bowl for every new ice round, because a full bowl of snow will block the Shaving Blade.
9. When you are finished making Penguin Snow, unplug the cord from the electrical outlet. Follow Cleaning Instructions outlined on page 6 in this Owner's Manual.

## SNOW BOWLS & SNOW SPOONS

Your Snow Penguin Ice Shaver comes with 4 Snow Bowls in fun lively colors and 4 special Snow Spoons. When placed into your bowls of snow, the Spoons will react to the temperature and magically change colors! Each Spoon changes color to match one of the Snow Bowls.

**NOTE: Snow Spoons are NOT dishwasher-safe. Please follow Cleaning Instructions outlined in this manual.**

## SERVING SUGGESTIONS

You can make a variety of wonderfully flavored ices. Follow these simple instructions:

1. You can freeze water, then shave the ice and add flavored syrup. Flavored syrups can be found in coffee specialty shops, gourmet food stores, and some grocery stores.  
When adding the syrup, add one teaspoon at a time until desired taste.
2. Fruit juices, lemonade or other flavored drinks can be frozen in the Freezer Discs and placed directly in the Penguin Ice Shaver for instant flavored ice. Then follow the steps explained previously.

## SERVING SUGGESTIONS (Continued)

3. You may use soft drinks as well. When pouring into the Freezer Discs, only fill them 1/2 - 3/4 of the way full. This will ensure that the soft drinks will not overflow when frozen. Carbonated beverages need extra room to expand..
4. You can use Penguin Snow to add to frappes or other frozen drinks.
5. Penguin Snow can also be used to keep salads, seafood or other food products chilled while on a buffet table. Depending upon the size of the display, place the ice in a larger container than the food to be displayed. Place the tray or bowl of food down into the ice to keep chilled for up to 1 hour.

To serve, put shaved ice in Snow Bowls or in paper Snow Cone cups. Snow Cone cups can be found in most specialty or party shops.

## CLEANING INSTRUCTIONS

- Unplug the appliance.
- **Blade is sharp. Handle carefully.**
- When you have finished using the Penguin Ice Shaver simply run all parts (except the Motor Assembly) under warm water. The excess ice and flavorings should just wash away.
- ONLY Snow Bowls are top-rack dishwasher safe.
- Please do NOT place the Ice Shaving Chamber, Penguin Head (Motor Assembly), or Snow Spoons into the dishwasher. If extra cleaning is necessary wash with warm soapy water. DO NOT USE HARSH ABRASIVES OR CLEANERS.
- Dry all parts thoroughly before storing.
- DUE TO THE EXPOSED BLADE, STORE THIS PRODUCT OUT OF CHILDREN'S REACH.
- DO NOT IMMERSE MOTOR ASSEMBLY, CORD, OR PLUG IN WATER OR OTHER LIQUIDS.

Any servicing requiring disassembly other than the above cleaning must be performed by a qualified service technician.

# LIMITED ONE YEAR WARRANTY

**Warranty:** This product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

**Warranty Coverage:** This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Implied Warranties:** ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

**Service and Repair:** Should the appliance malfunction, you should first call toll-free 1 (800) 233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number ISP2 when you call.

**In-Warranty Service (USA):** For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (800) 233-9054.

**Out-of Warranty Service:** A flat rate charge by model is made for out-of-warranty service. Include \$8.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

**For Products Purchased in the USA, but Used in Canada:** You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

**Risk During Shipment:** We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

**To return the appliance, ship to:**  
ATTN: Repair Center  
Salton, Inc.  
708 South Missouri Street  
Macon, MO 63552

**To contact us, please write to, call, or email:**  
Salton, Inc.  
P.O. Box 7366  
Columbia, MO 65205-7366  
1-800-233-9054  
E-mail: [Salton@Saltonusa.com](mailto:Salton@Saltonusa.com)

**Limitation of Remedies:** No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall Salton be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**Legal Rights:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products: visit our website: [www.eSalton.com](http://www.eSalton.com)