

# READ AND SAVE THESE INSTRUCTIONS

**WARNING:** A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.



GLOBAL DESIGN

Electronic Toaster

Use and Care Guide

Model 1046U

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all instructions before using toaster.
- Do not touch hot surfaces. Use handles.
- This toaster is not for use by children.
- Close supervision is necessary when any appliance is used near children.
- Do not operate unattended.
- Oversize foods, metal foil packages, or metal utensils must not be inserted in this toaster. Remove all protective wrappings prior to placing in toaster.
- Avoid using items with "runny" frostings, fillings, icings or cheese. This includes pre-buttered foods. When these substances melt, they cause a sticky build-up and may result in a risk of fire.
- Use toaster in an open area with 4-6 inches air space above and on all sides for air circulation. Do not allow toaster to touch or be covered by flammable materials including curtains, draperies, towels, walls and toaster covers, etc., while in operation.
- Do not attempt to dislodge food when toaster is plugged into an outlet.
- Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating a risk of electrical shock.
- Do not place any cord, plug or body of this toaster under water or other liquid. See instructions for cleaning.
- Do not operate any damaged appliance. Do not operate with a damaged cord or plug or after the toaster malfunctions, or has been dropped or damaged in any manner. Return toaster to the nearest authorized service facility for examination, repair or mechanical adjustment.
- Use attachments only if recommended by Toastmaster Inc.
- Do not use outdoors or when standing in a damp area.
- Do not use toaster for other than intended use.
- Do not let cord hang over edge of table or counter or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Failure to clean crumb tray may result in a risk of fire. See instructions for cleaning.

# SAVE THESE INSTRUCTIONS

**THIS PRODUCT IS FOR HOUSEHOLD USE ONLY**

**CAUTION:** A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. If a longer cord is required, extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is used, (1) the marked electrical rating of the extension cord should be at least 10 A., 125 V., 1250 W., and (2) the longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over accidentally.

**ELECTRIC POWER:** If the electric circuit is overloaded with other appliances your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

*Thank You for purchasing this Toastmaster appliance.*

*Featuring superior technology and craftsmanship, the Global Design Collection is an exceptional line of kitchen appliances. The toaster's state-of-the art design is matched only by its excellent performance. Enjoy!*

## FEATURES

- Cool touch exterior
- Electronic timing provides consistency in color
- Self adjusting bread slots hold food upright for uniform toasting side to side
- Integrated warming rack to make crispy warm buns
- Removable crumb tray for easy cleaning
- Convenient cord storage
- Auto OFF if food becomes stuck
- Movable quartz elements

## GETTING TO KNOW YOUR TOASTER

Figure 1 Toaster

- Toast Color Selector
- Toast Lever
- One Side Toasting
- Warming Button - red
- Frozen Bread Button - blue
- Cool Touch Case
- Cord Storage
- Crumb Tray
- Warming Rack Handle
- Adjustable Toast Slots
- Integrated Warming Rack

Figure 2 Cord Storage

Figure 3 Toast Color Selector

Figure 4 Frozen Bread Button

Figure 5 One Side Toasting Button

Figure 6 Warming Button

Figure 7 Warming Rack

Figure 8 Crumb Tray

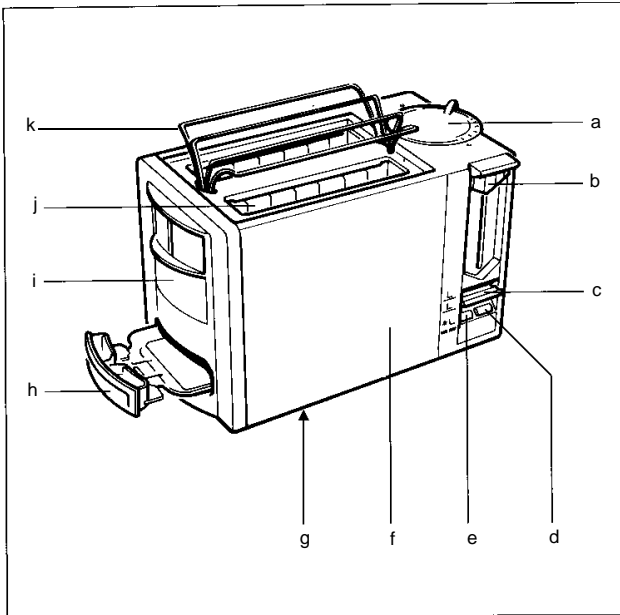 


Figure 1

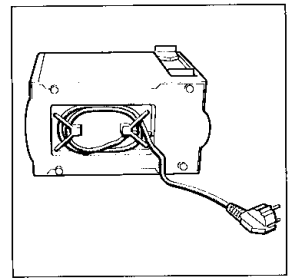 


Figure 2

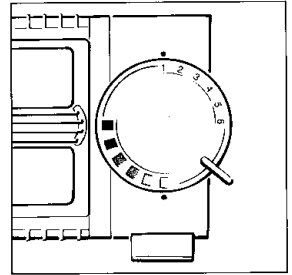 


Figure 3

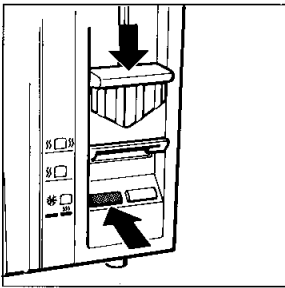 


Figure 4

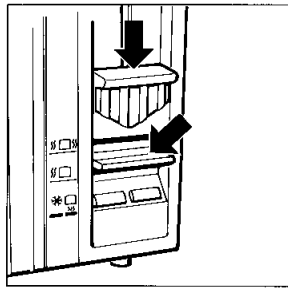 


Figure 5

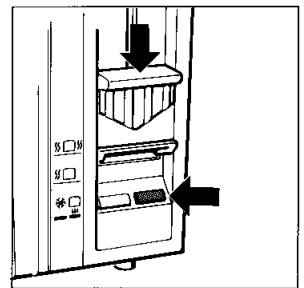 


Figure 6

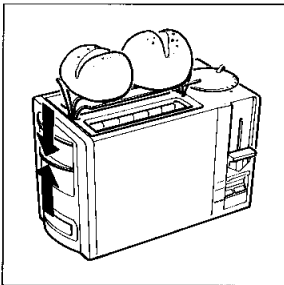 


Figure 7

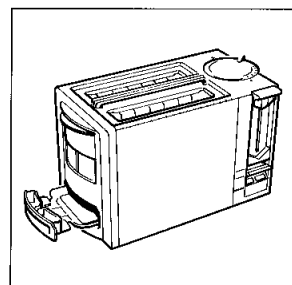 


Figure 8

## **BEFORE USING YOUR TOASTER**

Fill out warranty information.

The Toastmaster Electronic Toaster features a light (1) to dark (6) toast color selector with a wide range of settings in between for your personal preference, (see figure 3).

We suggest that you try your favorite bread with the selector in the center position, 3-4. If the toast color is too light, rotate the color selector to a higher setting. If too dark, rotate the color selector to a lower setting. The light setting produces a toasted piece of bread with a crisp exterior and little to no browning. A dark setting produces a darker exterior and dry interior. With experimentation you will be able to choose suitable colors for all toasted products.

## **TOASTING**

1. Unwrap cord from cord storage, (see figure 2) and plug into 120 V ~ 50-60 Hz outlet.
2. Adjust toast color selector, light (1) to dark (6), (see figure 3). Thin bread will not be centered in the toasting slot and should be toasted on a lighter color to avoid over browning.
3. Insert bread into adjustable toast slots.

NOTE: Remember, when using different varieties of toaster foods, it may be necessary to change the toast color selector to achieve the desired color.


4. Push toast lever down. The slots automatically adjust to the thickness of the bread. The toast lever will return to original position when toasting is complete. To stop toasting anytime during the cycle, lift up on the toast lever and the toaster will automatically shut off.

NOTE: If your toast is not brown enough, instead of toasting a complete cycle again, follow the instructions for warming toast. This increases the browning slightly, but makes sure the bread does not burn.

5. When the bread is toasted to the color chosen, it will pop up and the toaster will shut off automatically.
6. When finished, unplug and allow to cool thoroughly before cleaning and storing.

 

## **TOASTING FROZEN BREAD**

The toaster may be used to thaw and toast frozen bread.

1. Unwrap cord from cord storage, (see figure 2) and plug into 120V ~ 50-60 Hz outlet.
2. Set the toast color selector to desired color.
3. Insert frozen bread into adjustable toast slots.
4. Press the toast lever down and then press the blue frozen bread button . The light in the button will come on, (see figure 4).
5. Once the bread is thawed, the toaster automatically switches to the toasting mode.
6. When the bread is toasted to the color, chosen it will pop up and the toast lever will return to its original position. The toaster will shut off automatically and the light will go off.
7. When finished, unplug and allow to cool thoroughly before cleaning and storing.


## **TOASTING ON ONE SIDE**

The toaster can be used to toast bagels, English muffins or bread on one side only.

1. Unwrap cord from cord storage and plug into 120V ~ 50-60 Hz outlet.
2. Set the toast color selector to desired color.
3. Press the one side toasting switch  down, (see figure 5). Place the sides to be toasted toward the middle elements and press the toast lever down.  
NOTE: Only the middle elements will be on during this mode.
4. The toast lever will return to original position when toasting is complete and the toaster will shut off automatically.
5. Push the one side toasting switch back to original position  for regular toasting.
6. When finished, unplug and allow to cool thoroughly before cleaning and storing.

## **WARMING TOAST**

The toaster can also be used to warm cold toast.

1. Unwrap cord from cord storage and plug into 120V ~ 50-60 Hz outlet.
2. Insert cold toast into adjustable toast slots. Press toast lever down; the toast color selector does not have to be adjusted.
3. Press the red warming button . The light in the button will come on, (see figure 6).
4. After 20 seconds, the rewarmed toast will pop up. The toaster will shut off automatically and the light will go off. If the warming button is pressed during normal toasting, the toaster will switch over to the 20-second warm-up program.
5. When finished, unplug and allow to cool thoroughly before cleaning and storing.

## **INTEGRATED WARMING RACK**

In Europe, a warming rack is designed to crisp buns which have become limp. You may also use the warming rack to warm buns, rolls, and croissants that are too large to fit inside the toaster slot. For faster warming or to prevent over browning, cut the food in half.

NOTE: Foods being warmed or crispened should not completely cover the toaster top; allow space for adequate air flow.

NOTE: Do not place food containers such as plates or foil pans on top of warmer.

1. Unwrap cord from cord storage and plug into a 120 V ~ 50-60 Hz outlet.
2. Push the warming rack handle down, (see figure 7).
3. Center the foods on the warming rack.
4. Set the toast color selector to 4-5 for crisping or lower for warming.
5. Press the toast lever down.
6. When cycle is complete, turn the food over and repeat instruction 5.
7. Carefully remove the crisp/warm foods.
8. Retract warming rack by lifting the warming rack handle up when finished and during regular toasting.
9. When finished, unplug and allow to cool thoroughly before cleaning and storing.

## **CLEANING**

1. Unplug toaster from outlet and allow to cool thoroughly.
2. Wipe outside with soft, damp cloth. Polish with soft, dry cloth.
3. Remove crumb tray from toaster by pulling out on handle, (see figure 8).
4. Brush out crumbs.
5. Replace crumb tray.

## CORD STORAGE

1. Unplug from outlet and allow to cool thoroughly.
2. Turn toaster on its side and wrap cord around inside of base for storing, (see figure 2).

## SERVICE INFORMATION

Please refer to warranty statement to determine if in-warranty service applies.

This appliance must be serviced by Toastmaster authorized service center. Unauthorized service will void warranty. Consult your phone directory under "Appliances-Household-Small-Service and Repair," or call 1-800-947-3744 in the United States and Canada, 52-5-397-2848 in Mexico.

If an authorized service center is not available locally, your appliance may be returned postage prepaid to our National Service Center at the address shown on the back of this book.

Products must be adequately protected to avoid shipping damage. Surround your appliance with three inches of protective padding and include a note explaining the problem you have experienced. We recommend insuring your package. No CODs accepted.

### ONE YEAR LIMITED WARRANTY

Toastmaster Inc. warrants this product, to original purchaser, for one year from purchase date to be free of defects in material and workmanship.

This warranty is the only written or express warranty given by Toastmaster Inc. This warranty gives you specific legal rights. You may have other rights which vary from state to state. ANY OTHER RIGHT WHICH YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Defective product may be brought or sent (freight prepaid) to an authorized service center listed in the phone book, or to Service Department, Toastmaster Inc., 708 South Missouri St., Macon, MO 63552, for free repair or replacement at our option.

Your remedy does not include: cost of inconvenience, damage due to product failure, transportation damages, misuse, abuse, accident or the like, or commercial use. IN NO EVENT SHALL TOASTMASTER INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts, or allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

For information, write Consumer Claims Manager, at the Macon address. Send name, address, zip, telephone area code and daytime number, model, serial number, and purchase date.

## KEEP DATED SALES RECEIPT FOR WARRANTY SERVICE.

Keep this booklet. Record the following for reference:

Date purchased \_\_\_\_\_

Model number \_\_\_\_\_

Date code (stamped on bottom) \_\_\_\_\_

### **Toastmaster Inc.**

National Service Center  
708 South Missouri St.  
Macon, MO 63552

In USA and Canada call:

Consumer Service 1-800-947-3744

Consumer Parts 1-800-947-3745

Hours: 8:00 a.m. - 4:30 p.m. CST

Aux E.-U. et au Canada, veuillez appeler

Service consommateur : 1-800-947-3744

Pièces détachées consommateur : 1-800-947-3745

Heures ouvrables : 8 h - 16 h 30 Heure Centrale

En México - 52-5-397-2848

Horario: 8:00 a.m. hasta 4:30 p.m., hora del Centro

Toastmaster de México, SA de CV

Cerrada de Recursos

Hidráulicos Numero 6

La Loma Industrial

Tlalnepantla de Baz, C.P. 54060

Estado de México

### CONTACT US/APPELZ



**1-800-947-3744**



**www.toastmaster.com**



**consumer\_relations@toastmaster.com**