Helpful Hints

Using the Fabric-Select Dial



refer to the guide printed on the iron for each fabric's recommended heat setting

Ironing Synthetics, Nylon and Polyester



slide the steam selector to the left (no steam setting)

> turn the fabric-select dial to lower heat settings **(1-3)**

Ironing Cotton, Wool and Cotton-Linen



slide the steam selector to the right (steam setting)

> turn the fabric-select dial to higher heat settings **(4-6)**

© 2019 The Black & Decker Corporation and Spectrum Brands, Inc.