


OWNER'S MANUAL  
MODEL WFI9330

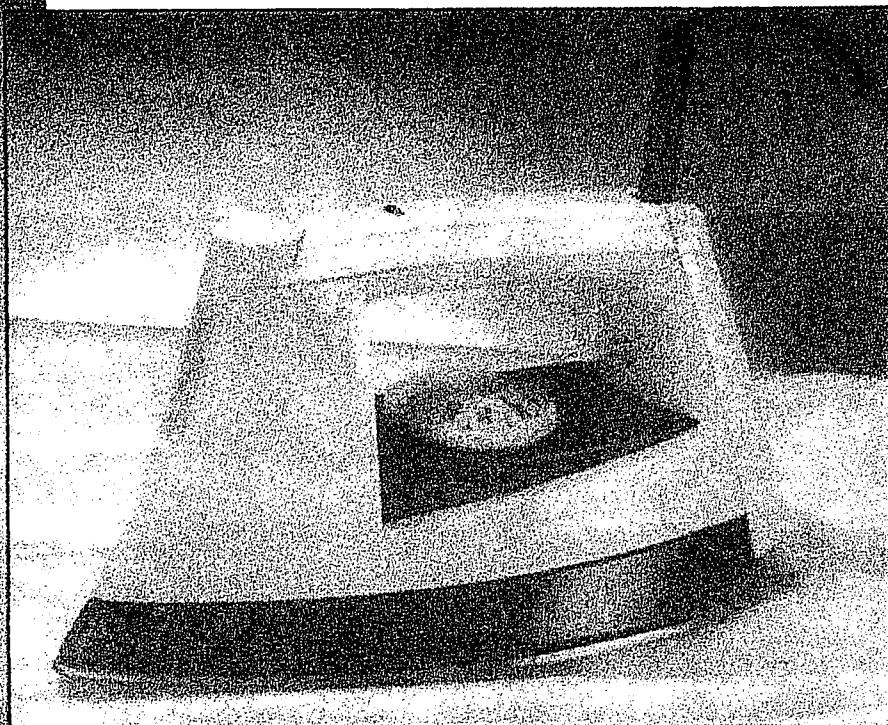

**STEAM & DRY IRON  
WITH VARIABLE  
STEAM**

White-Westinghouse™



# IMPORTANT SAFETY INSTRUCTIONS

When using your iron, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Use iron for its intended use.
3. To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
4. The iron should always be turned Off before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
6. Always disconnect iron from electrical outlet when filling with water or emptying, and when not in use.
7. Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron; take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
8. Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
9. Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down. There may be hot water in the reservoir.

## SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 10-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

## SAVE THESE INSTRUCTIONS

# OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

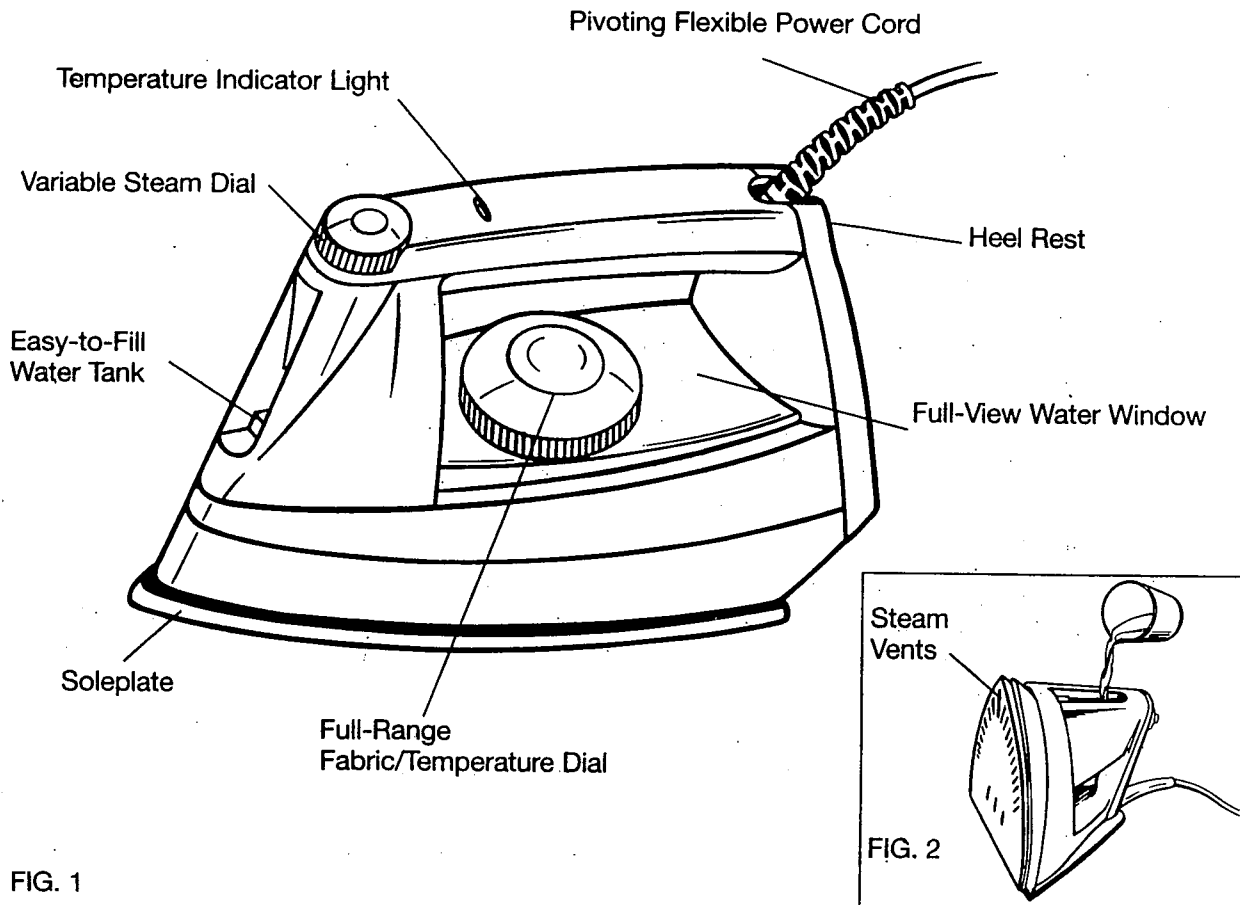


FIG. 1

**WARNING:** Irons are extremely hot; do not leave unattended while plugged in. Keep children away; this is not a toy.

This appliance is for household use and may be plugged into any AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

## NOTE:

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug fits in a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## SPECIAL ATTENTION:

Your new appliance is designed with a protective coating around the heating elements. When plugged in and operating for the first time, there may be a little momentary smoking while this coating is initially heated. This represents no danger to the user and does not indicate a defect in the unit. When using for the first time, allow the appliance to continue heating until the smoke dissipates. This should last only about 30 seconds.

## HOW TO USE YOUR NEW IRON

Always check the ironing instructions on the garment label first. Sort the fabrics out according to the ironing temperature. The iron heats up faster than it cools down. Therefore, start ironing the articles requiring the lower temperatures, and then progress to the higher temperatures. If ironing instructions are missing and you know the fabric, refer to the fabric chart on the iron. If you are not sure of the fabric, test by ironing an inconspicuous area such as an inside seam or edge. If the iron drags or the fabric changes color, lower the temperature and/or use a pressing cloth.

For blended fabrics, you must always use the lower setting. (E.g., a garment with 60% nylon and 40% wool should be set at the temperature indicated for nylon.)  
**ALWAYS TEST BY IRONING AN INCONSPICUOUS AREA.**

**BEFORE USING:** Preheat; move iron over an old cloth several times to remove any residue from the **Soleplate**.

**HOW TO FILL WITH WATER:** Make sure iron is unplugged and the **Fabric/Temperature Dial** is in the "Off" position. Place iron on the **Heel Rest** and set the **Variable Steam Dial** on the "Off" setting. Pour water into **Water Tank** (Fig.2). In areas that have very hard water, use of distilled water is preferred. Be careful not to overfill. If steam should fail to start when using, and iron is in ironing position, gently bump the **Soleplate** on the ironing board once or twice. This helps to start the steam action.

**STEAM IRONING:** Fill with water as described above, plug into electrical outlet, and set **Fabric/Temperature Dial** to appropriate setting. In the steam range, these settings are linen, cotton or wool. The **Temperature Indicator Light** will come on, indicating the iron is plugged in and turned on. The **Temperature Indicator Light** will turn off when the iron reaches its operating temperature. Turn the **Variable Steam Dial** to the amount of steam desired: Low to Max. For maximum steaming, keep water level above the minimum refill line.

The **Temperature Indicator Light** glows when turned on and goes off after temperature is reached. This will indicate to you that the unit is operating properly, keeping the iron at its operating temperature. The **Temperature Indicator Light** works in both steam and dry ironing settings.

**NOTE:** For steam, you must set the **Fabric/Temperature Dial** to a higher setting, linen, cotton or wool.

Always pour out any water left in the iron after each use. Be sure the iron is unplugged and in the "Off" position. Slowly tilt iron nose down over the sink, with the steam vents facing away from you. The water will run out of the reservoir. Take caution when emptying water, as it may be hot.

**DRY IRONING:** Place **Variable Steam Dial** in the "Off" position. Set **Fabric/Temperature Dial** and begin.

**TO TURN IRON OFF:** Turn the **Fabric/Temperature Dial** to the "Off" position and unplug the iron. Allow iron to cool completely before storing.

**WHEN NOT USING, PLACE IRON ON HEEL REST TO AVOID BURNING THE FABRIC OR DAMAGING OTHER SURFACES.**

## USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance and contains no user serviceable parts. Do not try to fix it yourself. Refer it to qualified service personnel if servicing is needed.

**TO CLEAN:** Approximately once a month or so you should engage the self-cleaning feature to remove any scales or impurities. Fill the water reservoir to 1/2 full. Place the iron on the **Heel Rest**. Plug into an electrical outlet and turn the **Fabric/Temperature Dial** to the highest heat setting and the **Variable Steam Dial** to the maximum steam position. Allow iron to heat up until the **Temperature Indicator Light** goes out. Turn off and remove the plug from the outlet. Hold the iron horizontally over the sink. Boiling water and steam will begin to flow from the steam holes in the **Soleplate**. Move the iron forward and backward to help expel impurities. When steaming stops, repeat procedure until the reservoir is empty.

**TO CLEAN SOLEPLATE:** The iron should be fully cooled before **Soleplate** cleaning begins. Make sure iron is unplugged before cleaning. Empty the water tank of any remaining water. Apply a small amount of mild cleaner to a damp cloth. Gently rub **Soleplate**, then wipe with a moist cloth. NEVER USE scouring pads or abrasive cleaners on **Soleplate**, as this may scratch the surface.

Wipe all other surfaces with a slightly damp cloth. Never allow water or any other liquid to get into the unit, except when filling the water tank.

**BEFORE USING AGAIN,** preheat and move iron over an old cloth several times to remove any residue from the soleplate.

**TO STORE:** Unplug appliance and allow to cool. **STORE IN UPRIGHT POSITION ON HEEL REST.** Never store iron lying on **Soleplate**. Never store it while it is hot or still plugged in. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

## **ONE-YEAR LIMITED WARRANTY**

This White-Westinghouse product warranty extends to the original consumer purchaser of the product.

**Warranty Duration:** This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

**Warranty Coverage:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Warranty Disclaimers:** This warranty is in lieu of all warranties expressed or implied, and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model (at the store's option) when the product is returned to Kmart. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

### **Important Notice**

If any parts are missing or defective, return this product to the place of purchase.

### **Consumer Service**

This White-Westinghouse product is distributed by:

Salton®

550 Business Center Drive

Mount Prospect, IL 60056

E-mail: White-Westinghouse@Saltonusa.com

Any questions or comments can be directed to Salton address, or call the Consumer Service Department:

1-800-233-9054

Monday-Friday

9 a.m. - 5 p.m. CST

Trademark White-Westinghouse used under license.  
©1998 White-Consolidated Industries, Inc.

Made in China for  
Kmart Corporation  
Troy, Michigan 48084

Printed in Hong Kong