


**OWNER'S MANUAL**  
**MODEL No. NC-1**

# Manicure Station™


For Perfect Home Manicures

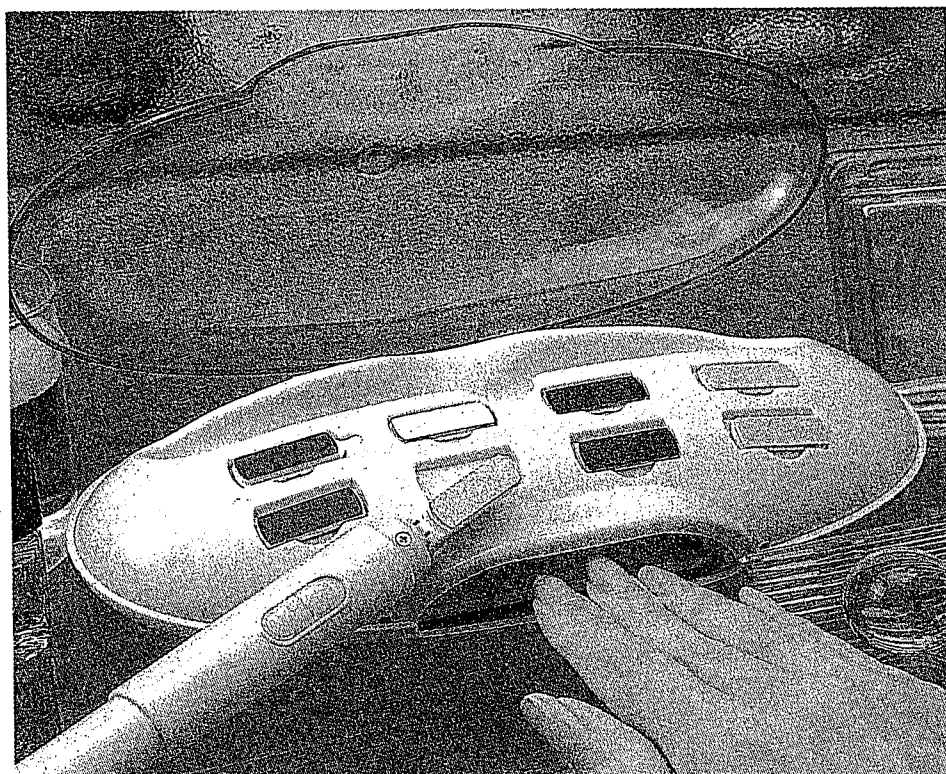






**salton®**

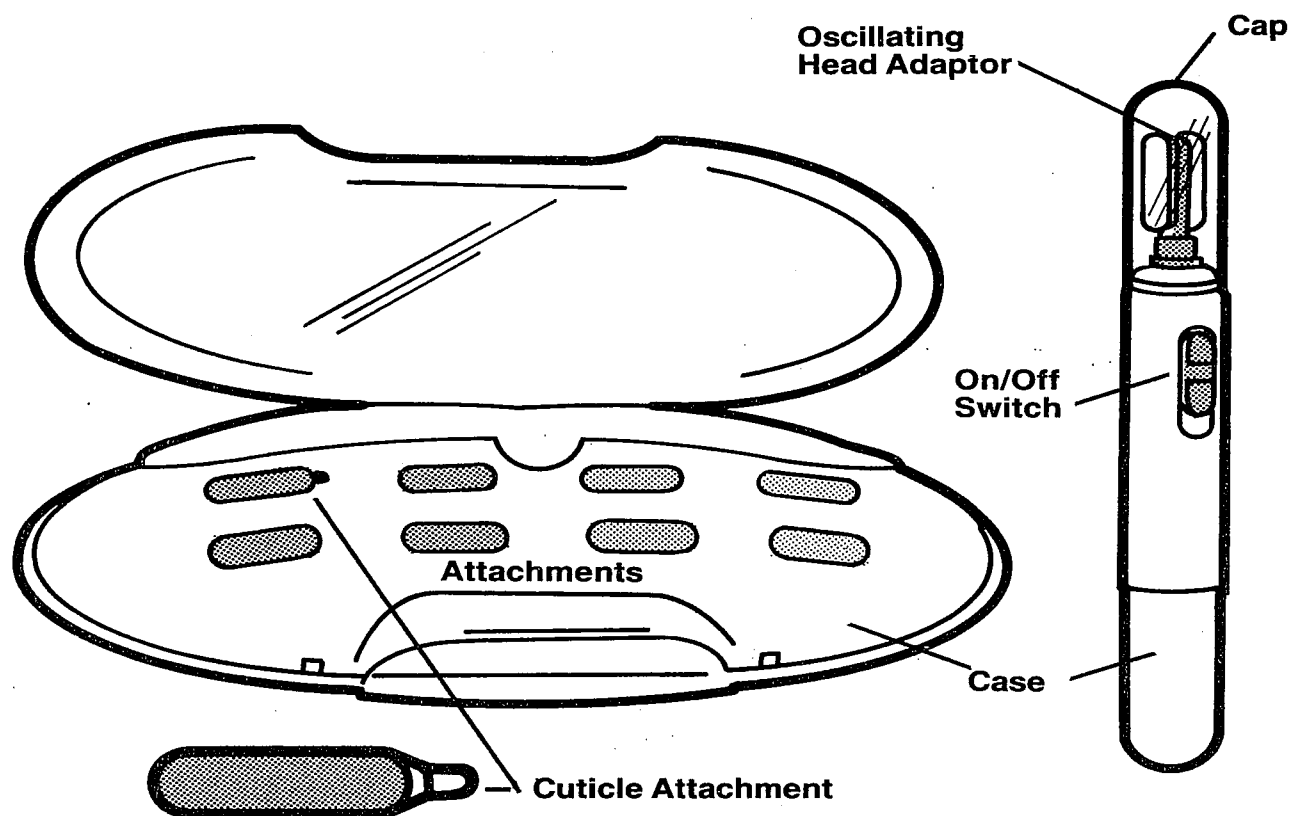*Get a taste of the good life with Salton.*

Your Salton **Manicure Station™** contains everything you need to achieve perfect manicures at home. Five inter-changeable attachments which easily snap on and off the oscillating head adaptor, provide professional nail filing and buffing. The built in dryer is pressure activated for even, fast drying of polished and lacquered nails.




## Attachment Functions

Green attachment		Polishing
Green attachment with cuticle grooming attachment		Polishing / Cuticle Grooming
Blue attachment		Buffing
Pink attachment		Finishing
Black attachment		Filing

# To Insert Battery

## Dryer Case:


Place thumb on battery compartment guide area at the bottom and slide compartment cover off. Place two "AA" size alkaline batteries in the battery compartment exactly as shown and close cover.

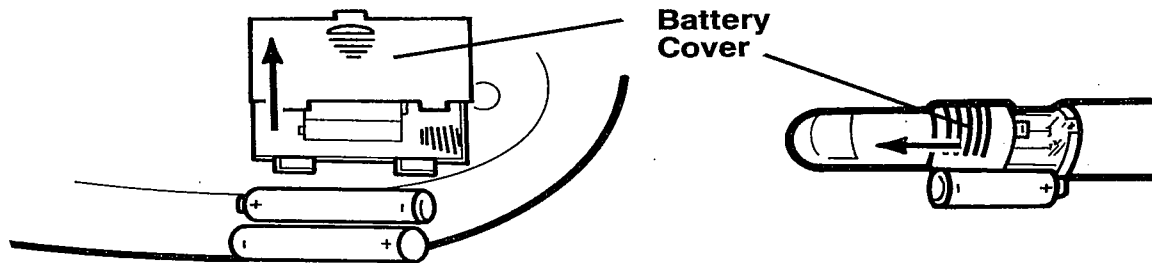


## Nail-Polisher:

Open the battery compartment by sliding the cover off. Place one "AA" size alkaline battery in the compartment and close cover.

# To Change Attachments

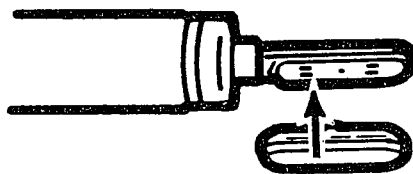

**Replacing:** Gently press attachment onto the head until it snaps into place.

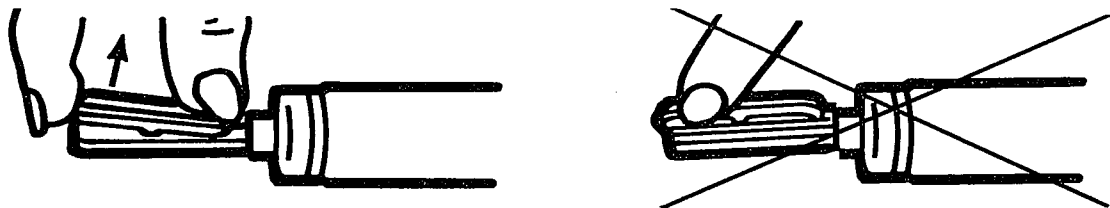


**Removing:** Place tip of index finger under end tab as shown and pull up while resting thumb lightly on opposite end.


**Caution:** Follow the instructions above carefully. Do not push or pull attachments off from the side or exert extreme pressure, as this may result in damage or breakage.

# Operating Instructions


Snap desired attachment onto the oscillating head-end, switch unit on and guide attachment over area to be filed or buffed. Use straight motion to file nails. Use straight or circular motions, as needed, on nail surface. Only a light to medium pressure is needed to properly utilize the attachments.

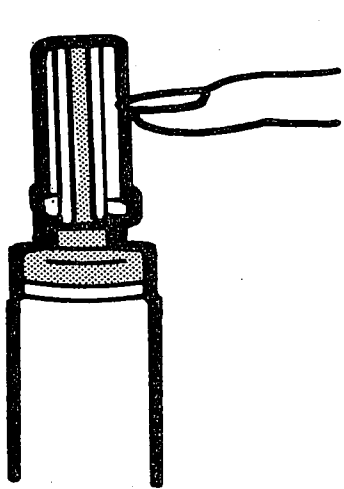


**Nail Filing/Finishing**

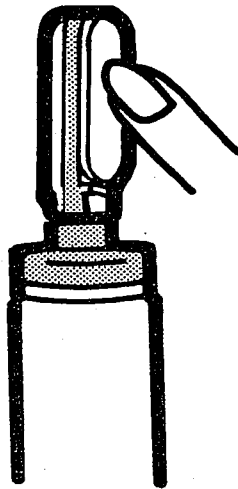

**Nail Shaping**

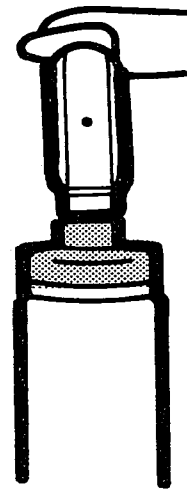


**Buffing/Polishing**

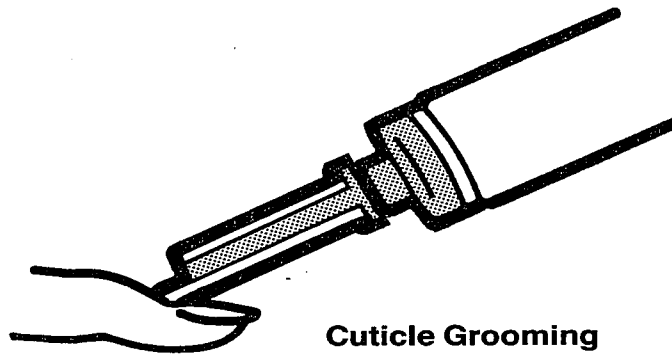

**Cuticle Grooming**

# Drying

To dry your nails, put your fingers in the dryer case and press the bottom down lightly. Your nails should be dried in about 10 minutes per hand.

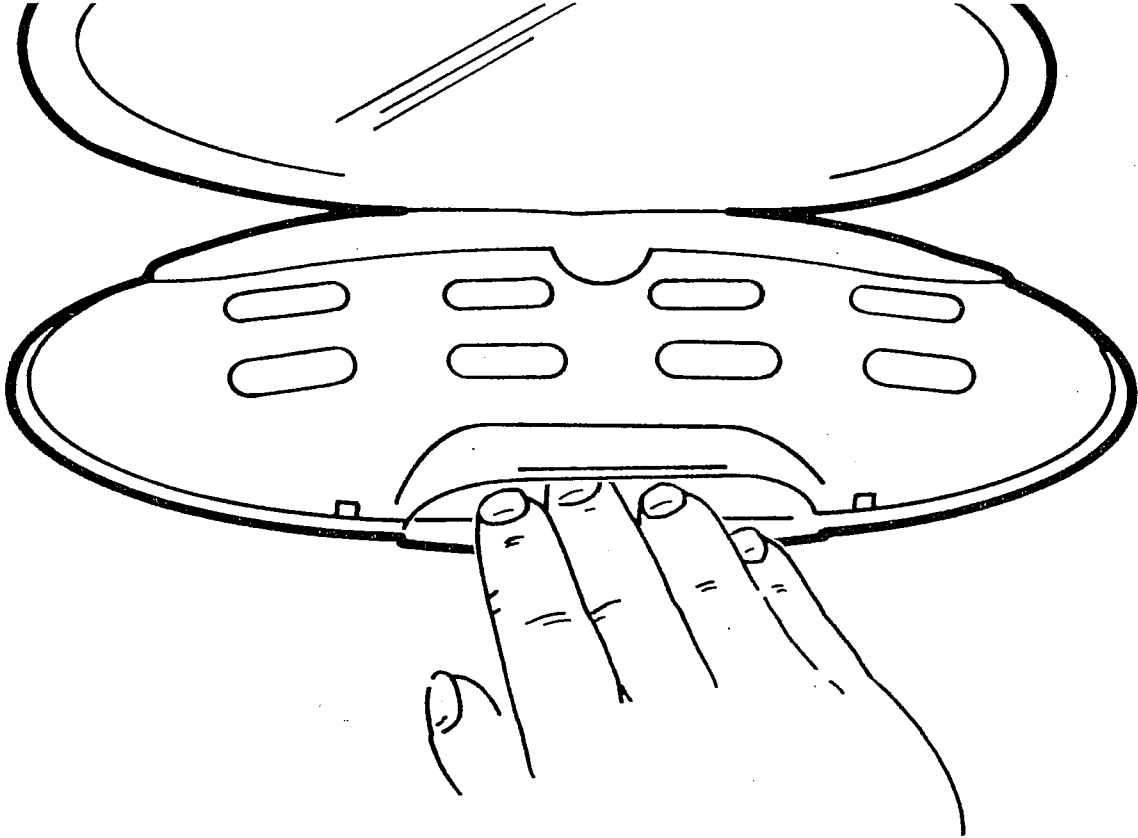

## Cleaning Instructions

To clean the attachments, use a soft, dry cloth and wipe gently.

### IMPORTANT:

- Do not use for any other purpose than intended.
- Do not apply any oil, lubricant or other liquid product to device.
- Do not immerse unit in water or rinse head-end under water.
- Do not apply extreme pressure when using device or replacing attachments, or product may become damaged or broken.
- Do not use on sore or injured areas.

## LIMITED WARRANTY

Machines distributed by Salton/MAXIM Housewares Group are warranted for one year from date of purchase against defects in workmanship and material. During that period these defects will be repaired or the product will be replaced at Salton/MAXIM's option, without charge. This warranty covers normal consumer usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, neglect, installation, commercial use or improper maintenance. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares Group, or to units which have been altered or modified without authorization of Salton/MAXIM Housewares Group, or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

## Service and Repair

DO NOT attempt to repair your SALTON NC-1 Manicure Station™. Should the appliance malfunction, you should first call toll free 1-800-233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER CUSTOMER SERVICE stating that you are a consumer with a problem. If the problem cannot be resolved, you will be asked to return the machine to the factory for repair. Under no circumstances should you attempt to open the housing and repair the machine. Should you do this, your warranty will be voided.

## To Return for Service

1. Securely package and return the product, PREPAID to: Salton/MAXIM Housewares Group, Repair Department, 550 Business Center Drive, Mt. Prospect, IL 60056
2. Be sure to enclose:
  - a. Your name, address and phone number.
  - b. The date of purchase (or receipt as a gift).
  - c. An explanation of the malfunction or reason for return.
  - d. Six dollars (\$6.00) Check or Money Order payable to Salton/MAXIM Housewares Group for return postage and handling.
  - e. To insure prompt "In-Warranty" service, be sure to include proof of date of purchase.

We recommend you take the necessary precaution of insuring the parcel.

3. **Toll Free** Number: 1-800-233-9054.



**salton**®

