

scünci®



3 Versatile Attachments

Personal hair trimmer™

2-sided Trimming Blade

Model No. 73012
Instructions and Warranty

IMPORTANT SAFEGUARDS

When using this Trimmer basic safety precautions should always be followed, including the following:

This product should not be used on or by children.

READ ALL INSTRUCTIONS BEFORE USING

To reduce the risk of burns, fire, electric shock, or injury:

1. Close supervision is necessary when this Trimmer is used by, on or near children or invalids.
2. Use this Trimmer only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never drop or insert any object into any opening.


SAVE THESE INSTRUCTIONS

**THIS PRODUCT IS FOR HOUSEHOLD USE ONLY
THE TRIMMER IS NOT A TOY**


ADDITIONAL IMPORTANT SAFEGUARDS

1. Remove all jewelry before using.
2. People who have sensitive skin or have skin reactions to cosmetics or shavers should not use this Trimmer.
3. Do not use on areas affected by skin infections, open wounds, sores, varicose veins or skin blemishes.
4. Always use on clean dry skin— Remove all make-up before use.
5. The Trimmer is for dry use only. Do not use on wet skin. Do not wash the Trimmer with water or rinse under water.
6. The Trimmer is for personal use, do not share with others.
7. Keep the Trimmer away from the eyes. Do not trim below the eyebrow area. Do not use on Eyelashes.
8. Do not use on or inside: underarms, nose canal, ear canal, or other sensitive areas.
9. For external use only.
10. Always store the Trimmer in a moisture-free area.
11. Never operate the Trimmer if it has a damaged Trimmer Blade, if it is not working properly, or if it has been dropped or damaged. Call Consumer Service for examination or repair. (See Service and Repair in Warranty Section.)


Getting to Know Your Scünci® Personal Hair Trimmer

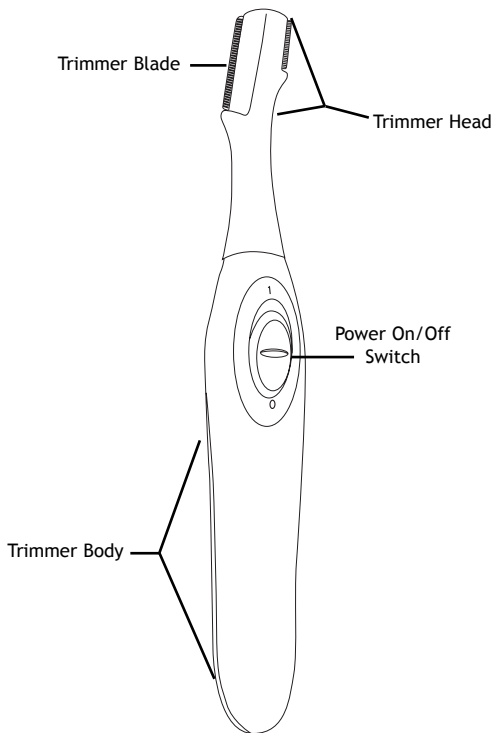


Eyebrow Comb A
(P/N 50597A)

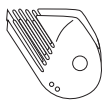


Eyebrow Comb B
(P/N 50597B)

 

Eyebrow Comb C
(P/N 50597C)

 

Blade Cover
(P/N 50598)

 

INSTRUCTIONS FOR USE

Whenever or wherever you need to look your best, The Personal Trimmer is the perfect hair removal tool you can use at home or on the go.

Before Using

The Personal Trimmer is intended for light spot trimming. The Personal Trimmer is not to be used for shaving large amounts of hair.

Installing or Replacing the Battery

This product operates on 1 AA 1.5 V Alkaline Battery.

1. Slide the Power Switch to the Off position.
2. Slide the Battery Cover down the Trimmer's Body to remove. (See Figure 1)
3. Align the positive and negative polarity markings to correspond with the guide on the back of the Trimmer in Figure 1.

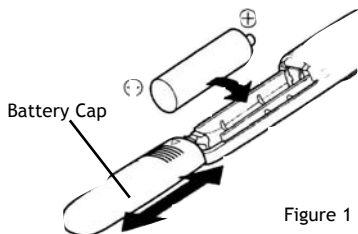


Figure 1

4. Slide the Battery into the Battery Compartment.
5. Slide the Battery Cover back up the body until it clicks into place.

Replacing the Battery

1. Follow steps 1-2 in the Installing the Battery section, then use your fingertip to gently pry the Battery out of the Battery Compartment.
2. Continue with steps 3-4.

Using the Personal Trimmer

1. Slide the switch to the On position.
2. Hold the Trimmer at a 15 degree angle to your skin, and shave the opposite direction of hair growth. **Do not use pressure on skin.** Use light gentle motions.
3. For best results, keep the skin taut by smoothing with your hand as you trim.
4. Slide the switch to the off position after each use.

Eyebrow Comb

Attention:

For use on eyebrows only.
Use caution around the eye area.

The Eyebrow Combs have three settings detailed in Figure 2. Keep in mind these settings will create very short lengths to create a thin brow.







Eyebrow comb	Shape after trimming
 Eyebrow comb A	Hairs in the center are left long 
 Eyebrow comb B	Hairs in the center are cut shorter (Shorter than eyebrow comb A) 
 Eyebrow comb C	All hairs are cut short (Length is uniformly short) 

Figure 2

1. Choose the desired setting by using the appropriate Eyebrow Comb.

Tip: The first time using the Eyebrow Comb, it is better to start with the longest setting to see what length works best.

2. Decide how close you want the trim by lining up the appropriate letter with the groove on the Trimmer Head. Choose “S” for a shorter, closer cut. Choose “L” for a longer cut. (See Figure 3)



Figure 3

3. Slide the track of the desired Eyebrow Comb onto the slot on the Trimmer Head. The Blade should slide in smoothly, otherwise it may be misaligned.
4. Slide the Eyebrow Comb all the way down the Trimmer Head until you hear a click. The entire length of the Blade should be covered.
5. Once the Eyebrow Comb is in place, slide the switch to the On position and brush the eyebrow with short gentle strokes, starting from the outside of the brow, working your way towards the inside. Angle the Trimmer and Eyebrow Comb upside down and repeat to ensure an even cut. (See Figures 4 and 5)

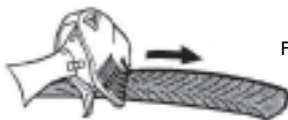


Figure 4



Figure 5

Suggested Use

Eyebrows

Instead of plucking the eyebrows, trim away excess hairs for a perfectly shaped brow. Can also be used to thin the brow by following the instructions for the Eyebrow Comb.

Sideburns


Section off hair and clip away from area to be trimmed. Move Trimmer in an upward motion stopping just before the clip.

Lip Area

Begin at the lip line and use short upward motions.


Chin Area

To keep the skin taut while trimming, move your bottom jaw forward and smooth out with your hand. Use short gentle motions starting from underneath the chin and moving upward towards the bottom lip.

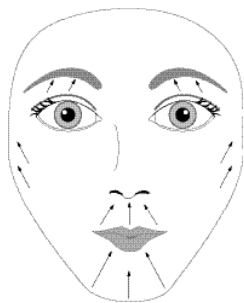

Bikini Line

With bikini bottoms on, trim any stray hairs that lie on the outside edge of the bikini.

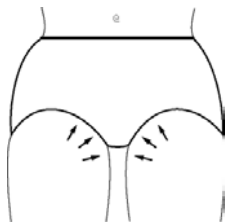

Do not use Trimmer on sensitive areas.

Cleaning and Maintenance

After each use:

Turn the power switch to the Off position.

Use a cleaning brush to remove debris from the Trimmer Blades.

Replace the Protective Cap to protect the Trimmer Blades from damage during storage.

Store the Trimmer in a cool dry place.

Once or twice a month

1. With the power switch to the Off position, take a clean cleansing cloth and lightly dampen it with a mild rubbing alcohol or witch hazel. Use this to gently wipe the Trimmer Blades.

Do not use any other cleaning solutions on the Trimmer, this may cause severe skin irritations. Do not use cotton balls, swabs, etc, as the cotton will get stuck in the Blades.

2. Replace the Protective Cap.

Battery Care

1. Check that the Batteries are installed correctly – there's a guide on the back of the Trimmer.
 2. To avoid leakage, check the Batteries regularly for deterioration, remove exhausted Batteries, and remove the Batteries if the Trimmer is not to be used for a long time.
 3. Discard leaky Batteries immediately. Leaking Batteries can cause skin burns and other personal injuries.
 4. Dispose of the Battery in compliance with your national or local regulations for environmental protection and recycling of raw materials. Do not dispose of the Battery by burning or incineration.
 5. When you need new Batteries, change them both. Do not use a new Battery alongside a used one.
 6. Do not use different kinds of Batteries together (they should both be alkaline).
 7. Do not try to recharge Batteries unless they're specifically designed to be recharged.
-

REPLACEMENT PARTS

Replacement parts are available, and may be purchased through our Consumer Relations Department by calling 1-800-934-7455, Mon-Fri. 9am-5pm Central Time, with Visa, Mastercard, Discover, or American Express. Please be ready to give the part number(s) when you call.

Or log into our website to order at: www.eSalton.com

Scüinci® Personal Trimmer (73012) REPLACEMENT PARTS

<u>PART #</u>	<u>DESCRIPTION</u>
50597A	Eyebrow Comb A
50597B	Eyebrow Comb B
50597C	Eyebrow Comb C
50598	Blade Cover

LIMITED 90 DAY WARRANTY

Warranty: This Scünci® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (90) ninety days from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO NINETY (90) DAYS FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above ninety day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1 (800) 934-7455 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number 73012 when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (800) 934-7455.

Out-of Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$6.00 for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

ATTN: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 1637
Columbia, MO 65205-1637
1 (800) 934-7455
E-mail: Salton@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and in no event shall Salton be liable for any incidental or consequential damages, losses or expenses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products: visit our website: www.eSalton.com

©2003 Salton, Inc. All rights reserved.

Made in China

P/N 61440

Printed in China