

OWNER'S MANUAL
MODEL No. FB-4020

European Foot Bath



salton[®]

Get a taste of the good life with Salton.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS CAREFULLY!

When using electrical appliances, basic safety precautions should always be followed, including the following:

DANGER: *To reduce the risk of electrical shock, always unplug this appliance from the electrical outlet immediately after using and before cleaning.*


WARNING: *To reduce the risk of burns, fire, electric shock or injury to persons:*

1. This appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. Close supervision is necessary when this appliance is used by or near children, invalids or disabled persons.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Salton-Maxim Housewares.
4. Do not stand on or in the appliance. Use only when seated.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged or dropped into water. Return the appliance to a service center for examination and repair.
6. Do not carry this appliance by supply cord or use cord as a handle.
7. Keep the cord away from heated surfaces.
8. Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
9. Never drop or insert any object into any opening.
10. Do not use outdoors.
11. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
12. To disconnect, turn all controls to the "OFF" position, then remove plug from outlet.
13. Connect this appliance to a properly grounded outlet only. *See Grounding Instructions.*

SAVE THESE INSTRUCTIONS

Getting to Know Your Foot Bath

Before attempting to use your FB-4020 you should become familiar with the parts.

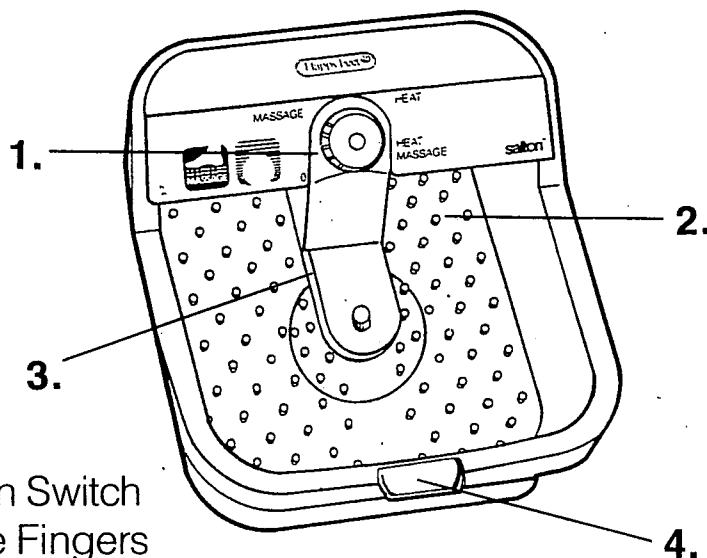

- 1. 4-Position Switch
- 2. Massage Fingers
- 3. Maximum Water Level Line
- 4. Pouring Spout

How to Use Your Foot Bath

1. Unwind the cord from the cord storage.
2. Place the appliance on a flat, solid floor.
3. Before filling with water, make sure that the appliance is unplugged.
4. Fill the foot bath with warm water (desired temperature). The water should not exceed the max. marking.
5. To condition rough, dry, sensitive feet, add skin conditioner in water.
6. Sit down on a chair in a relaxed position, plug in the appliance and switch it on desired position.

Switch positions:

- O = OFF
- MASSAGE = Massage
- HEAT = Heating
- HEAT/MASSAGE = Heating and Massage effect

HEATING

A heater has been built into the appliance to maintain the temperature of the warm water. The heater is not suitable for heating cold water.

MASSAGE

A ten minute massage daily is sufficient to make your feet feel fresher and fitter. The intensity of the massage can be increased by gently pressing the feet against the massage fingers.

Never stand in the appliance!

DRY MASSAGE

Foot massaging can also be done without water. In this case, the appliance should only be operated when the switch is positioned at massage.

Sit down, plug in the appliance and press your feet on the massage fingers on the bottom of the massager.

IMPORTANT!

Only on agreement with your doctor... the foot bath may be used when you suffer from leg or foot problems such as phlebitis, varicose veins, rash, open sores or other ailments.

User Maintenance Instructions

1. Before cleaning, switch off and unplug the appliance. Allow to cool.
2. Empty the foot bath using the pouring spout on the front side.
Never empty the bath from the side where the switches are located.
3. Rinse the appliance with water and wipe it dry.
4. Wind the cord around the cord storage on the bottom of the appliance.
5. This product is for household use only!

No user serviceable parts inside. Any service should be performed by Salton Service Department.


GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER: *Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.*

This product is for use on a nominal 120-volt circuit, and has a grounding plug that looks like the plug illustrated in picture 1. A temporary adapter that looks like the adapter illustrated in pictures 2 and 3 may be used to connect this plug to a 2-pole receptacle (as shown in picture 2) if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (picture 1) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

GROUNDING METHODS

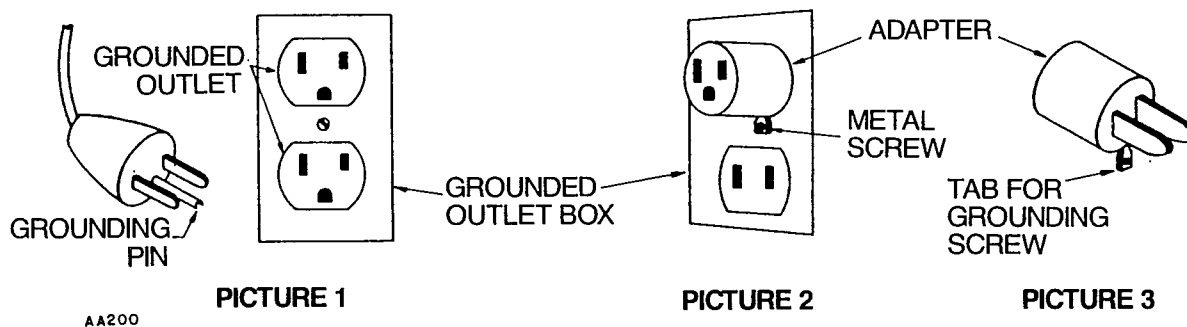

LIMITED WARRANTY

Machines distributed by Salton/MAXIM Housewares Inc. are warranted for one year from date of purchase against defects in workmanship and material. During that period these defects will be repaired or the product will be replaced at Salton/MAXIM's option, without charge. This warranty covers normal consumer usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, neglect, installation, commercial use or improper maintenance. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares Inc. or to units which have been altered or modified without authorization of Salton/MAXIM Housewares Inc. or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Service and Repair


DO NOT attempt to repair your SALTON FB-4020 European Foot Bath. Should the appliance malfunction, you should first call toll free 1-800-233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER CUSTOMER SERVICE stating that you are a consumer with a problem. If the problem cannot be resolved, you will be asked to return the machine to the factory for repair. Under no circumstances should you attempt to open the housing and repair the machine. Should you do this, your warranty will be voided.

To Return for Service

1. Securely package and return the product, PREPAID to: Salton/MAXIM Housewares Inc. Repair Department, 550 Business Center Drive, Mt. Prospect, IL 60056
2. Be sure to enclose:
 - a. Your name, address and phone number.
 - b. The date of purchase (or receipt as a gift).
 - c. An explanation of the malfunction or reason for return.
 - d. Six dollars (\$6.00) Check or Money Order payable to Salton/MAXIM Housewares Inc. for return postage and handling.
 - e. To insure prompt "In-Warranty" service, be sure to include proof of date of purchase.

We recommend you take the necessary precaution of insuring the parcel.

3. **Toll Free** Number: 1-800-233-9054.

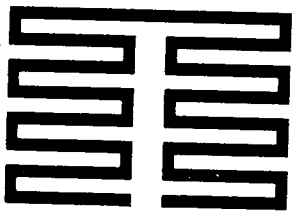

salton[®]

815 1430