

OWNER'S MANUAL

Model Nos.

CM42WHT/DS17TWHT

Coffeemaker

D U A L T H E R M A L C A R A F E



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock, and injury to persons, do not immerse cord, plug, or Coffeemaker in water or other liquid.
4. Close supervision is necessary when any appliance is used near children. This appliance is not for use by children.
5. Unplug from outlet when not in use and before cleaning.
Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner.
Contact Consumer Service.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, press the Power Switch to OFF (O) position, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Be certain Filter Basket Covers are securely in place before operating appliance.
14. Scalding may occur if the Filter Basket Cover are removed during the brewing cycle.
15. These Carafes are designed for use with this Coffeemaker. They must never be used on a range top.
16. Do not set a hot Carafe on a wet or cold surface.
17. Do not use a cracked Carafe or a Carafe having a loose or weakened Handle.
18. Do not clean Carafe with cleansers, steel wool pads, or other abrasive material.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

Additional Important Safeguards

WARNING: This appliance generates heat and escaping steam during use. Use proper precautions to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. Do not pour liquid other than water and the cleaning solution specified in this manual into the Water Reservoir.
2. This Coffeemaker must be left to cool down for approximately 10 minutes before adding more water.

IMPORTANT: If Coffeemaker is not allowed to cool before immediate, repeated use, water placed in Carafes may become overheated. A spray of steam could be released from openings, creating a risk of burns.

3. DO NOT attempt to move an appliance containing hot liquids. Allow appliance to cool completely before moving.
4. Always use fresh, cold water in your Coffeemaker. Warm water or other liquids may cause damage to the appliance.
5. DO NOT lift Water Reservoir Covers or Filter Baskets until brewing is complete. Use Filter Basket Handle to remove Filter Basket from Carafe(s).
6. DO NOT put Carafes into a microwave oven.
7. Do not clean Thermal Carafes in the dishwasher. The glass liners cannot withstand the pressure and may break.

Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Short Cord Instructions

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a longer detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the cordset or extension cord should be at least as great as the electrical rating of the appliance, and (2) the cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

Electric Power

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

This appliance is **FOR HOUSEHOLD USE ONLY** and may be plugged into any polarized 120V AC electrical outlet. Do not use any other type of outlet.

 
 
Plasticizer Warning

CAUTION: To prevent Plasticizers from migrating from the finish of the counter top or table top or other furniture, place **NON-PLASTIC** coasters or place mats between the appliance and the finish of the counter top or table top.

Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.

Getting To Know Your Salton® CM42WHT Dual Thermal Carafe Coffeemaker

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

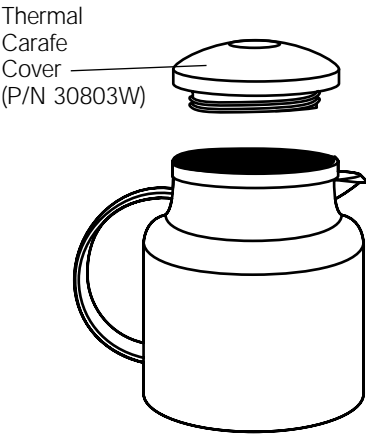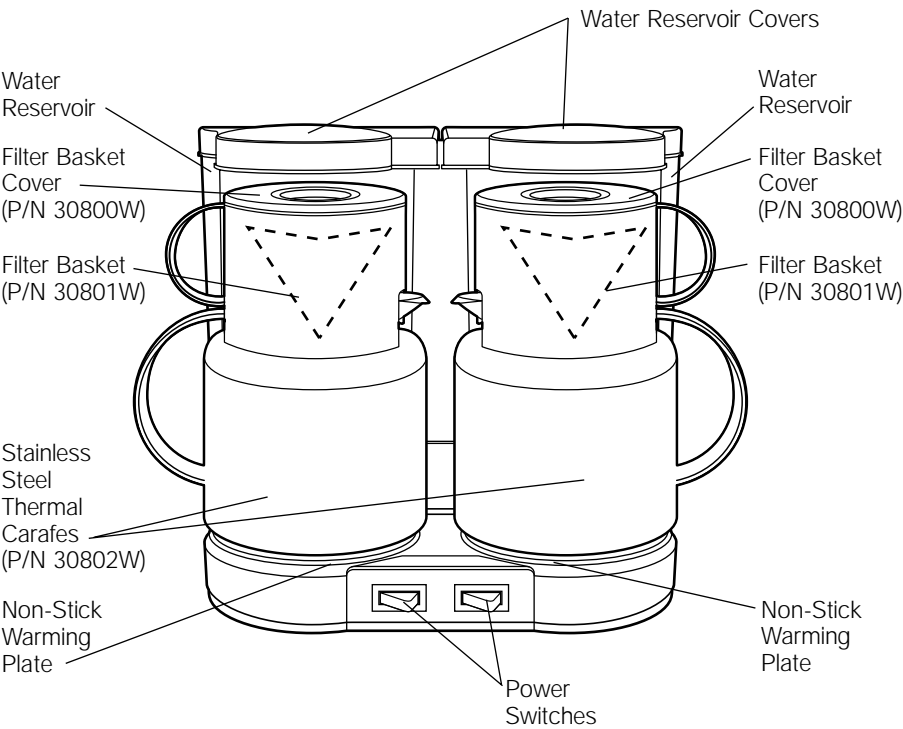

Before First Use

In order to assure perfect tasting coffee, thoroughly clean both Thermal Carafes, Thermal Carafe Covers and Filter Baskets in warm, soapy water, before using your Coffeemaker. Rinse well and dry thoroughly. Wipe unit with a soft, slightly damp cloth or sponge to remove any packing dust.

CAUTION: Never immerse the appliance, cord or plug in water or other liquid.

Before brewing coffee for the first time, allow cold water to cycle through your Coffeemaker without coffee or the use of a paper filter; this will clean the Water Reservoir prior to your first use.

IMPORTANT: Always use cold water when brewing coffee.

Coffee Filters

Cone-shaped paper filters are available locally at grocery stores and where Coffeemakers are sold. Standard #2 cone-shaped filters should be used. Permanent gold filters may also be purchased, eliminating the need for disposable papers filters.

The use of basket-style paper filters is not recommended, since they do not conform to the shape of the Filter Basket and may cause coffee to back up and spill over during brewing.

Brewing Coffee

Your Dual Carafe Coffeemaker is a two-in-one unit. Each side works independently of the other. You can choose to brew two pots at once, or one at a time.

NOTE: The amount of brewed coffee will always be less than the amount of water placed into Coffeemaker, since about 10% is absorbed by coffee grounds and filter.

1. Be sure both Power Switches are in the OFF (O) position.
2. Plug Coffeemaker into a 120V AC electrical outlet.
3. Fill both Thermal Carafes with cold water. These Carafes hold approximately 32 ounces of water each.

NOTE: FILL CARAFES TO 1/2 INCH BELOW THE MOUTH OF THE CARAFE. DO NOT FILL CARAFES TO THE VERY TOP.

4. Lift the Water Reservoir Covers and carefully pour water into one or both of the Water Reservoirs. Close Covers.

NOTE: DO NOT FILL PAST THE "FILL HOLE" IN THE WATER RESERVOIR AS THIS WILL CAUSE WATER TO SPILL FROM UNIT.

5. Place Filter Basket(s) securely onto one or both of the Thermal Carafes.
6. Place a paper #2 cone-shaped filter(s) into one or both of the Filter Baskets.
7. Fill one or both Filters with desired amount of coffee. Add one level tablespoon of coffee for each cup of coffee desired. If using a scoop, use one scoop (equivalent to two tablespoons) for every two cups of coffee. Increase or decrease the amount of coffee used to suit your individual taste.
8. Place the Filter Basket Cover(s) onto one or both of the Filter Baskets.


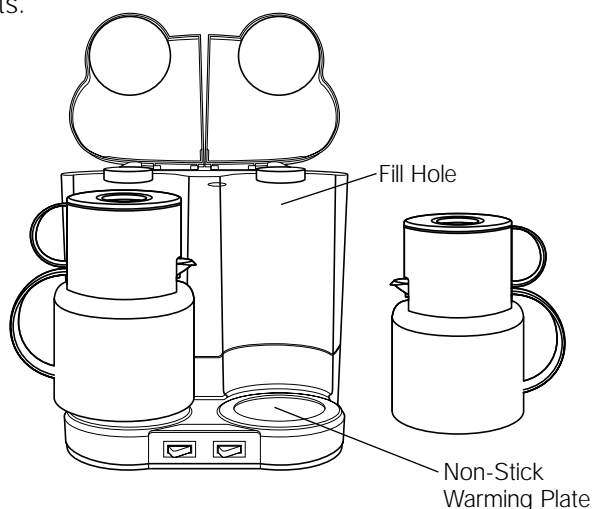 


FIGURE 1

Brewing Coffee *(Continued)*

 9. Carefully grasp the Handle of the Thermal Carafe(s) to move Filter Basket(s) with Cover(s) and place in position on the Non-Stick Warming Plate. (See Figure 1.)
10. Press the Power Switch(es) to the ON (I) position. When pressed, the Switch will illuminate, indicating the brewing process has started.
11. After the brewing process has finished, remove the Carafe(s) from the Warming Plate(s) and switch the unit OFF (O). Carefully grasp Filter Basket by the Handle, remove from Thermal Carafe and discard the coffee grounds.
12. Place the Thermal Carafe Cover(s) onto the Carafe and close it tightly. To serve coffee, turn the Lid counter-clockwise, a slight turn, until the arrow is pointing directly at the handle of the Thermal Carafe.

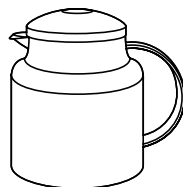

NOTE: The non-stick coated Dual Warming Plate which holds the Thermal Carafes is specially designed to maintain a lower temperature which will not harm the Thermal Carafes. It is safe to keep the Thermal Carafes on the Warming Plate after the brewing is complete. The Plate will get hotter during the brew cycle, but will cool considerably upon completion.

WARNING: Warming Plate is hot! Do not touch Warming Plate during or after brewing.

Brewing A Third Pot Of Coffee

It is recommended that the Coffeemaker should be in OFF (O) position for 10 minutes between cycles, in order to allow unit to cool. While unit is in OFF position, dispose of used coffee filter(s), and rinse Thermal Carafe(s), Filter Basket(s) and Filter Basket Cover(s) in water. Place a fresh filter(s) into one or both of the Filter Baskets. Repeat brewing procedure.

IMPORTANT: If Coffeemaker is not allowed to cool before immediate repeated use, water placed in Carafes may become overheated. A spray of steam could be released from openings, creating a risk of burns.

Hints For Great Tasting Coffee

- A clean Coffeemaker is essential for making great tasting coffee. Regular cleaning is highly recommended.
- Always use fresh, cold water in your Coffeemaker.
- Finer drip grinds promote fuller extraction and provide rich, full-bodied coffee. Regular grind will require slightly more coffee per cup to provide the strength of a finer grind.
- Store coffee in a cool, dry place. Once coffee has been opened, keep it tightly sealed in the refrigerator to maintain freshness.
- For optimum coffee, buy whole beans and grind them finely just before brewing.
- Do not re-use coffee grounds since this will greatly impair coffee flavor.
- Reheating coffee is not recommended. Coffee is at its peak flavor immediately after brewing.
- Small oil droplets on the surface of brewed, black coffee is due to the extraction of oil from the coffee grounds. Oiliness may occur more frequently if heavily roasted coffees are used. Overextraction may also cause oiliness, indicating a need to clean your Coffeemaker.
- Your Dual Thermal Coffeemaker is the perfect solution for households that prefer two separate blends of coffee. Now you can offer family and friends caffeinated or decaffeinated. Choose from coffee varieties and a wide array of flavored coffees.

Brewing Tea

This unit is ideal for serving a “mixed” crowd: tea drinkers and coffee drinkers. When brewing tea, make sure that your Filter Basket and Carafe are thoroughly clean. If the unit has been used previously for coffee, wash the pieces with warm, soapy water and rinse well. Follow directions for making coffee except instead of putting coffee in the Filter Basket, place loose tea into the paper filter. For your first pot of tea, we suggest one level teaspoon of loose tea per cup. Adjust the strength by using more or less tea.

User Maintenance Instructions

Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

Caring For Your Carafe

A damaged Carafe may result in possible burns from hot liquid.

To avoid breaking a Carafe:

1. Do not allow all liquid to evaporate from Carafe while on the Warming Plate. Do not heat Carafe when empty. If this happens, discard Carafe.
2. Discard Carafe if damaged in any manner. A chip or crack could result in breakage.
3. Never use abrasive scouring pads or cleansers as they will scratch and weaken the glass.
4. Do not place the Carafe on or near a hot gas or electric burner, in a heated oven, or in a microwave.
5. Avoid rough handling and sharp blows.
6. Do not clean Thermal Carafes in the dishwasher. The glass liners cannot withstand the pressure and may break.

Cleaning

After regular use:

Unplug from outlet and allow unit to cool for 10 minutes. Thoroughly clean Thermal Carafes, Thermal Carafe Covers and Filter Baskets in warm soapy water. Rinse well and dry thoroughly. Wipe unit with a soft cloth to dry.

Once a month:

Since mineral deposits from tap water can form a coating in the Coffeemaker, causing slower brewing times and possibly affecting the flavor of the coffee, we recommend the following cleaning:

Pour 8 ounces of vinegar into each of the Thermal Carafes and fill each Carafe with cold water. Carefully pour the water from each of the Carafes into each of the Water Reservoirs. Without coffee or filter paper, switch the unit to the ON (I) position and let the water run through the unit into the Thermal Carafes. Discard water after it has run through the machine. Rinse thoroughly.

Do not use any chemicals or abrasive cleaners.

 
IMPORTANT: Do not clean Thermal Carafes in the dishwasher.

The glass liners cannot withstand the pressure and may break.

Never immerse the appliance, cord or plug in water or any other liquid.

Storage

Unplug appliance, and allow to cool. There is a convenient Cord Storage area at the back of the machine. Simply feed the cord inside the storage area and store in its box or in a clean, dry place.

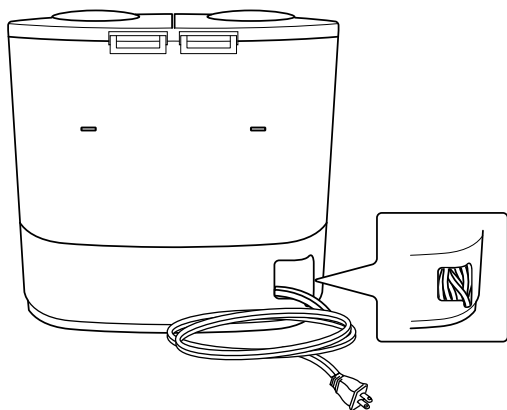

LIMITED ONE YEAR WARRANTY

Warranty: This product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1 (800) 233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number CM42WHT when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (800) 233-9054.

Out-of Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$12.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

ATTN: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 7366
Columbia, MO 65205-7366
1-800-233-9054
E-mail: Salton@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall Salton be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products: visit our website: www.eSalton.com

©2002 Salton, Inc. All rights reserved.

Made in China

P/N 61085A

8/02