 




Westinghouse

toasterBOX™

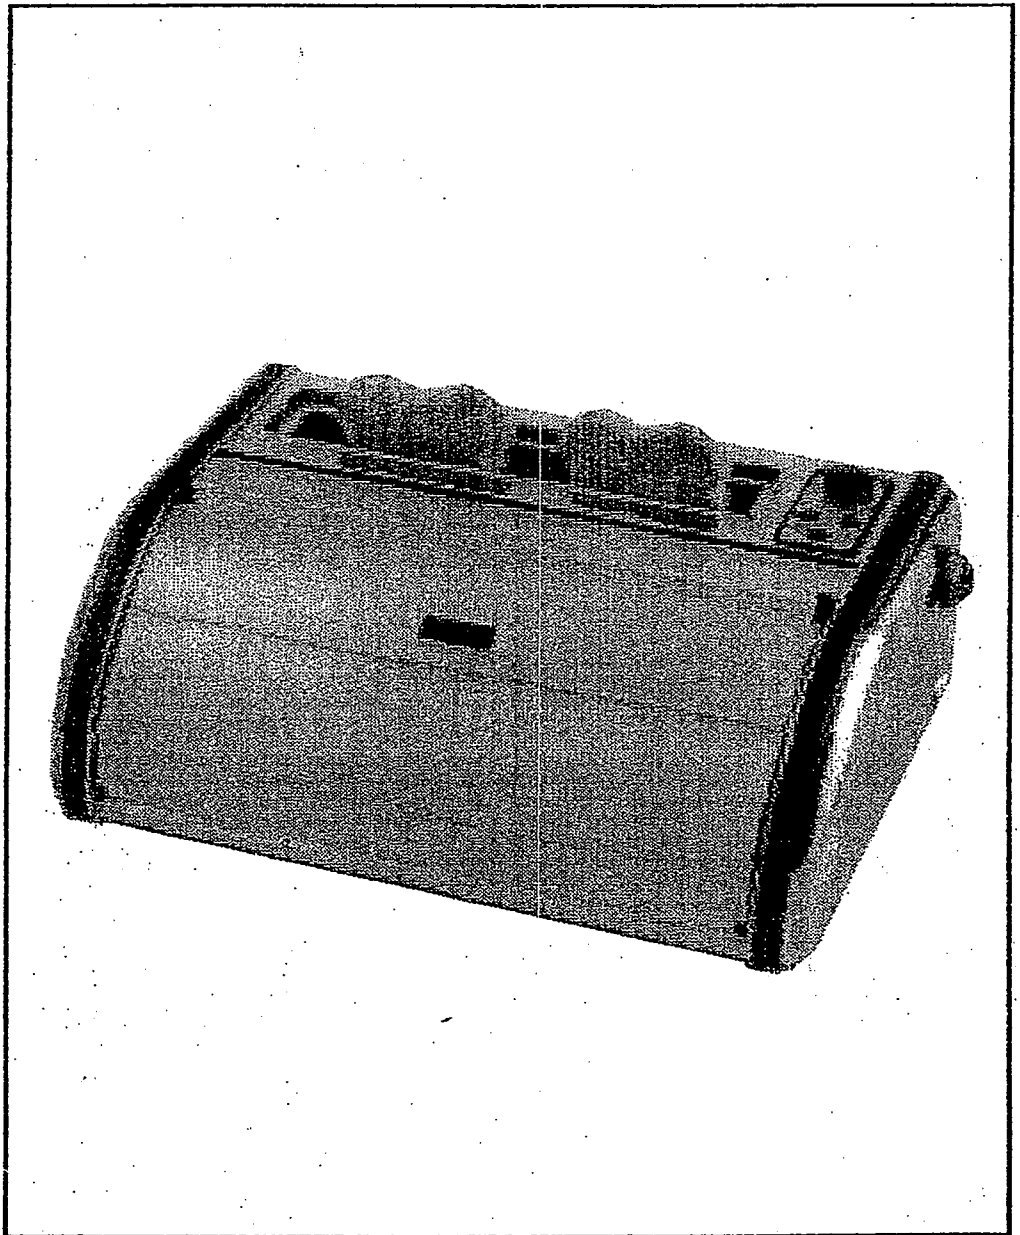

WST3000C
WST3000W
WST3000BLK

You can be sure...if it's Westinghouse

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs
3. To protect against electrical shock do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Top disconnect, press the **CANCEL**, then remove plug from wall outlet.
12. Oversize foods metal foil packages, or utensils must not be inserted in the Toaster as they may involve a risk of fire or electric shock.
13. A fire may occur if Toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
14. Do not attempt to dislodge food when Toaster is plugged in.
15. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS
For Household Use Only

ADDITIONAL IMPORTANT SAFEGUARDS

WARNING: ELECTRICAL SHOCK HAZARD. Never attempt to dislodge food inside the Toaster while the Toaster is plugged in. Doing so could cause an electrical shock hazard or a risk of fire.

CAUTION: This product is hot during operation and retains heat for some time after turning off.

Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Do not place anything on top of the Toaster while it is operating or while it is hot.

CAUTION: This appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, fires or other damage to persons or property.

1. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Do not leave this appliance unattended during use.
4. If this appliance begins to malfunction during use, immediately press **CANCEL** and unplug the cord. Do not use or attempt to repair the malfunctioning.
5. Use the toaster on a hard, flat surface. Do not place it near a flame or heat or on a soft surface (such as carpet). Avoid placing it where it may tip over during use. Dropping the Toaster could cause it to malfunction.
6. Avoid electric shock by unplugging the Toaster before cleaning.
7. THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

CAUTION:

- **DO NOT** toast toaster pastries with runny fillings or frosting.
- **DO NOT** toast torn slices of bread.
- **DO NOT** place buttered bread or wrapped food into the Toaster.
- **DO NOT** toast small-size breads like "melba", mini-baguettes, breadstick, etc.

Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS

 
 
 
A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and (2) the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

GETTING TO KNOW YOUR TOASTERBOX:

Congratulations on your purchase of the **Westinghouse® toasterBOX**, the world's first toaster with a built-in bread storage compartment. Your **toasterBOX** has a number of unique features. Please take a moment to acquaint yourself with its components:

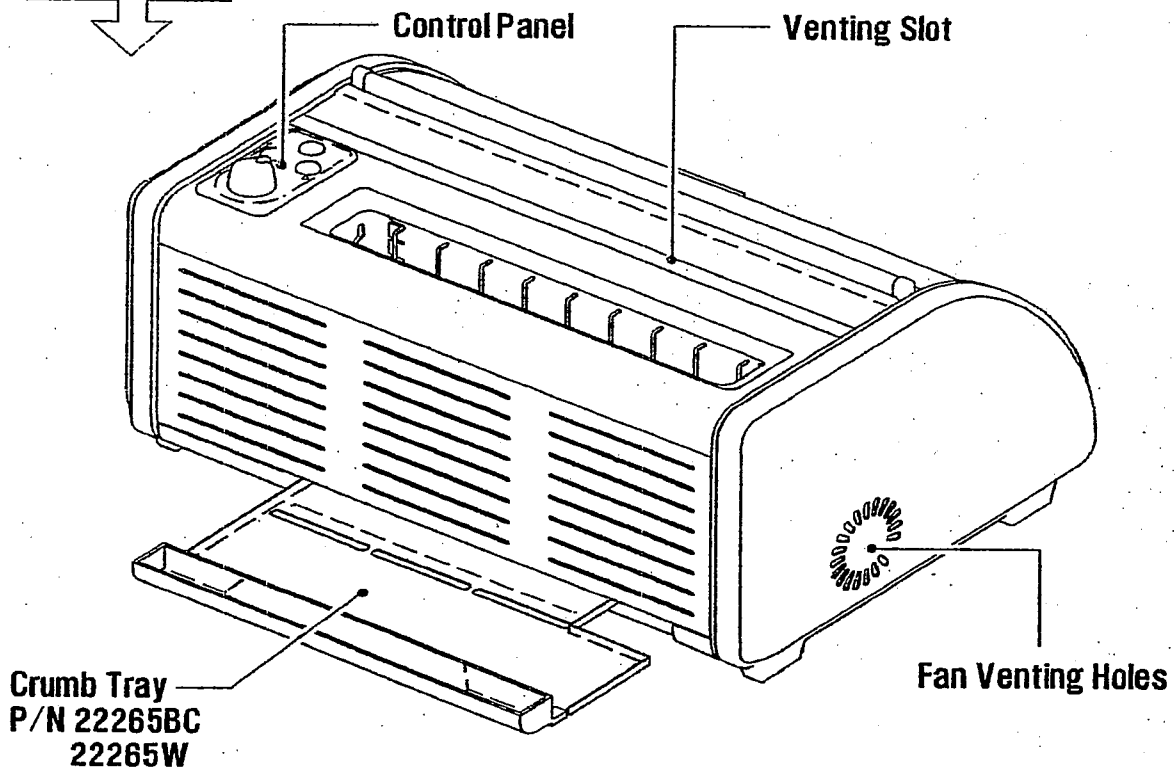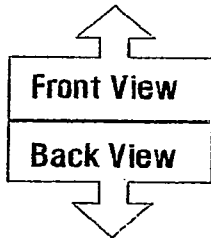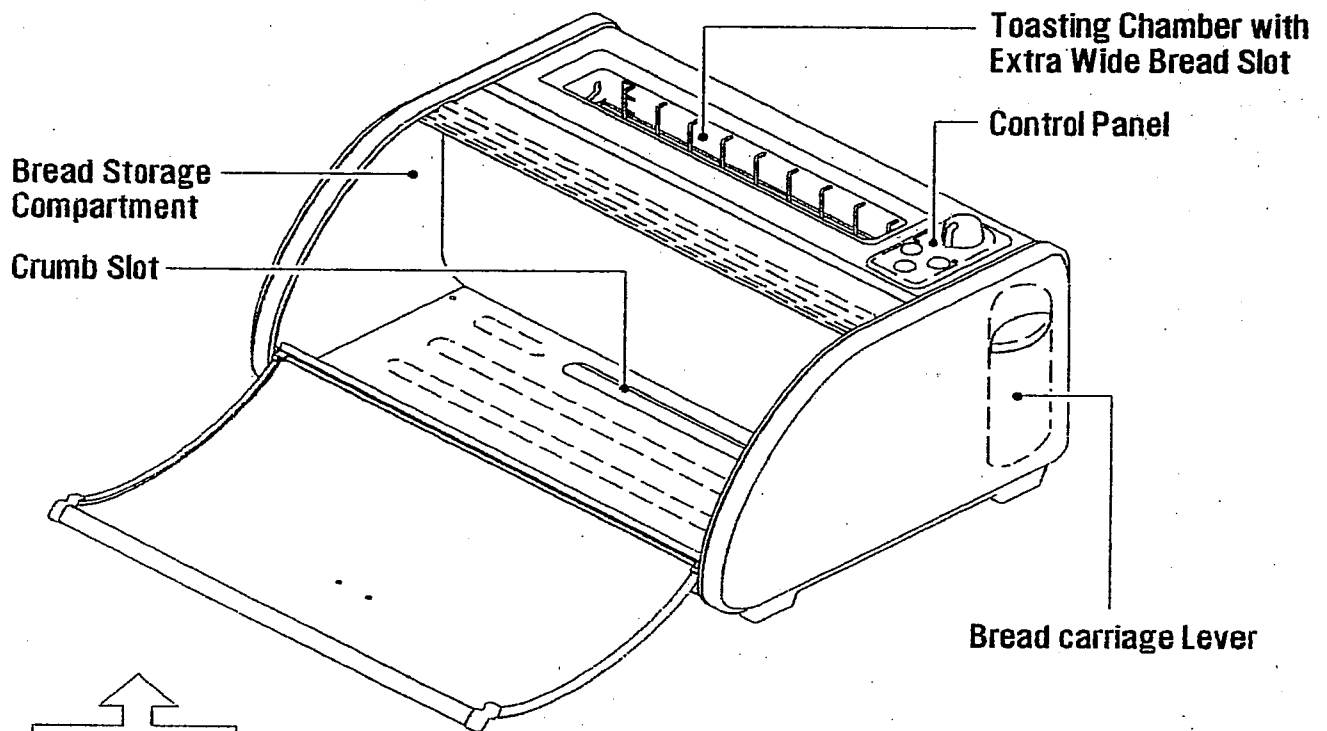

INSTRUCTIONS FOR USE:

Before using the toaster portion of your **toasterBOX** for the first time, you should run it through one toasting cycle without any bread inserted. This will remove the "brand new smell" that all heating elements make the first time they are used.

 
Place the unit on a sturdy, dry surface and plug the power cord into a standard, 120-volt electrical outlet. Turn the browning control knob counterclockwise to its maximum setting and depress the bread carriage lever. Make sure the room is well ventilated during this process. (This is simply to allow the smell to dissipate more quickly - there is nothing harmful about the odor.) After the toasting cycle is complete and the lever pops up, you will be ready to use your **toasterBOX**.

To toast bread:

- 1) Select the desired level of browning with the browning control knob. The browning level increases as you turn the knob counter-clockwise. At the maximum (darkest) setting the knob points to the extreme right (about 3 o'clock) and at the minimum (lightest) setting the knob points to the extreme left.
- 2) Place the bread in the bread slot. The slot is long enough to accommodate two regular-sized pieces of bread placed next to each other. It is also wide enough for thickly sliced bread.
- 3) Press the bread carriage lever down until it locks into place.
- 4) When the set degree of browning has been reached, the bread carriage lever will automatically pop up.
- 5) Remove the bread.
- 6) Fan remains on for 30 seconds to cool unit. Turns off automatically.

To toast bagels:

- 1) Slice the bagel in half.
- 2) Press the BAGEL button on the control panel. The button will illuminate.
- 3) Select the desired level of browning with the browning control knob.
- 4) Place one or two bagel halves in the bread slot, with the sliced edge (the "inside") of the bagel(s) facing forward.
- 5) Press the bread carriage lever down until it locks into place.
- 6) When the set degree of browning has been reached, the bread carriage lever will automatically pop up.
- 7) Remove the bagel.

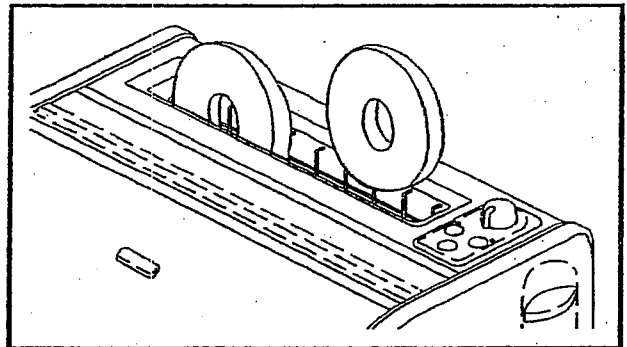

To store bread:

- 1) Place bread in compartment. Bread can be left in plastic or paper bag if desired.
- 2) Close door securely.

CONTROL PANEL AND OTHER FEATURES:

Browning Control Knob

- The required toasting time of the bread or bagel will vary depending on the type, thickness and freshness of the bread. Bagels and thicker breads require longer toasting times, as do breads with higher moisture content.
- When toasting only one piece of bread, the **browning control knob** should be set to a slightly lower setting.
- If you are re-toasting a slice of bread, set the browning control knob to a low (light) setting.

Bagel button

- Use **BAGEL** button when toasting bagels.

Defrost button

- To toast frozen bread or other frozen items (waffles, etc.), press the **DEFROST** button after the bread carriage lever has been locked down. The button will illuminate and the toasting cycle will automatically be extended.

Cancel button

- Press the **CANCEL** button at any time to stop the toasting cycle immediately. The bread carriage lever will return to its starting position and you can then remove the bread.

High-Lift feature

- Your **toasterBOX** is equipped with a special high-lift bread carriage lever. If you have difficulty removing small slices of bread or other food items, you can raise the bread carriage lever manually. This will allow easier access to the item in the toasting chamber. Do NOT use the high-lift feature if any food items are jammed in the toasting chamber. If items are jammed, unplug the **toasterBOX** and wait for it to cool down before attempting to remove the items.

GENERAL TOASTING & SAFETY HINTS:

- In order to achieve uniform browning, it is best to wait a minimum of 30 seconds between each toasting cycle.
- Fresh bread takes longer to toast than slightly stale bread; adjust the browning control knob accordingly.
- When toasting two or more slices of bread at once, it is recommended that they be of equal size and freshness.
- Your **toasterBOX** can be used to toast any foods designed for use in a toaster (bread, bagels, frozen waffles, tea cakes, toaster muffins, etc.). However, do not use items that are wider than the bread slots can accommodate.
- If oversized bread has somehow jammed the bread carriage lever in the down position, unplug the toaster and allow the bread to cool before attempting to remove the bread. Never insert any utensils into the toasting chamber of the **toasterBOX**.
- Your **toasterBOX** has a built in fan to keep the bread storage compartment at room temperature. The fan automatically activates when bread carriage lever is pressed. It remains on 30 seconds after toasting is completed to cool unit. Fan shuts off automatically.
- If the **toasterBOX** bread compartment gets unusually hot and no air is being drawn into the fan venting holes, this could indicate a fan malfunction. Repair should be undertaken by authorized personnel only.

CARE AND CLEANING:

The **toasterBOX** has a crumb tray that should be emptied and cleaned periodically. Before emptying the crumb tray, always unplug the **toasterBOX** and wait for it to cool down completely. Tap the sides of the unit lightly to dislodge any crumbs in the toasting chamber. Push any crumbs into crumb slot in bread compartment. Then remove the crumb tray by pulling it out toward the rear of the unit. If crumbs fall into venting slot, they can be removed once crumb tray is pulled out. Empty crumbs into the garbage and wash the crumb tray gently in warm, soapy water. Dry the tray thoroughly before reinstalling it in the **toasterBOX**. Never operate the toaster without the crumb tray, or if the crumb tray is wet. Always make sure the **toasterBOX** is unplugged and completely cooled before cleaning the outside of the unit. Wipe the outside and the bread compartment of the **toasterBOX** with a damp cloth and dry it with a another dry cloth or a paper towel.

- **NEVER immerse the toasterBOX in water.**
- **NEVER use sharp objects to scrape or clean the inside of the toasterBOX.**
- **NEVER insert your fingers or any utensils into the toasting chamber, venting slot and fan venting holes.**

LIMITED ONE YEAR WARRANTY

Warranty: This Westinghouse® • product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1 (800) 934-7455 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number WST2000BLK when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization (1 800 934-7455).

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$10.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:


Attn: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 6916
Columbia, MO 65205-1637
1(800) 934-7455
Email: Salton@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and in no event shall Salton be liable for any incidental or consequential damages, losses or expenses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

WESTINGHOUSE™,  and "YOU CAN BE SURE...IF IT'S WESTINGHOUSE™" are trademarks of WESTINGHOUSE ELECTRIC CORPORATION and used under license by Salton, Inc.

For more information on Salton products: Visit our website: www.eSalton.com