 


RELAXOR[®]

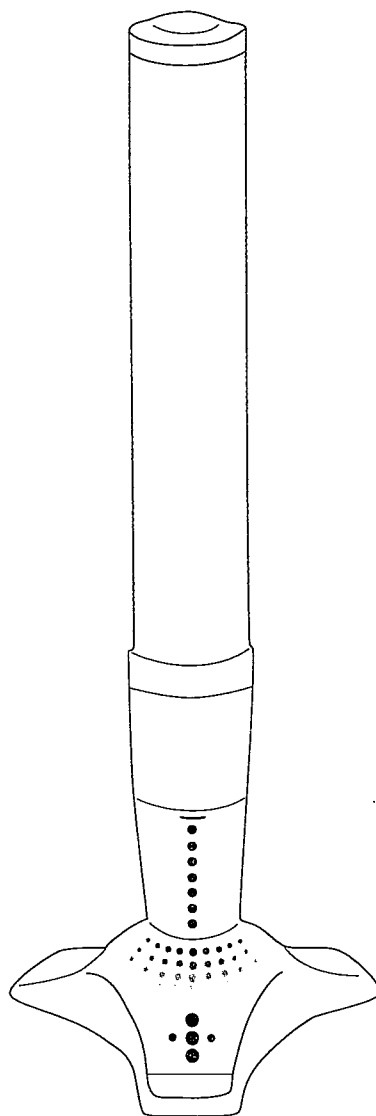

AUDIO BUBBLE LIGHT

OWNER'S MANUAL &
OPERATING INSTRUCTIONS

Model ABL8SL / ABL8BK / ABL8WH

WET TUNES[™]

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER: *To protect against risk of electrical shock.*

1. Do not place or store this lamp where it can fall or be pulled into a tub or sink.
2. Do not place or drop into water or other liquid.
3. Do not reach for a product that has fallen into water. Unplug immediately.

WARNING: *To reduce the risk of electrocution, fire, burn, or injury to person:*

1. This unit will be warm to the touch while in operation and until cooled after the unit has been turned off.
2. Keep out of the reach of children and pets.
3. Always operate the lamp on a firm, stationary surface.
4. Do not operate the lamp on any warm or hot surfaces; operate only at room temperature.
5. Do not use if cracked or damaged.

CAUTION: *Lamp is hot!*

- Turn off/unplug and allow cooling before replacing the bulb.
- Do not touch hot lens, guard or enclosure.
- Use only with a 12V, 10W max. Bulb.
- Do not touch the bulb at any time. Use a soft cloth. Oil from skin may damage bulb.
- Do not operate the unit with a missing or damaged bulb compartment.

SAVE THESE INSTRUCTIONS

PLASTICIZER WARNING

CAUTION: *To prevent Plasticizers from migrating from the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top. Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.*

FOR HOUSEHOLD USE ONLY

SETTING UP YOUR AUDIO BUBBLE LAMP

1. Carefully unpack lamp from box.
2. Remove Cap and carefully fill Tube with distilled water to within 1/2 to 1 inch from top of Tube. You may wish to rinse out the Tube first to remove any packaging dust that may have settled in the Tube.
3. Replace Cap.
4. Carefully place lamp on a flat, stable surface. Be careful not to spill water on Base. Speaker is not waterproof.
5. Plug Transformer into the "12V In" socket, located on the back of the Base. (See Illustration B)
6. Plug the other end of the Transformer into a standard household 120V electrical outlet.

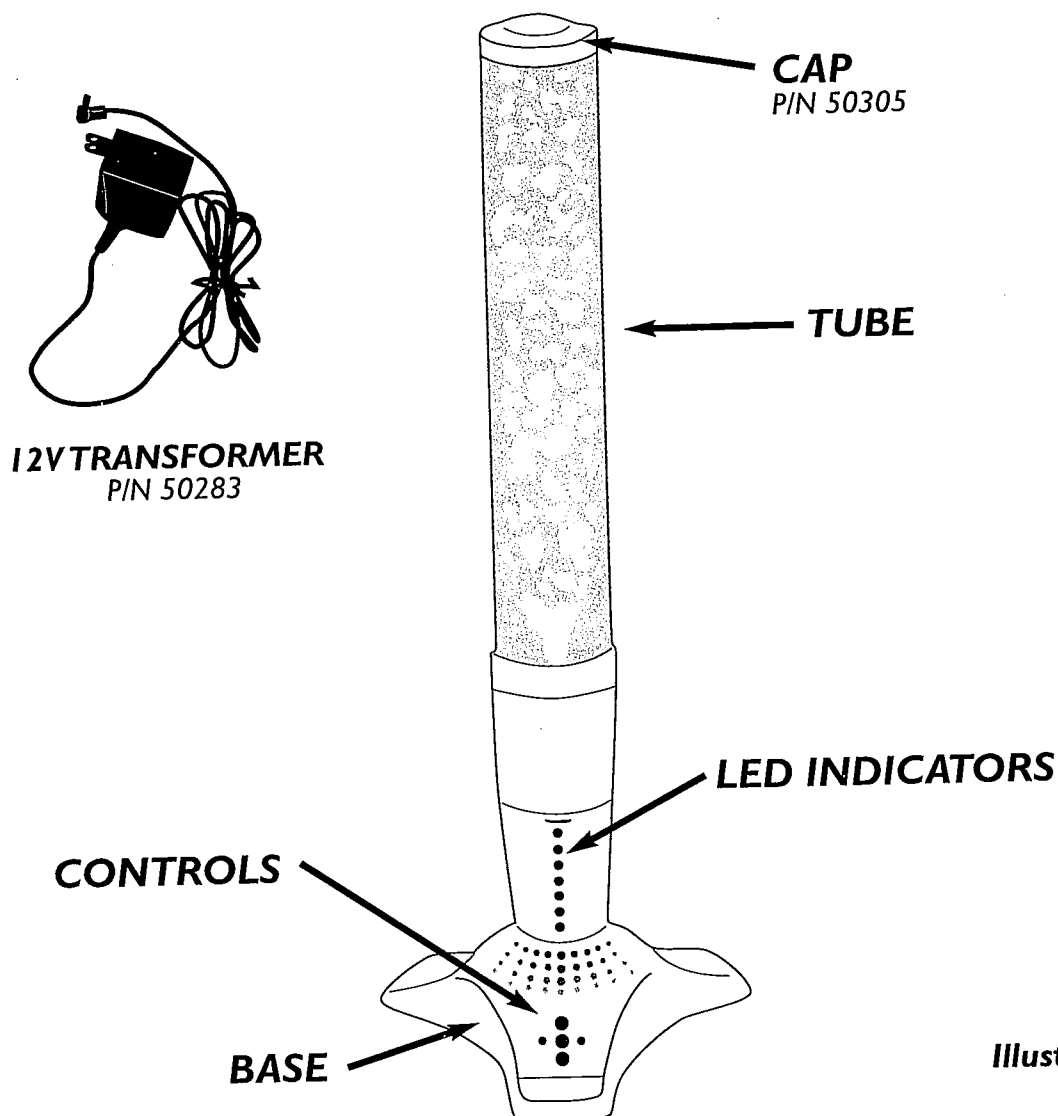 


Illustration A

OPERATING INSTRUCTIONS

TO ACTIVATE THE UNIT

1. Turn the Volume Power Switch to the right to activate the color-swirl light effect.
2. Activate the bubbles by turning the Bubble Switch to ON.
To deactivate unit turn the Bubble Switch back to OFF.

The bubbles will flow continuously and the four-color swirling light effect will be activated.

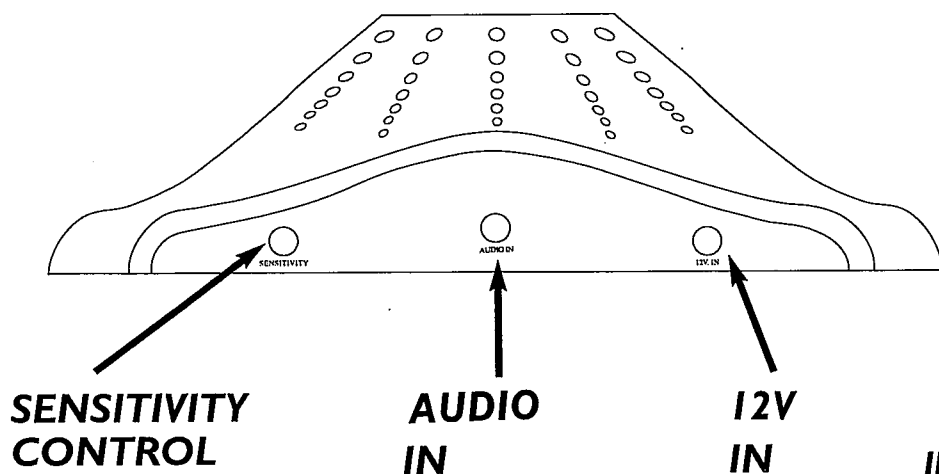 


Illustration B

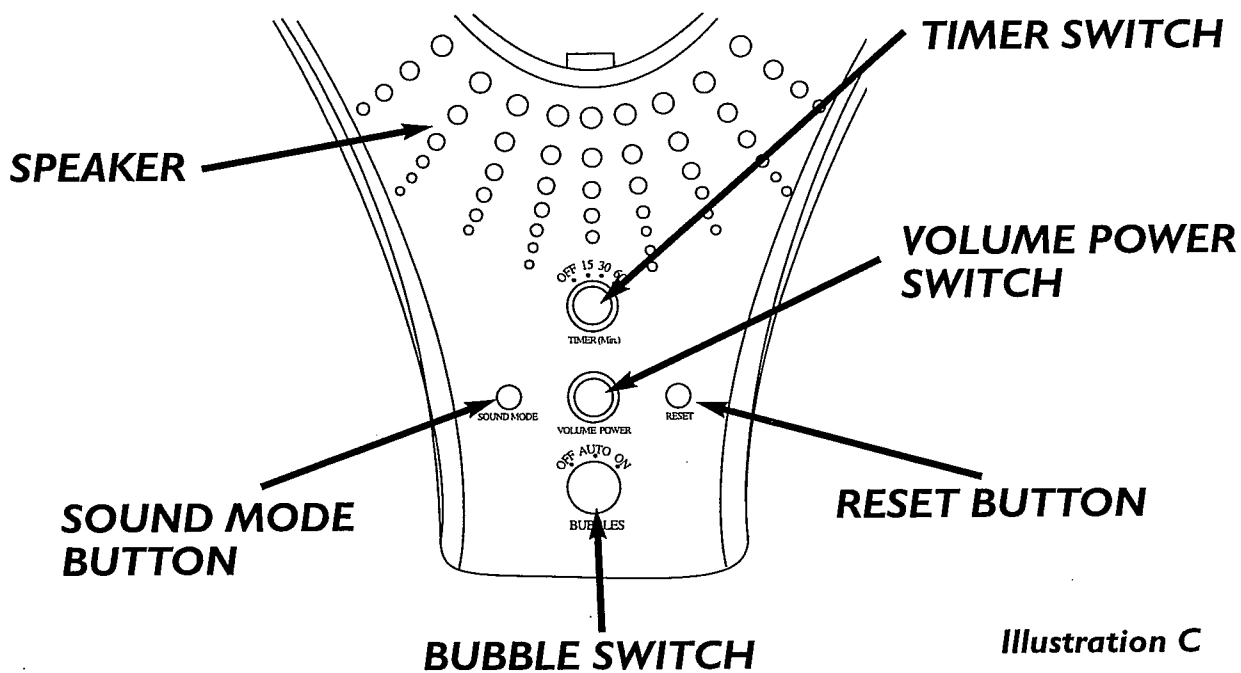 


Illustration C

NATURE SOUNDS

1. To activate the nature sounds, press the Sound Mode Button while the unit is on. This will activate one of four nature sounds.
2. Continue pressing the Sound Mode Button to toggle through the various sound modes: Bird Song, Ocean, Summer Night, Whale Dance, Random Mode (unit randomly selects sounds), and Continuous Mode (unit goes through all four sounds in order, continuously). (See Illustration D)
3. To deactivate the nature sounds press the RESET Button.

NOTE: Nature sounds will not work while anything is plugged into the Audio In socket.

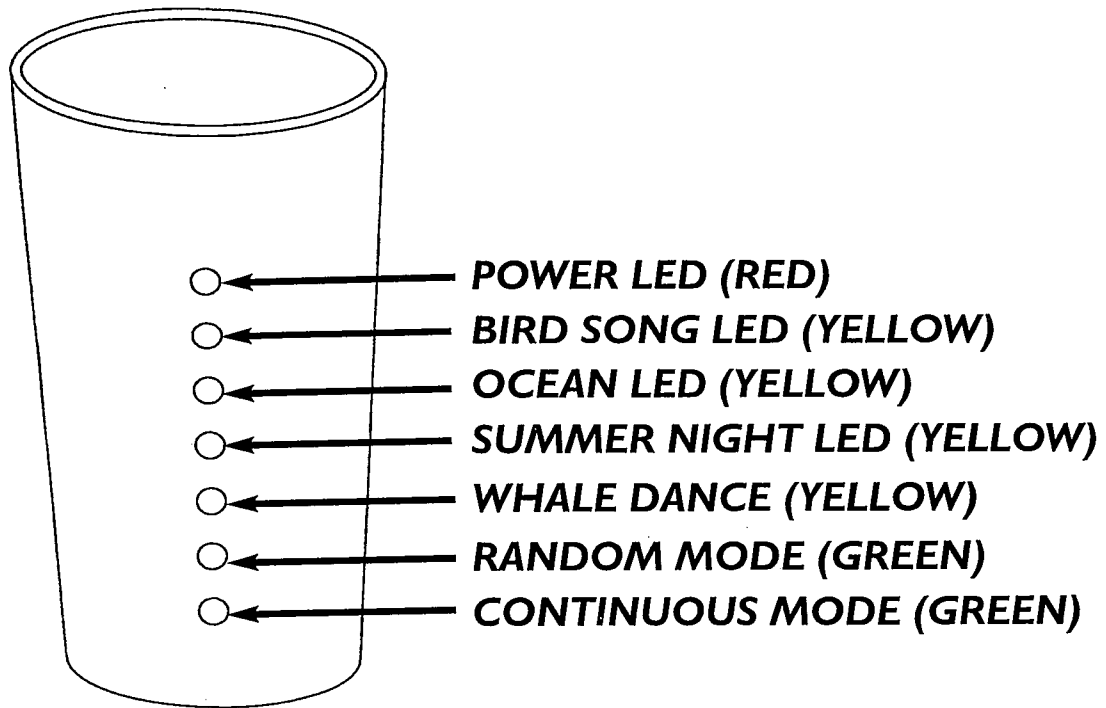 



Illustration D

EXTERNAL SOUND SOURCE

1. To play your own sounds through the speaker in the base, first select sound source. A variety of sound formats can be played through the Audio Bubble Light, including cassette tapes, CD's, AM/FM radio, MP3's, mini disks and even your television.
2. Plug RCA pin-type audio cables, or 3.5 mm mini plug cables into Audio Out terminal or Headphone Jack of sound source selected.
(See Illustration E)
3. Plug the other end of the cable into the Audio In socket located on the back of the base.
4. Activate external sound source. Sounds will now play through built-in Speaker in the Base.

NOTE: The quality of the sound output may vary depending on the source you select. We do not guarantee that every sound source will work with the unit.

 RCA PIN TYPE CABLES
PIN 50306

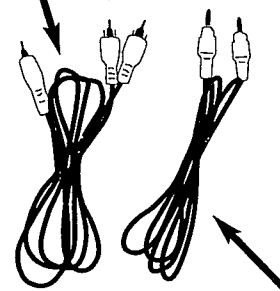

3.5 mm MINI PLUG CABLES
PIN 50307

Illustration E

SYNCHRO BUBBLES

1. To make the bubbles move in synchronization with the nature sounds or your external sound source, turn the Bubble Switch to AUTO, before or while playing nature sounds or music. The bubbles will now move in synchronization.
2. To increase the bubble sensitivity, gently turn the Sensitivity Adj. Knob located on the back of the Base counterclockwise.
3. To decrease bubble sensitivity, gently turn the Sensitivity Adj. Knob clockwise.

NOTE: Varying the volume of your external sound source will effect the intensity of the bubbles in the same manner as the Sensitivity Adj. Knob. However, varying the volume of the unit's Speaker will not affect the intensity of the bubbles.

NOTE: Some music will work better for illustrating the synchronized bubble effect. Experiment with your favorite sounds or CD's to see which ones work best.

TIMER

This unit is equipped with an automatic shut-off Timer that deactivates the unit after your choice of 15, 30 or 60 minutes. To activate, simply turn the Timer Switch to the desired time. Unit will automatically shut off after time has expired. *DOES NOT TURN Light off ONLY the bubbles.*

 
USER MAINTENANCE INSTRUCTIONS

This appliance has no user serviceable parts. Do not try to repair it yourself. Refer to the warranty section of this manual. However, the bulb can be replaced. Refer to the **CHANGING THE BULB** section of this manual.

TO CLEAN: Unplug appliance and allow it to cool. Use a soft, slightly damp cloth or sponge to wipe the surface. Never use abrasive cleaners or solvents, as they may scratch the surface. Do not get the speaker wet.

TO STORE: Unplug Audio Bubble Lamp, drain water and allow unit to cool and dry out. Store the Audio Bubble Lamp in its box or in a clean, dry place. Never store unit while it is still plugged in.

CHANGING THE BULB: Unplug unit and drain water. Remove the small screw located at the back of the Housing, just below the transparent Tube. After removing the Screw, slide this section of the Housing down to reveal the Bulb Compartment. Replace Bulb with a 12V, 10 W max. bulb. Slide Housing back up and replace Screw.

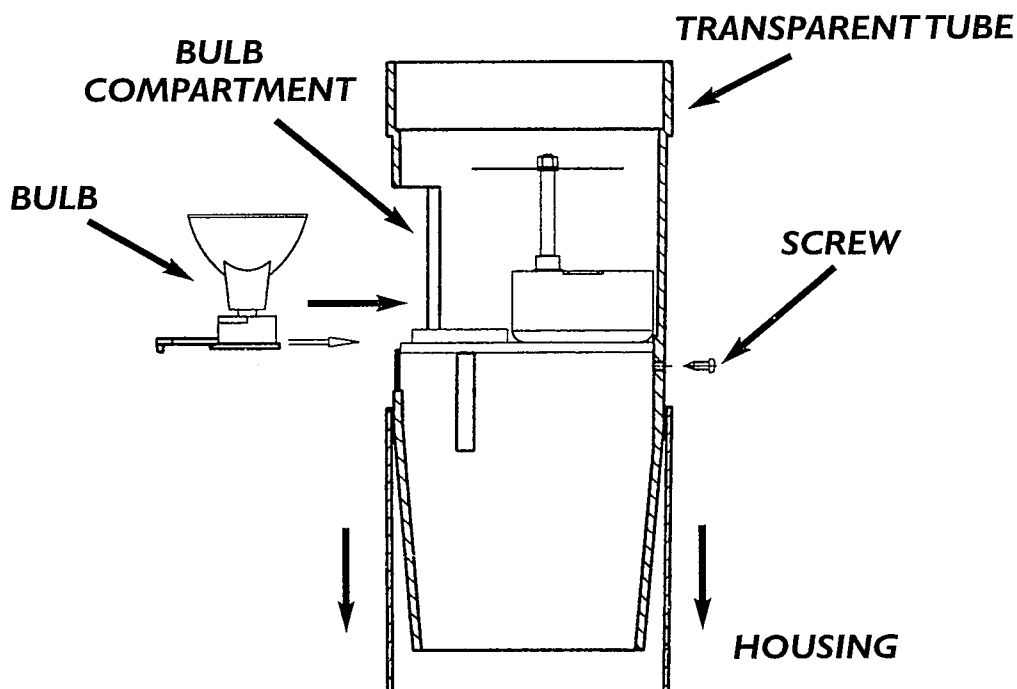

LIMITED ONE YEAR WARRANTY

Warranty: This Relaxor® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1 (800) 233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number ABL8SL when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (800) 233-9054.

Out-of Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$6.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

ATTN: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 1637
Columbia, MO 65205-1637
1-800-233-9054
E-mail: Salton@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall Salton be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products: visit our website: www.salton-maxim.com

©2001 Salton, Inc. All rights reserved.

Made in China

P/N 60859

09/01

