 


OWNER'S MANUAL

Model No. CO3WHT

Tall Can Opener

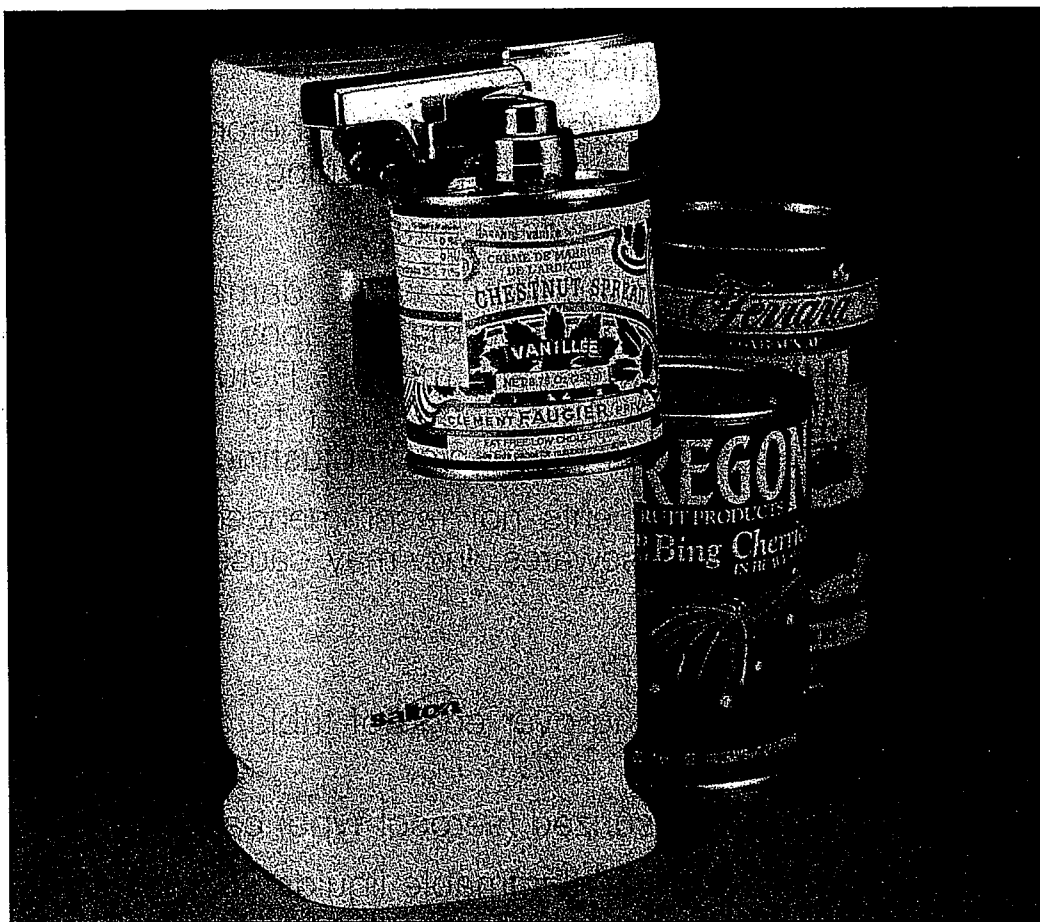

salton®

Important Safeguards

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- 1. READ ALL INSTRUCTIONS.**
- 2.** To protect against electrical hazards, do not immerse in water or other liquid.
- 3.** Close supervision is necessary when any appliance is used by or near children.
- 4.** Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- 5.** Avoid contact with moving parts
- 6.** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the Salton/MAXIM Service Center for examination, repair or electrical or mechanical adjustment.
- 7.** The use of attachments not recommended or sold by Salton/MAXIM Housewares, Inc. may cause fire, electric shock or injury.
- 8.** Do not use outdoors.
- 9.** Do not let cord hang over edge of table or counter or touch hot surfaces.
- 10.** Do not open pressurized (aerosol-type) cans.
- 11.** Do not open cans of flammable liquids such as lighter fluids.

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

Save These Instructions

Polarized Plug

This appliance has a **polarized plug** (one blade is wider than the other): To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

 
Short Cord Instructions

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a longer detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

Getting To Know Your Salton® Tall Can Opener

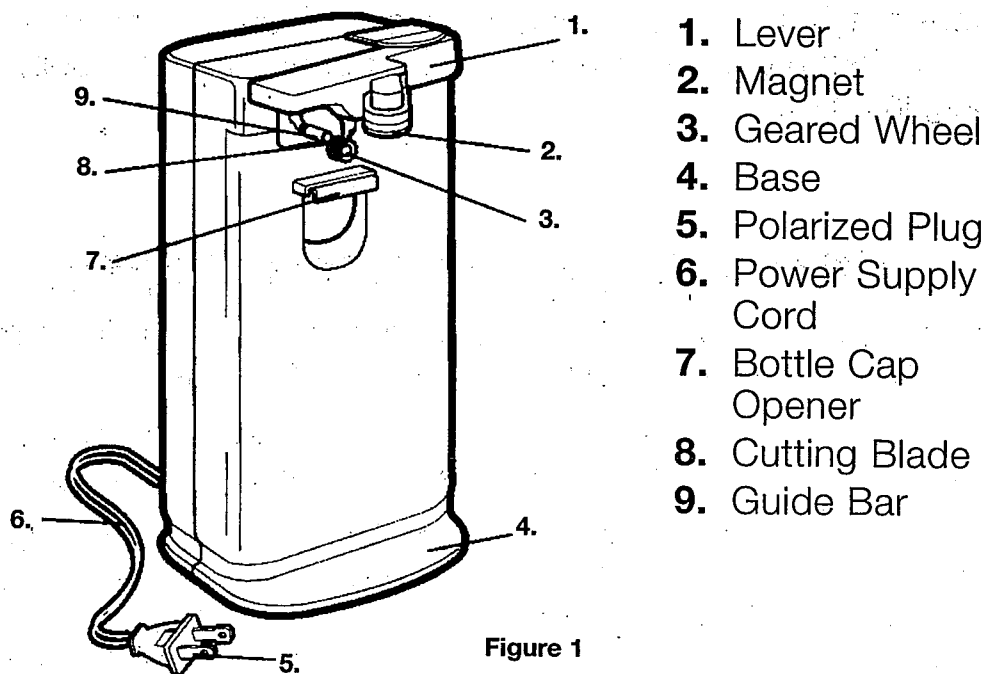


Instructions For Use TO USE CAN OPENER

1. Place Can Opener on a level surface.
2. Raise Lever, place can under the Guide Bar and against the Geared Wheel. (See Figure A to identify parts.)
3. Press down on Lever to pierce lid of can. This automatically starts the cutting action. The Can Opener will continue to cut until the lid is completely severed from the can.
4. Grasp the can, then raise the Lever to release the can.
5. Carefully remove lid from the magnet; use caution to avoid injury from edge of lid.

TO USE BOTTLE OPENER


1. Unplug appliance from electrical socket.
2. To steady, position one hand on top of the Can Opener.
3. Place bottle cap edge under Opener Flange.
4. Apply pressure on bottle downward until bottle cap pops off.
(See Figure B.)

 NOTE: This bottle opener is not recommended for bottles having "Twist-Off" caps.

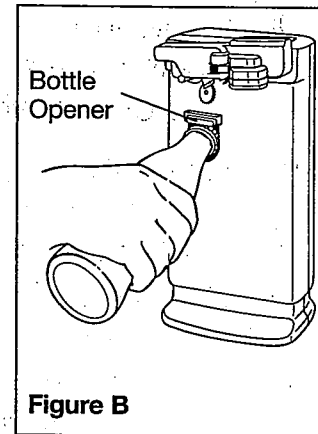

TO USE KNIFE/SCISSORS SHARPENER

 1. Turn the unit sideways so that the knife/scissors sharpener is to your right. (Figure C.)
2. Press down Lever.
3. Place blade lightly in either left or right groove. Draw knife slowly toward you with a slow, even motion.
4. Place blade in other groove and repeat 4 or 5 times, alternating from one groove to the other until desired sharpness is achieved.
5. The Knife/Scissors Sharpener can also be used for sharpening scissors. A larger groove at the side of the sharpener is designed especially for scissors. Place one blade of the scissors in the groove, and then draw it toward you slowly and evenly. Repeat with the other blade.

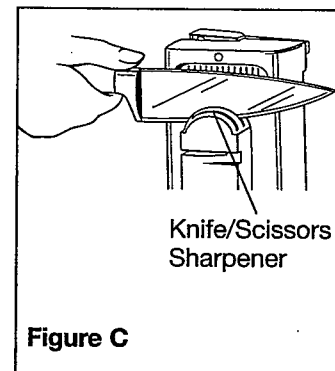

SPECIAL ATTENTION: Blades to be sharpened should be clean. Do not sharpen knives that have serrated blades.

User Maintenance Instructions

Unplug unit from electrical outlet. To remove Lever, hold Can Opener facing you. Lift the Lever upward and gently pull toward you. Wash Lever in warm, soapy water and wipe outside surfaces of unit with a damp cloth.

To replace the Lever, hold the Can Opener facing you with the Lever in the lifted position, and put the long pivot into the pivot hole. At the same time the Guide Bar will align with the slot on the Lever (see Figure C). Be sure to push completely into pivot hole. Then let Lever drop back onto top of Can Opener. If you do not push Lever completely into hole, it will not drop back onto top of opener.

IMPORTANT NOTICE

If any parts are missing or defective,

DO NOT return this product.

Please call our Customer Service Department for assistance.

800-233-9054 Monday - Friday 9am - 5pm CST

Thank You

ONE-YEAR LIMITED WARRANTY

This Salton/MAXIM product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares, Inc., or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton/MAXIM Housewares, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at Salton/MAXIM's option) when the product is returned to the Salton/MAXIM facility. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair

Should the appliance malfunction, you should first call toll-free 1-800-233-9054 **between the hours of 9:00 am and 5:00 pm Central Standard Time** and ask for CUSTOMER SERVICE stating that you are a consumer with a problem.

In-Warranty Service (USA) for an appliance covered under the warranty period, no charge is made for service or postage. Call for pre-paid return mailing label. (U.S. Customers Only)

In-Warranty Service (Canada) for an appliance covered under the warranty period, no charge is made for service or postage. Please return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the address listed below. Customs duty/brokerage fee, if any, must be paid by the consumer.

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$6.00 (U.S.) for return shipping and handling.

Salton/MAXIM cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem; your full return address and daytime phone number; a note describing the problem you experienced; a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Return the appliance to:

ATTN: Repair Department, Salton/Maxim Housewares, Inc.
550 Business Center Drive, Mt. Prospect, Illinois 60056

For more information on Salton/MAXIM products:

visit our website: <http://www.salton-maxim.com> or salton@saltonusa.com