 


# 8 CUP COFFEEMAKER WITH THERMAL CARAFE

---



MODEL WST4006ZE

**OWNER'S MANUAL**



**Westinghouse**

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
7. The use of an accessory not evaluated for use with this appliance may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, turn any control to "off", then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Be certain Lids are securely in place before operating appliance.
14. Scalding may occur if the lid is removed during the brewing cycles.

## SAVE THESE INSTRUCTIONS

**For Household Use Only**

# ADDITIONAL IMPORTANT SAFEGUARDS

**WARNING:** This appliance generates heat and escaping steam during use. Use proper precautions to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Use **water only** in this appliance! Do not put any other liquids or food products in this appliance. Do not mix or add anything to the water placed in this appliance, except as instructed in the User Maintenance Instructions to clean the appliance.
4. DO NOT attempt to move an appliance containing hot liquids. Allow appliance to cool completely before moving.
5. Keep appliance at least 4 inches away from walls or other objects during operation. Do not place any objects on top of appliance while it is operating. Place the appliance on a surface that is resistant to heat.
6. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
7. If this appliance falls or accidentally becomes immersed in water or any other liquid, unplug it immediately. **Do not reach into the water! Do not use this appliance after it has fallen into or has become immersed in water.** Contact Consumer Service for examination and repair.
8. Do not leave this appliance unattended during use.
9. The appliance must be left to cool down sufficiently before adding more water to avoid splattering.
10. Always use fresh, cool water in your appliance. Warm water or other liquids, except as listed in cleaning section, may cause damage to the appliance.
11. DO NOT put Thermal Carafe into a microwave.
12. DO NOT lift Filter Basket Lid until brewing is complete, and all parts have cooled.
13. The Carafe is designed for use with this appliance. It must never be used on a range top.
14. Do not use a damaged Carafe or a Carafe having a loose or weakened handle.
15. CAUTION: To prevent injury when utilizing Pause and Pour (drip-stop) feature, replace Carafe within one minute of removing during brewing process.

## POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## SHORT CORD INSTRUCTIONS

A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a longer detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and (2) the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

## ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

## PLASTICIZER WARNING

**CAUTION:** To prevent Plasticizers from migrating from the finish of the countertop or tabletop or other furniture, place **NON-PLASTIC** coasters or placemats between the appliance and the finish of the countertop or tabletop.

**Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.**

**WARNING—TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THE BOTTOM COVER. NO USER-SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.**


## COFFEE YIELD

8-Cup Coffeemaker: 8 (5 oz.) cups.

**NOTE:** A 5 oz. cup is the American industry standard and is used by most Coffeemaker manufacturers. To fill your favorite mug, fill Coffeemaker reservoir with enough water for 2 cups (10 ounces).

# GETTING TO KNOW YOUR WESTINGHOUSE WST4006ZE 8 CUP COFFEEMAKER WITH THERMAL CARAFE

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

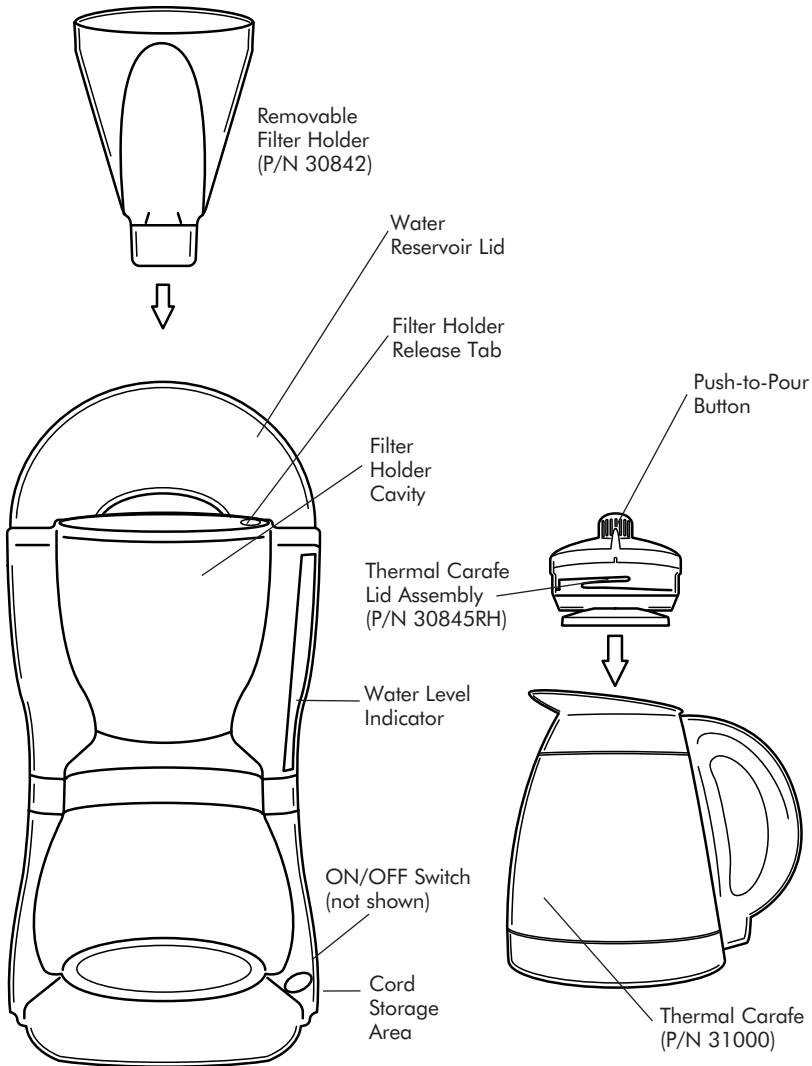

## BEFORE USING FOR THE FIRST TIME

**CAUTION:** To protect against electric shock, do not immerse the Coffeemaker or allow AC cord to come into contact with water or other liquids.

1. After carefully unpacking from carton, the inside of your Coffeemaker and Thermal Carafe must be cleaned. Remove any labels from the outer stainless steel surfaces.
2. Brew 8 (5 oz.) cups of fresh water only. Follow the OPERATING INSTRUCTIONS, but do not add coffee grounds to the filter.
3. When all the water has brewed into the Thermal Carafe, switch the Coffeemaker OFF. The ON Light will turn off.
4. Allow the Coffeemaker to cool for 15 minutes, discard the water from the Carafe, then repeat steps 2 and 3.
5. After the second pot of water has cooled, discard the water and thoroughly wash the Removable Filter Holder, Thermal Carafe and Carafe Lid in warm, soapy water. Dry all parts thoroughly.


## HINTS FOR BEST RESULTS

1. We recommend using coffee which has been ground specifically for automatic drip coffeemakers. This type of coffee is prepared specifically for your Coffeemaker's brewing system and promotes fuller extraction to provide rich, full-bodied coffee.
2. Use only cone-shaped filters with this Coffeemaker. Cone-shaped paper filters are available locally at grocery stores. Use standard, #4 filters. Do not use basket-style paper filters.
3. A clean Coffeemaker is essential for making great tasting coffee. Regular cleaning, as specified in the User Maintenance Instructions, is highly recommended.
4. Always use fresh, cold water in your Coffeemaker.
5. Store coffee in a cool, dry place. Once coffee has been opened, keep it tightly sealed in the refrigerator to maintain freshness.
6. For optimum coffee, buy whole beans and grind them finely just before brewing.
7. Do not re-use coffee grounds since this will greatly impair coffee flavor.
8. Reheating coffee is not recommended. Coffee is at its peak flavor immediately after brewing.


# OPERATING INSTRUCTIONS

**CAUTION:** Use this product with proper AC voltage rating only. Be sure to unplug the power cord when Coffeemaker is not in use for extended periods of time.

1. Your Thermal Carafe has a specially designed locking Lid. To remove Thermal Lid, use Lid guides to turn Lid counter-clockwise until the arrows line up. When the arrows are aligned, lift Lid up and out of the Carafe.
2. Fill the Thermal Carafe with cold water to the level for the desired number of (5-oz.) cups (1-8). Replace the Carafe Lid by lining up the arrows on the Lid and the Carafe. Turn the Lid clockwise until the arrow on the Lid faces the front spout of the Carafe.
3. Lift the hinged Lid on top of the Coffeemaker and slowly pour the water from the Carafe into the Water Reservoir.
4. Turn the Filter Holder Release Tab to UNLOCK. Grasp the Removable Filter Holder and lift straight up and out of the Filter Holder Cavity. Insert a #4 paper coffee filter (or a permanent gold filter) inside the Removable Filter Holder.

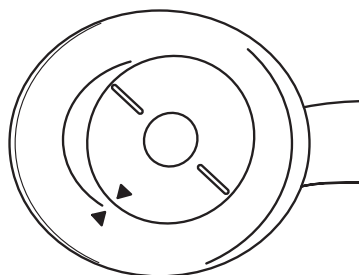

To remove Thermal Lid, use Lid guides to turn Lid counter-clockwise until the arrows line up.

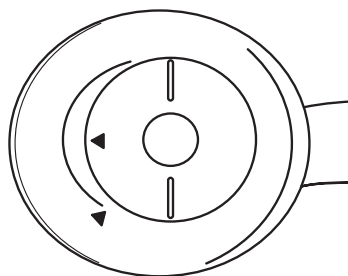

Turn the Lid clockwise until the arrow on the Lid faces the front spout of the Carafe.

**NOTE:** Do NOT replace the Thermal Carafe until the Coffeemaker is ready to begin brewing coffee.

**NOTE:** For optimal heat retention, preheat the Thermal Carafe by rinsing with hot water prior to placing the empty Thermal Carafe onto the Coffeemaker.


5. Place coffee grounds in the filter, using one level tablespoon of drip grind coffee for each cup of brewed coffee.

## OPERATING INSTRUCTIONS (Cont.)

6. Replace the Removable Filter Holder by pushing it down into the Filter Holder Cavity in the front of the Coffeemaker. When properly seated, it will snap securely into place.
7. Press and lock down the Push-to-Pour Button so that the Lid is in the OPEN position. Replace the Thermal Carafe onto the Coffeemaker; the Carafe will snap easily into position under the Anti-Drip assembly.
8. Plug the appliance into a standard 120V AC electrical outlet.
9. When brewing is completed, the Push-to-Pour Button will be raised and in the CLOSED position. You may remove the Thermal Carafe and place it on a flat, heat resistant surface. Coffee will remain hot in the Thermal Carafe.



Press and lock down the Push-to-Pour Button so that the Lid is in the OPEN position

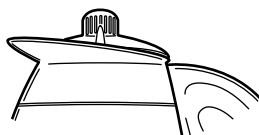

When brewing is completed, the Push-to-Pour Button will be raised and in the CLOSED position

**WARNING: Do not touch bottom of Carafe, it will be hot after brewing.**

10. To pour, press and lock down the Push-to-Pour Button.

**NOTE:** If the Push-to-Pour Button is difficult to depress, turn the Lid back to the OPEN position by aligning arrows on the Carafe and the Lid. By removing the Lid, you will relieve pressure. Replace Lid and lock — turn Lid clockwise so that the arrow on the Lid faces the spout of the Carafe.

11. **Remember to press the Push-to-Pour again to release and seal the Thermal Carafe.**

**NOTE:** The amount of coffee in the Carafe may be slightly less than the amount of water placed in the Water Reservoir, since some of the water is absorbed by the coffee grounds.

# **OPERATING INSTRUCTIONS (Cont.)**

## **PAUSE AND POUR FEATURE**

1. After approximately 2 cups of coffee has been brewed the Carafe may be slowly removed and the coffee will stop dripping.
2. The flow valve is located on the bottom of the Filter Holder and is activated when the Carafe is removed. This design makes it possible for you to remove the Carafe and pour a cup of coffee before the entire pot is brewed.
3. When using this feature, make sure that the Carafe is replaced under the Filter Holder within one minute to prevent over flow.

## **TO BREW A SECOND POT OF COFFEE**

1. To brew a second pot of coffee, turn the Coffeemaker off and allow it to cool. Empty used coffee grounds and repeat steps for brewing coffee.

**CAUTION:** Failure to allow Coffeemaker to cool may cause water to overheat and spray hot steam. The hot steam can cause severe burns.

# USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Contact a qualified appliance repair technician if the product requires servicing.

## CARE AND CLEANING

1. Never use abrasive scouring pads or cleansers as they will damage the stainless steel finish.
2. Do not place the Carafe on or near a hot gas or electric burner, in a heated oven, or in a microwave.
3. Avoid rough handling and sharp blows.

## CLEANING INSTRUCTIONS

**NOTE:** Do not place anything other than water or the vinegar cleaning solution specified in this manual into the Water Reservoir.

1. To clean your Coffeemaker after brewing coffee, be sure the Coffeemaker is turned OFF, unplugged and is cool. Discard the paper filter.
2. Wipe the outside of your Coffeemaker with a soft, damp cloth and dry. Do not use abrasive cleaners or scouring pads.
3. Hand wash Removable Filter Holder in warm, sudsy water. **DO NOT PLACE IN DISHWASHER.**
4. The Thermal Carafe and Lid may be washed in warm, soapy water or place in the top rack of a dishwasher.

**WARNING: Never immerse the Coffeemaker body in water or other liquid.**

**WARNING:** Rinse Water Chamber with cold water periodically. NEVER use a cloth to clean or dry the Water Chamber as the cloth will leave a lint residue and may clog and cause damage to your Coffeemaker.

# USER MAINTENANCE INSTRUCTIONS

(Cont.)

## MINERAL DEPOSITS/DECALCIFYING

Your Coffeemaker must be cleaned when you begin to notice excessive steaming or the brewing time increases considerably. This condition is caused by a buildup of lime and mineral deposits from your water. If the pumping action stops before all the water has been pumped out of the machine, then the appliance requires decalcification.

The frequency of decalcification depends on the hardness of water used. The following table gives the suggested decalcification intervals:

## SUGGESTED DECALCIFICATION INTERVAL

Type of water	Frequency of decalcification
Soft water	every 80 brewing cycles
Hard water	every 40 brewing cycles

# **USER MAINTENANCE INSTRUCTIONS**

**(Cont.)**

## **HOW TO DECALCIFY YOUR COFFEEMAKER**

1. Place a paper filter into the Removable Filter Holder. Make sure the Removable Filter Holder fits securely back into the unit.
2. Fill Carafe with a solution of 2 tablespoons white vinegar to one liter of cold water. Pour the water and vinegar solution into the Water Reservoir.
3. Place the empty Carafe onto the Coffeemaker. Plug the Coffeemaker into an outlet and switch the Coffeemaker ON.
4. Keep the Coffeemaker ON until the Carafe is half full. Switch the Coffeemaker OFF and let cool for  $\frac{1}{2}$  hour.
5. After  $\frac{1}{2}$  hour, pour the water and vinegar solution back into the Coffeemaker.
6. Place the empty Carafe on the Coffeemaker. Switch the Coffeemaker ON and let all the water and vinegar solution flow through.
7. Discard the solution and the paper filter.
8. After allowing the Coffeemaker to cool, flush out all the traces of vinegar by pouring a Carafe full of cold water into the Water Reservoir. Make sure to insert a fresh filter into the Filter Holder before brewing and place the empty Carafe on the Coffeemaker. Switch the Coffeemaker ON and allow it to cycle through.
9. At the end of the brew cycle, switch the Coffeemaker OFF. Discard water in the Carafe. Repeat steps 8 - 9. Unplug the Coffeemaker when finished.

## **DECALCIFYING YOUR CARAFE**

Hard water can leave a whitish mineral deposit inside your Carafe. Coffee discolors these deposits, sometimes leaving a brownish stain inside the Carafe. To remove these stains, follow these simple steps:

1. Use a solution of equal parts white vinegar and hot water.
2. Let solution stand in Carafe for about 20 minutes and then discard.
3. Wash and rinse your Carafe thoroughly using a soft cloth. Do not use harsh abrasive cleaners. These may cause scratches which can lead to breakage.

# NOTES

## LIMITED ONE YEAR PRODUCT WARRANTY

**Warranty:** This product is warranted to be free from defects in materials and workmanship for a period of one (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

**Warranty Coverage:** This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA or Canada, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Implied Warranties:** ANY WARRANTIES IMPLIED WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states and provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model when the product is returned to Zellers. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement within the warranty period.


**Important Notice:** If any parts are missing or defective, return this product to the place of purchase.

Any questions or comments can be directed to the Consumer Relations Department. Please write to, call or email:

Consumer Relations Dept.  
P.O. Box 6916  
Columbia, MO 65205-6916  
1(800) 233-9054

**Limitation of Remedies:** No representative or person is authorized to assume for us any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty, and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**Legal Rights:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state/province.

WESTINGHOUSE™,  and "YOU CAN BE SURE...IF IT'S WESTINGHOUSE™" are trademarks of WESTINGHOUSE ELECTRIC CORPORATION and used under license by Salton, Inc. **In no event shall Salton be liable for any incidental or consequential damages, losses or expenses.**

Made in China

"© 2003  
All Rights Reserved"

P/N 61249  
Printed in China