 


**WELBILT®**

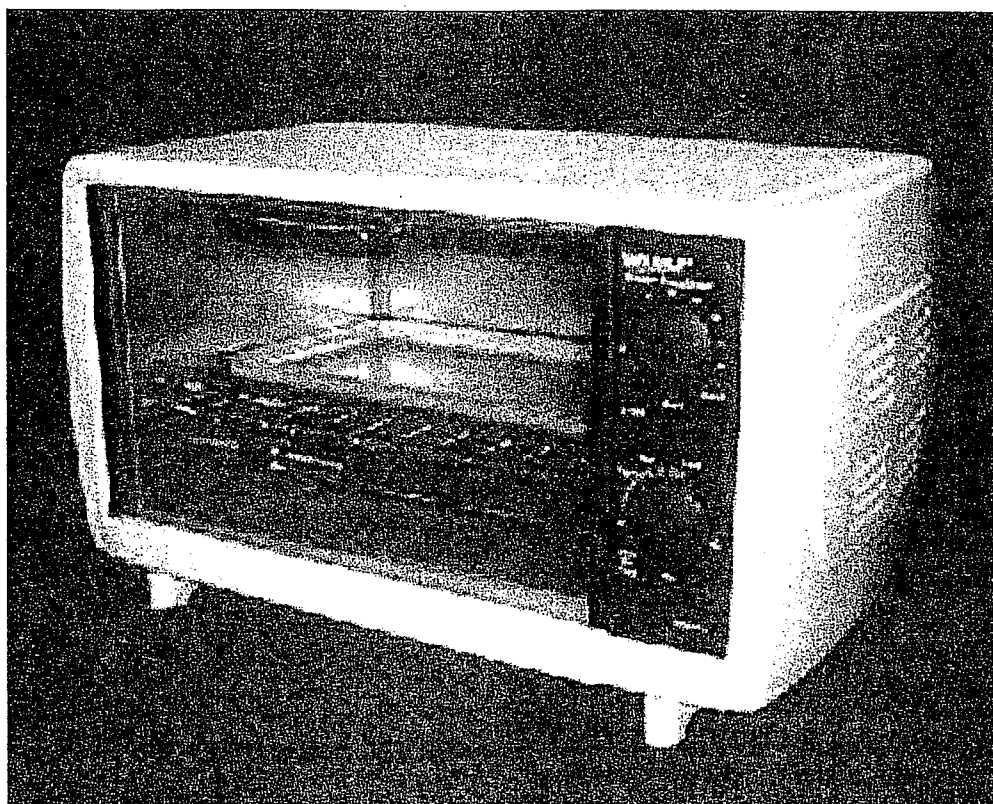

# **INSTRUCTION MANUAL**

**TOASTER OVEN/BROILER TB300S**

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read all instructions before using appliance.
2. Close supervision is necessary when any appliance is used near children.
3. This appliance is not for use by children.
4. Do not touch hot surfaces. Use handles or knobs and oven mitts.
5. Do not operate any damaged appliance. Do not operate with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact Consumer Service for return authorization, examination, repair or adjustment.
6. Before using this appliance, move it four to six inches from the wall or any object on the countertop. Do not store any item on top of the appliance. Do not use on surfaces where heat may cause a problem.
7. A fire may occur if this appliance touches or is covered by flammable material, including curtains, draperies, walls, etc., when in operation:
8. Do not store any materials, other than manufacturer's recommended accessories, in this Oven when not in use.
9. Do not cover Crumb Tray or any part of the Oven with metal foil. This will cause overheating of the Oven.
10. Extreme caution should be exercised when using containers constructed of other than metal.
11. Do not place any flammable material such as paper, cardboard, plastic, etc. in the Oven.
12. Oversized foods or utensils must not be inserted into the Toaster Oven/Broiler as they may create a fire or risk of electric shock.
13. To protect against electrical shock do not immerse cord, plug or appliance in water or other liquid. See instructions for cleaning.
14. Do not use outdoors or while standing in a damp area.
15. Do not clean with metal scouring pads. Pieces of the pad may break off and touch electrical parts, creating a risk of electric shock.

# **IMPORTANT SAFEGUARDS** *(Continued)*

16. Use extreme caution when removing Baking/Drip Pan or disposing of hot grease.
17. Turn Toast/Time Control Knob to **OFF** before unplugging. Unplug from outlet when not in use and before cleaning. Allow to cool before attaching or removing parts and before cleaning the appliance.
18. **CAUTION: Never leave Toaster Oven/Broiler unattended.**
19. The Toaster Oven/Broiler is **OFF** when the Toast/Time Control Knob is in the **OFF** position.
20. Do not let cord hang over edge of table or counter, or touch hot surfaces.
21. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
22. Do not place on or near a hot gas or electric burner or in a heated oven.
23. The use of accessory attachments not recommended by the manufacturer may cause injuries.
24. Do not use appliance for other than intended use.
25. When broiling, the Baking/Drip Pan must be used.

## **SAVE THESE INSTRUCTIONS**

***This product is for household use only.***

Remove all packaging materials including the piece of paper that has been placed between the top of the Oven Door and Oven for protection during shipping. Also remove the piece of cardboard that has also been placed between the bottom of the Oven Door and the Oven.

**CAUTION: Appliance surfaces are hot during and after use.**

**CAUTION: Always wear protective, insulated oven mitts on hands when touching hot Oven or hot dishes and food or when inserting or removing Wire Rack, baking dish and food.**

**PLEASE NOTE: Ovenware manufacturers do not recommend using see through glass baking containers or lids in this Oven. Glass-ceramic baking containers may be used. Do not use oven roasting bags in this Oven, as they may come in contact with the heating elements.**

## ***POLARIZED PLUG***

This appliance has a **polarized plug** (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## ***SHORT CORD INSTRUCTIONS***

A short power-supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

Extension cords are available and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary.

Also, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

## ***ELECTRIC POWER***

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

 
## ***PLASTICIZER WARNING***

**CAUTION:** To prevent Plasticizers from migrating from the finish of the counter top or table top or other furniture, place **NON-PLASTIC** coasters or place mats between the appliance and the finish of the counter top or table top.

***Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.***

# GETTING TO KNOW YOUR TB300S WELBILT® TOASTER OVEN/BROILER


PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

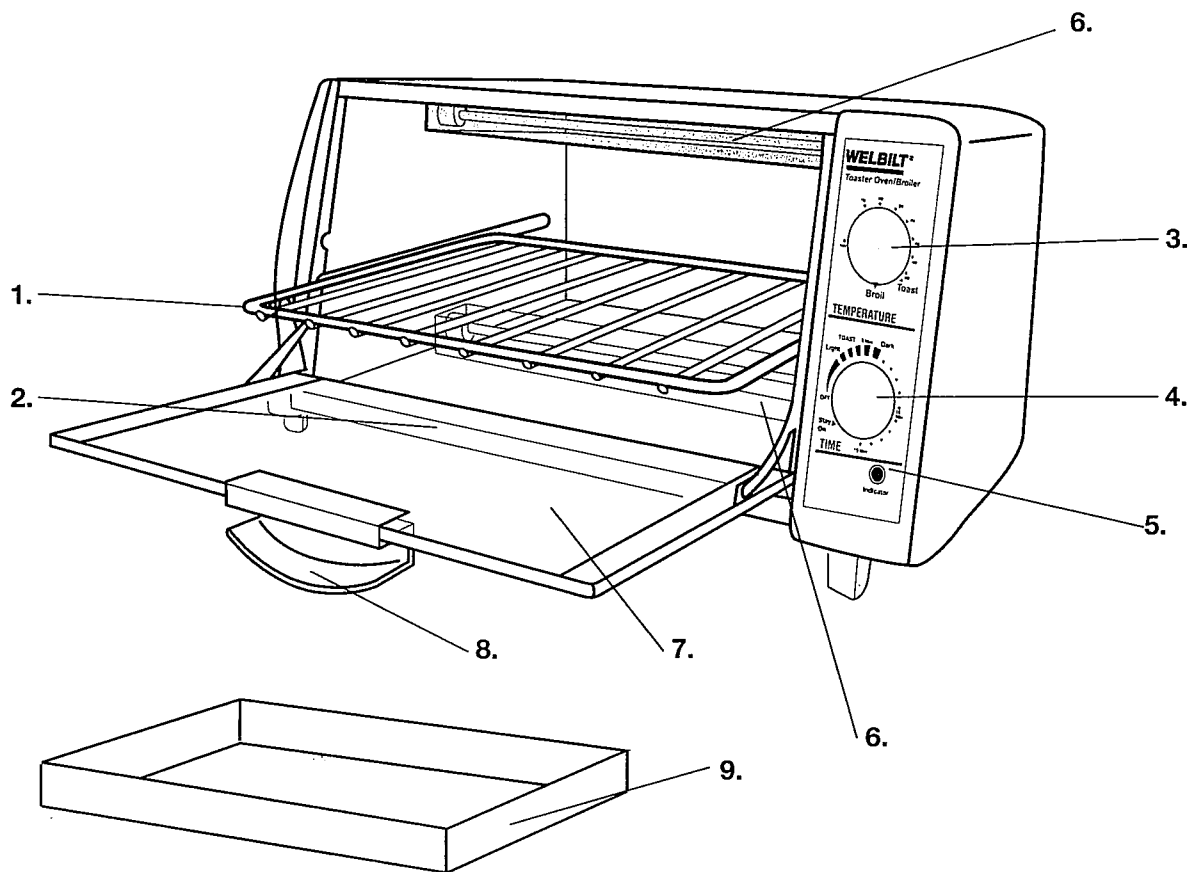

1. Wire Rack (P/N 21410)
2. Crumb Tray (P/N 21411)
3. Temperature Control Knob
4. Toast/Time Control Knob
5. Power - On Indicator Light
6. Heating Element
7. Safety Glass Oven Door
8. Oven Door Handle
9. Baking / Drip Pan (P/N 21412)

# GETTING TO KNOW YOUR TOASTER OVEN/BROILER *(Continued)*
 
## CONTROL PANEL

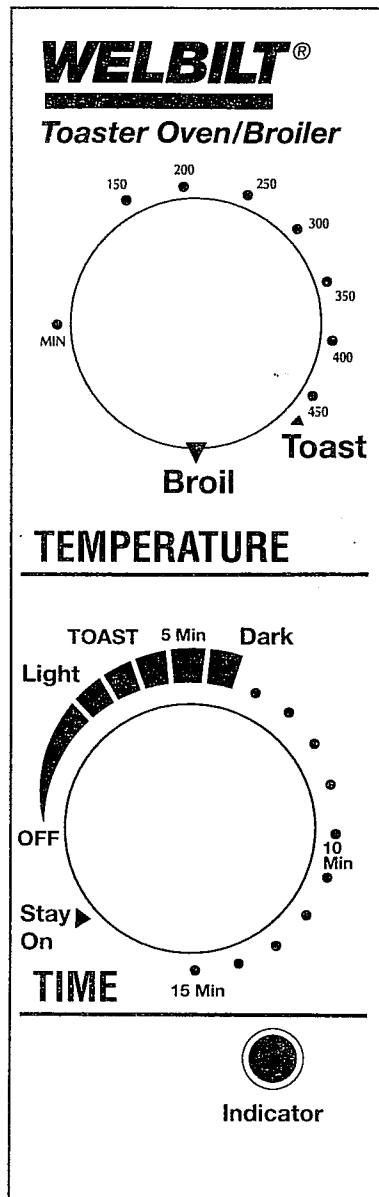

Please familiarize yourself with the Toaster Oven Control Knob Panel, Oven functions and accessories prior to the first use:

### TEMPERATURE CONTROL KNOB:

Choose the desired or recommended temperature from 150°F up to 450°F.

### TOAST or BROIL.

### TOAST/TIME CONTROL KNOB:

When you turn the Knob to the left (counterclockwise) to the **STAY ON** position, the Oven will remain **ON** until it is manually shut **OFF**.

To activate the Timer, turn the Knob to the right (clockwise). The Timer is used for toasting, broiling, or baking for 15 minutes or less, or as an independent Timer. When the time has elapsed or the Knob is manually turned to the **OFF** position, a bell will sound and the Oven will automatically shut off.

### POWER-ON INDICATOR LIGHT:

Illuminates when the Oven is on.

**Wire Rack:** Used for toasting, broiling, baking, heating, or defrosting.

**Crumb Tray:** Slides out for cleaning.

When the Oven is being used, the crumb tray should always be in place at the bottom of the Oven.

**Baking/Drip Pan:** Used in different combinations with the Wire Rack for broiling, baking, heating and defrosting.

## ***BEFORE USING FOR THE FIRST TIME***

1. Read all instructions in this manual carefully. The information included in this book will help you to use your **WELBILT®** Toaster Oven/Broiler to its fullest.
2. Place your Oven on a level surface such as a countertop or table. Be sure the sides, back, and top of the Oven are at least four inches away from any walls, cabinets, or objects on the counter or table.
3. Remove all stickers from the Oven except the rating label located on the back.
4. Remove Rack, Baking / Drip Pan, and Crumb Tray and wash in hot and sudsy water or in the dishwasher. Dry thoroughly before placing in the Oven.
5. When you are ready to use the Oven, place the cord into a 120V AC outlet.
6. To eliminate any protective substance or oil that may have been used for packing and shipping, set the Temperature Control Knob to **TOAST** and the Toast/Time Control Knob to 15 minutes. A small amount of smoke and odor may be detected. This is normal.
7. To avoid scratching, marring, or discoloration, do not store anything on top of the Oven during operation.

# OPERATING INSTRUCTIONS

**CAUTION:** *Appliance surfaces are hot during and after use.*

## BAKING, HEATING, & DEFROSTING

Both the top and bottom elements will cycle on and off during this Oven function to maintain the desired Oven temperature.

1. To “lock” in the Wire Rack, place the side tab against the rear rail. (See Figure 1.) Then press the Wire Rack down on the front rail to secure in place. (See Figure 2.)\*

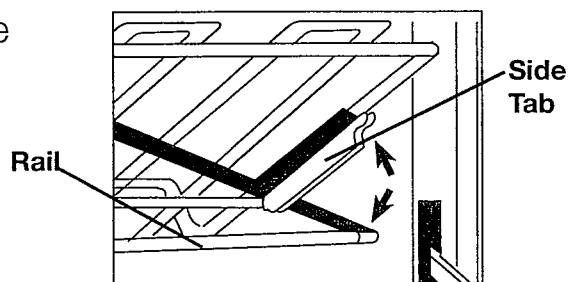 


FIGURE 1

2. Close the Oven Door.

3. Turn the Temperature Control Knob clockwise to the desired temperature. Bake according to package or recipe instructions. Defrost at 250°F.

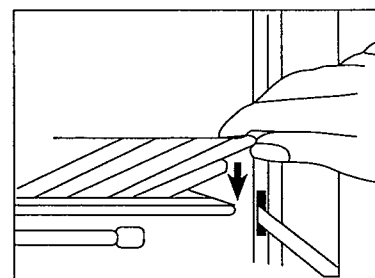 


FIGURE 2

4. Preheat the Oven for 5 minutes for baking and heating by turning the Toast/Time Control Knob clockwise to the **DARK** setting. After 5 minutes, the bell will sound and the Oven will automatically shut off. It is not necessary to preheat the Oven for defrosting. When defrosting, be sure that all paper and plastic wrap is removed from food.
5. Place the food in the center of the Wire Rack. Close Oven Door.
6. Turn the Toast/Time Control Knob clockwise to the desired time. When the time has elapsed, the bell will ring and the Oven will automatically shut off. Turn the Temperature Control Knob to **MIN.**
7. When baking, heating, or defrosting for more than 15 minutes, turn the Toast/Time Control Knob counterclockwise to the **STAY ON** position. When food is done, turn the Temperature Control Knob to **MIN.** and Toast/Time Control Knob to **OFF.**

\*When Wire Rack is mounted properly, it will slide out automatically when Oven Door is opened. It will slide back when Oven Door is closed.



## **OPERATING INSTRUCTIONS** (Continued)

### **TOASTING**

Both the top and bottom elements will heat continuously when this function is used. It is normal for condensation to form on the Oven Door when toasting moist or fresh breads.

1. Put the bread to be toasted directly on the Wire Rack in the Oven. Close the Oven Door. Toast up to four slices of bread. When toasting only one or two slices of bread, center the bread in the Oven.
2. Turn the Temperature Control Knob clockwise to the **TOAST** setting.
3. Turn the Toast/Time Control Knob clockwise to the desired toast color from **LIGHT** to **DARK**.
4. The bell will ring and the Oven will automatically shut off when the toast is done.
5. Turn the Temperature Control Knob to **MIN**.

### **COOKING CONTAINERS**

The Baking / Drip Pan included with the Oven is suitable for items such as cookies, rolls, biscuits, nachos and pork chops.

A variety of standard baking dishes, such as an 8" round or square cake pan, a 6-cup muffin pan, and 1 and 2-quart round, square, or rectangular casserole dishes may be used for other foods.

Choose bakeware made of metal, ovenproof glass, and ceramic.

Check package directions to determine if the container is suitable for use in a regular oven.

***CAUTION: Allow at least 1" air space between the top of the container and the upper heating elements. Never use glass lids on glass or metal bakeware. If a lid is necessary, cover tightly with aluminum foil.***

## **OPERATING INSTRUCTIONS** (Continued)

### **BROILING/TOP BROWNING**

Only the top Heating Element will heat when this Oven function is used.

1. For broiling, remove the Wire Rack from the Oven and place on top of the Baking/Drip Pan. Place food directly onto the Wire Rack.
2. Place the Wire Rack and the Baking/Drip Pan with food onto the rails near the bottom of the Oven. Center the Baking/Drip Pan on these Rails so it is in a stable position. The Baking / Drip Pan will catch any juices that drip during broiling. Never cover the Wire Rack with aluminum foil as this prevents juices and fat from dripping into the Baking/Drip Pan.
3. Close the Oven Door.
4. Turn the Temperature Control Knob clockwise to **BROIL**.
5. Turn the Toast/Time Control Knob clockwise to the desired time.
6. When broiling food that needs to be cooked on both sides, set the Toast/Time Control Knob for the time necessary for one side. When the bell rings, the Oven will automatically shut off. Open the Oven Door. Using protective, insulated oven mitts, carefully pull the Wire Rack and Baking / Drip Pan about halfway out of the Oven. Turn the food, slide the Wire Rack and pan into the Oven and close the Oven Door. Turn the Toast/Time Control Knob to the desired time.
7. When the time elapses, the bell will ring and the Oven will automatically shut off.
8. Turn the Temperature Control Knob to **MIN** and unplug the unit.

**CAUTION: DO NOT leave the Oven unattended during broiling or top browning.**

# **USER MAINTENANCE INSTRUCTIONS**

## **CARE AND CLEANING**

1. Turn the Temperature Control Knob to **MIN.** Make sure the Toast/Time Control Knob is in the **OFF** position and unplug before cleaning.
2. Allow Oven and accessories to cool completely before cleaning.
3. Clean the outside of the Oven with a damp cloth and dry thoroughly. A non-abrasive liquid cleaner may be used for stubborn stains. Rinse and dry thoroughly. Do not use metal scouring pads or abrasive cleaners that will scratch the surface.
4. Clean the glass Oven Door with a cloth or sponge dampened with warm, sudsy water. Dry thoroughly.
5. Wash Wire Rack and Baking / Drip Pan in hot, sudsy water or in the dishwasher. Rinse and dry thoroughly.
6. If crumbs and spills have accumulated on the Crumb Tray, slide it out of the Oven and wipe with a damp cloth. Dry thoroughly.
7. DO NOT use abrasive cleaners or metal scouring pads to clean Rack, Baking / Drip Pan, or Crumb Tray. For stubborn stains, clean with a nylon or polyester mesh pad and a mild, non-abrasive cleaner such as Soft Scrub®, Cameo®, or Bon Ami®. Rinse and dry thoroughly.

**Any servicing requiring disassembly other than the above cleaning must be performed by a qualified appliance repair technician.**

## **IMPORTANT NOTICE**

### **PLEASE DO NOT RETURN TO STORE**

If you have any problem with the unit contact Salton Inc. Consumer Relations for service  
**TOLL FREE: 1-800-233-9054, Mon. - Fri., 8:00 am - 5:00 pm CST**

Please read operating instructions before using this product.

Please keep original box and packing materials in the event that service is required.

**WELBILT®**

*THIS PRODUCT IS DISTRIBUTED BY SALTON INC. ON BEHALF OF  
APPLIANCE CO. OF AMERICA L.L.C.*

WELBILT IS A REGISTERED TRADEMARK OF ENODIS CORPORATION

PRINTED IN CHINA



## ONE-YEAR LIMITED WARRANTY

This WELBILT® product warranty extends to the original consumer purchaser of the product.

### Warranty Duration:

This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

### Warranty Coverage:

This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by WELBILT®, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

### Warranty Disclaimers:

This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for WELBILT® any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Some states do not allow the exclusion of limitations of implied warranties or consequence of damages, so the above limitations or exclusions may not apply to you. WELBILT® is not responsible for liable or indirect, special or consequential damages arising out of or in connection with the use or performance of the product or other damages with respect to loss of property, or loss of revenues or profit.

### Legal Remedies:

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

### Warranty Performance:

During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model (at WELBILT®'S option) when the product is returned to the WELBILT® facility listed below. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

## SERVICE AND REPAIR

If service is required, you should first call toll-free 1-800-233-9054 **between the hours of 8:00 am and 5:00 pm Central Standard Time** and ask for **CONSUMER SERVICE**. Please refer to the model number listed in this manual when you call.

**In-Warranty Service** for a product covered under the warranty period, no charge is made for service and return postage. Please return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the address listed below. Call for return authorization.

### Out-Of-Warranty Service:

There will be charges rendered for repairs made to the product after the expiration of the aforesaid one (1) year warranty period, after purchaser is advised appropriately. Include \$10.00 (US) for return shipping and handling.

WELBILT® cannot assume responsibility for loss or damage during shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your unit: any accessories related to your problem,; your full return address and daytime phone number; a note describing the problem you experienced; a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Return the appliance to: ATTN: Repair Department, WELBILT®

708 South Missouri Street, Macon MO 63552

Any questions or comments can be directed to WELBILT® at the above address or by calling or E-Mailing the following:

TOLL FREE 1-800-233-9054 , Mon. - Fri., 8:00 am - 5:00 pm CST

E-Mail: [salton@saltonusa.com](mailto:salton@saltonusa.com) or visit our website [www.salton-maxim.com](http://www.salton-maxim.com)

Please refer to the model number listed in this manual when you call, write or E-Mail.

WELBILT® is a registered trademarks of WELBILT Inc.

This product is distributed by Salton Inc. on behalf of Appliance Co. of America L.L.C.

WELBILT is a registered trademark of Enodis Corporation.

P/N 60734

Printed in China