

OWNER'S MANUAL
MODEL No .FF-1/1A

Body Fit™ Facial Salon

salton®

Get a taste of the good life with Salton.

PREPARATION

Loosen the screw under the battery compartment counter clockwise with a coin. Unscrew the cover of the battery compartment with a coin and pull off. Put in three AA volt batteries exactly as shown, close and screw the cover on tightly.

HOW TO USE YOUR BODY FIT™ FACIAL SALON

BODY BRUSH

For intensive body, hand and foot care, soap the brush until foam forms. Switch the appliance speed setting 1 (low) and move the brush in any direction all over your body without pressing hard. Rinse off lather thoroughly using warm water.

CAUTION

Do not use in areas of severe ache or other pains or skin abrasions. Not for use by pregnant women.

FACIAL BRUSH

For intensive and soothing facial cleaning, first remove excessive make-up, then rub the dampened brush on the soap or in the cleansing cream until a nice lather is formed. Apply the brush on your face. Select low speed setting (1). Drive the brush gently in an upward direction. Rinse face and neck thoroughly using warm water.

CAUTION

Avoid eyes & lip areas, as well as any skin abrasions or lesions.

MOISTURE HEAD

Specially designed ball roller for massaging. Apply your moisturizing cream or lotion directly to the skin of your face and neck. Switch on low speed setting and massage gently in light upward strokes.


Do not massage for more than two minutes and avoid sensitive areas around your eyes.

SPONGE BUFFER

Specially designed foam pad to remove dead skin cells, stimulate muscles and refresh your skin. Used with cleansing milk or cream, the sponge will absorb dead cells from the skin surface together with cleansing milk or cream.

Used without anything, sponge will generate out small amount of heat to stimulate and refresh your skin tone.

1. Motor part
2. Body Brush (large)
3. Facial Brush (small)
4. Moisture Head
5. Sponge Buffer

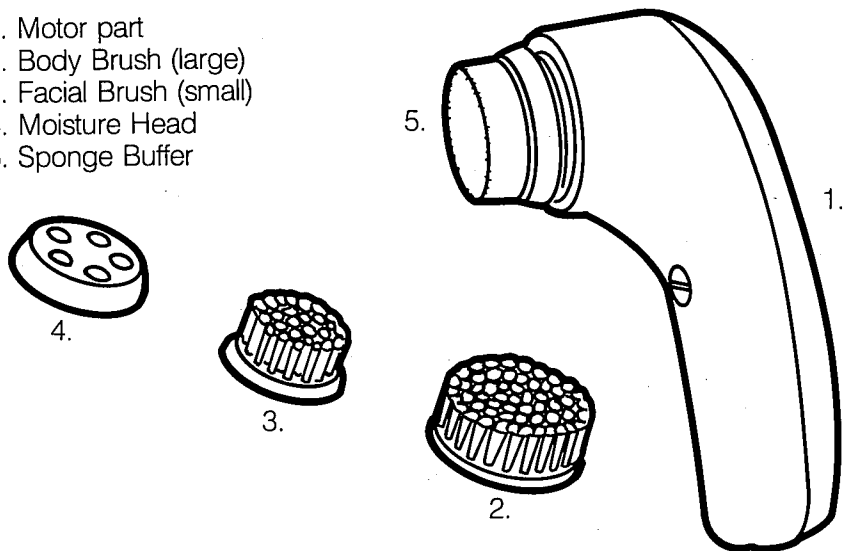

CLEANING INSTRUCTIONS

To enjoy your Salton Body Fit™ Facial Salon:

Wipe motor part occasionally with a dampened cloth.

Rinse brushes and sponge buffer with warm water after **every** use.

Rinse out lotions and creams of moisture head through slots provided in the back.

Be sure the cover is screwed tightly preventing water from getting into the compartment when it is used under the shower.

CAUTION

Do not open the battery compartment in water or when the appliance is wet, to avoid corrosion on the inside parts.

Snap the desired attachment on the shaft of the motor part by pushing gently until it clicks and locks well.

LIMITED WARRANTY

Machines distributed by Salton/MAXIM Housewares, Inc. are warranted for one year from date of purchase against defects in workmanship and material. During that period these defects will be repaired or the product will be replaced at Salton/MAXIM's option, without charge. This warranty covers normal consumer usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, neglect, installation, commercial use or improper maintenance. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares, Inc., or to units which have been altered or modified without authorization of Salton/MAXIM Housewares, Inc., or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Service and Repair


DO NOT attempt to repair your SALTON FF-1/1A Facial Salon. Should the appliance malfunction, you should first call toll free 1-800-233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER CUSTOMER SERVICE stating that you are a consumer with a problem. If the problem cannot be resolved, you will be asked to return the machine to the factory for repair. Under no circumstances should you attempt to open the housing and repair the machine. Should you do this, your warranty will be voided.

To Return for Service

1. Securely package and return the product, PREPAID to: Salton/MAXIM Housewares, Inc., Repair Department, 550 Business Center Drive, Mt. Prospect, IL 60056
2. Be sure to enclose:
 - a. Your name, address and phone number.
 - b. The date of purchase (or receipt as a gift).
 - c. An explanation of the malfunction or reason for return.
 - d. Six dollars (\$6.00) Check or Money Order payable to Salton/MAXIM Housewares, Inc. for return postage and handling.
 - e. To insure prompt "In-Warranty" service, be sure to include proof of date of purchase.

We recommend you take the necessary precaution of insuring the parcel.

3. Toll Free Number: 1-800-233-9054.

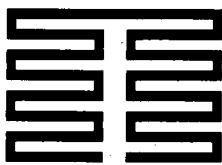

salton[®]

