

OWNER'S MANUAL
MODEL No. MM-3

Stage Light™

Portable Make-up Mirror



salton®


Get a taste of the good life with Salton.

Important Safety Instructions

1. Read all instructions before using.
2. Do not immerse in water.
3. Do not position your mirror so that it reflects sunlight. Reflections of sunlight may cause fires.
4. Do not expose to extreme temperatures such as found near a hot radiator, stove, or in a car parked in the summer sun.
5. Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury.

Save These Instructions

Getting to Know Your Salton MM-3 Portable Stage Light™ Make-up Mirror

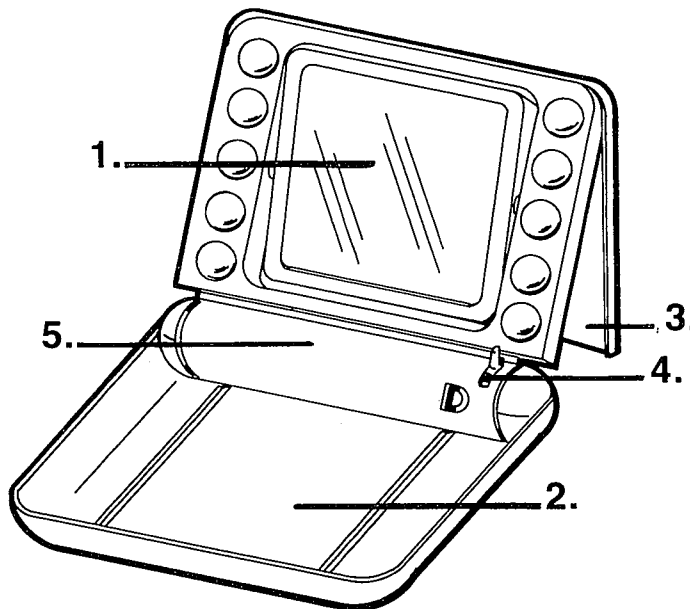


1. Regular and magnifying swivel mirror
2. Wrap around mirror cover
3. Easel stand
4. Off/Evening/Day switch
5. Battery compartment cover

The wrap-around mirror cover may be used in either of the two positions shown.

Leave the mirror cover flat in front of the mirror. Support the mirror's back by swinging the easel out and resting it on your working surface.

Or...Rotate the wrap-around mirror cover behind the unit. Swing easel stand out and place on top of the back of the wrap-around cover.

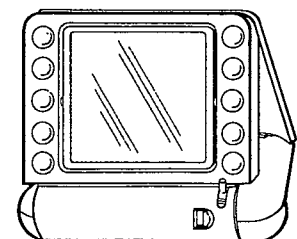

Instructions for Use

1. Install fresh batteries by putting the Off/Evening/Day switch to the "Day" position and opening the battery compartment door.
2. Insert two fresh "D" size batteries into the battery compartment. Be sure that the (+) or cap end of each battery is installed as shown in the battery compartment. For best performance, alkaline batteries are recommended.
3. Replace the battery compartment door.
4. Open the make-up mirror so that the unit's mirror is pointed at your face. To support the mirror in this position, you may either rotate the wrap-around mirror cover behind the unit, swing the easel stand out from the mirror and place the easel on top of the back of the wrap-around cover, or you may leave the mirror cover flat upon your working surface in front of the mirror and support the mirror's back by swinging the easel out from the mirror and resting the easel upon your working surface.
5. Adjust the swivel mirror (1) to standard or magnified view.
6. Turn the Off/Evening/Day switch either to the first position or to the second position, depending upon your desired lighting effect.

User Maintenance Instructions

To keep your portable make-up mirror in good working condition, be sure to follow these instructions carefully.

1. To clean the outside of your make-up mirror, wipe it with a damp cloth. Do not use abrasive cleansers or strong chemical cleansers as they may harm the unit's finish. Do not immerse in water.
To clean the mirror surfaces, use a glass or mirror cleaner with paper toweling or a static-free cloth.
2. For best lighting results, use fresh "D" sized alkaline batteries. When the charge of both batteries has been exhausted, remove the batteries and dispose of them. Exhausted batteries may leak and damage the make-up mirror.
3. If the lights fail to work, check to make sure that the batteries are fresh and that they have been installed as directed in the battery compartment. If the lights still fail to work, return the mirror to the manufacturer.
4. This product is for household use only. There are no user serviceable parts inside. Any service should be performed by the Salton Service department.

LIMITED WARRANTY

Machines distributed by Salton/MAXIM Housewares Group are warranted for one year from date of purchase against defects in workmanship and material. During that period these defects will be repaired or the product will be replaced at Salton/MAXIM's option, without charge. This warranty covers normal consumer usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, neglect, installation, commercial use or improper maintenance. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares Group, or to units which have been altered or modified without authorization of Salton/MAXIM Housewares Group, or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Service and Repair


DO NOT attempt to repair your SALTON MM-3 Stage Light™ Make-up Mirror. Should the appliance malfunction, you should first call toll free 1-800-233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER CUSTOMER SERVICE stating that you are a consumer with a problem. If the problem cannot be resolved, you will be asked to return the machine to the factory for repair. Under no circumstances should you attempt to open the housing and repair the machine. Should you do this, your warranty will be voided.

To Return for Service

1. Securely package and return the product, PREPAID to: Salton/MAXIM Housewares Group, Repair Department, 550 Business Center Drive, Mt. Prospect, IL 60056
2. Be sure to enclose:
 - a. Your name, address and phone number.
 - b. The date of purchase (or receipt as a gift).
 - c. An explanation of the malfunction or reason for return.
 - d. Six dollars (\$6.00) Check or Money Order payable to Salton/MAXIM Housewares Group for return postage and handling.
 - e. To insure prompt "In-Warranty" service, be sure to include proof of date of purchase.

We recommend you take the necessary precaution of insuring the parcel.

3. **Toll Free** Number: 1-800-233-9054.

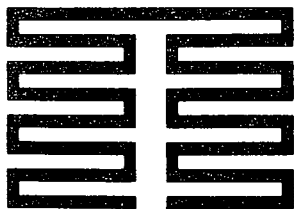

salton®