 


Model No. MMSI3T

Travel *essentials*[™]

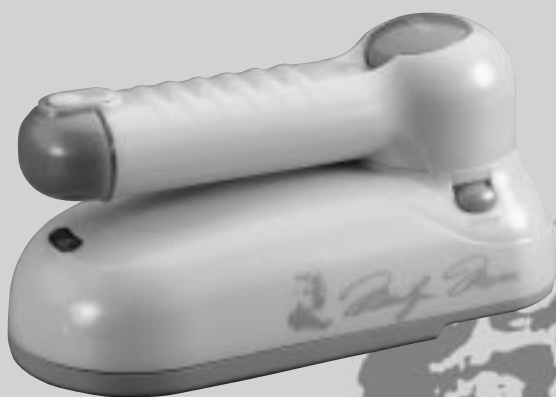

TRAVEL STEAMER



salton[®]

The Archives of
Milton H. Greene, L.L.C.

Marilyn Monroe™





Marilyn Monroe stands as one of the 20th century's most enduring images, an icon reborn, it seems, with each new generation. The man who best understood and captured - some say invented - this phenomenon was her friend and partner, the late Milton H. Greene.

It was Greene's unique personal friendship and business relationship with Marilyn Monroe that allowed the extraordinary photographs, recording her moods, beauty, talent and spirit, for which he is most widely remembered. The Monroe collection contains more than 2,000 never before seen photographs of the screen legend.

Greene's remarkable portraits of our most beloved artists, musicians, and personalities are legendary. Some of his subjects are Marlene Dietrich, Frank Sinatra, Judy Garland, Sammy Davis Jr., Ava Gardner, Cary Grant, Bette Davis, Tony Curtis, Paul Newman, Steve McQueen, Audrey Hepburn, Gene Kelly and Sophia Loren.

In a return to an era of lost elegance, The Archives, headed by Milton's eldest son Joshua, is preserving the vision and timeless works of the celebrated photographer. The Archives is dedicated to the restoration, license and sale of an unprecedented wealth of fine photography for use in traditional and interactive marketing, mass media, merchandising, exhibition and private collections.

The Archives, working in conjunction with Salton®, specifically restored and made available the Monroe images used in the packaging of these products.

We invite you to visit our website at **www.archivesmhg.com** or feel free to contact us.

The Archives of
Milton H. Greene, LLC
278 Maple Street Suite E
Florence, OR 97439
541-997-4970 fax: 541-997-5795

IMPORTANT SAFEGUARDS

When using your Steamer, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Use Steamer only for its intended use.
3. To protect against risk of electric shock, do not immerse the Steamer in water or any other liquids.
4. Never pull on cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Let Steamer cool completely before putting away. Loop cord loosely around Steamer when storing.
6. Always disconnect Steamer from electrical outlet when filling with water or emptying, and when not in use.
7. Do not operate Steamer with a damaged cord or if the Steamer has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the Steamer; take it to the nearest service facility for examination, repair or mechanical adjustment.
8. Close supervision is necessary for any appliance being used by or near children. Never leave the Steamer unattended while in use.
9. Burns can occur from touching hot surfaces, hot water or steam. Use caution when you turn a Steamer upside down. There may be hot water in the reservoir.
10. Be sure dual voltage selector is in correct voltage position before operating. Before plugging in the Steamer, read the information about dual voltage operation contained in the "Instructions for Use" section of this manual.

POLARIZED PLUG

 
 
This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized plug only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SAVE THESE INSTRUCTIONS

GETTING TO KNOW YOUR Salton *Travel Steamer*

Before attempting to use your Salton Travel Steamer, you should become familiar with all of the parts. Read all of the instructions and safeguards carefully.

Identify all parts of your Salton Travel Steamer according to the drawing below so that you have no doubts when reading the instructions that follow.

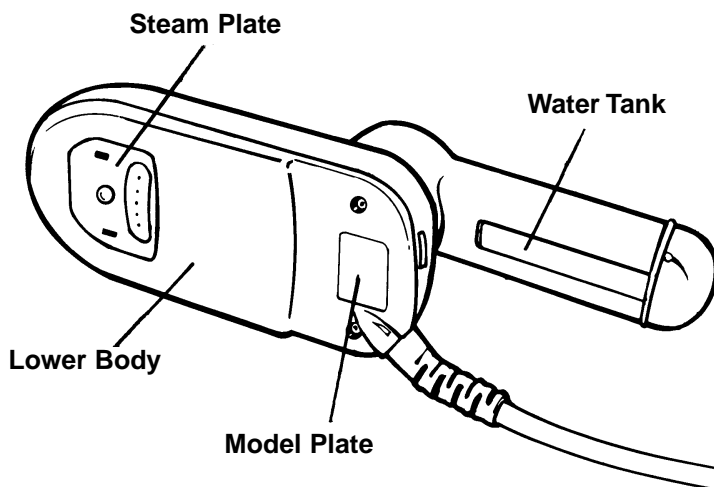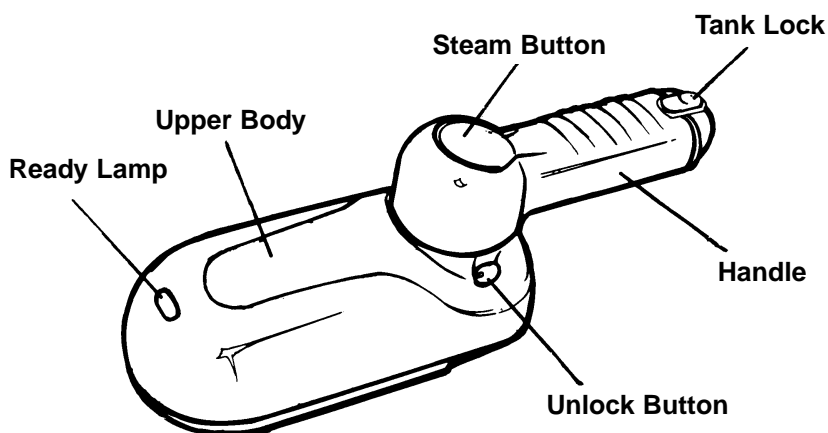

INSTRUCTIONS FOR USE

Unpack the steamer and read all instructions carefully. Keep instructions in a safe place for future use.

1. Swing out the Handle:

Press the Handle UNLOCK Button and swing out the Handle 180 degrees until it locks into place as shown. (Fig. 1).

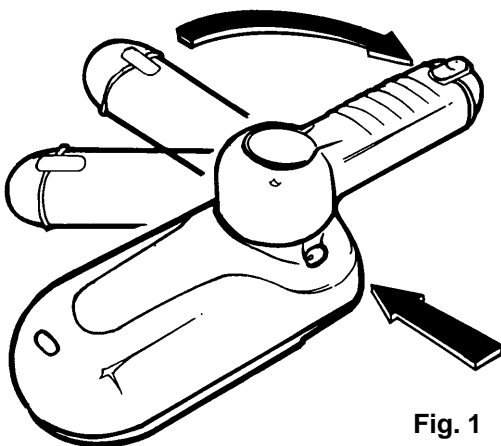 


Fig. 1

2. Remove the Water Tank:

Press the button marked PUSH and remove the Water Tank enclosed in the Handle. (Fig. 2).

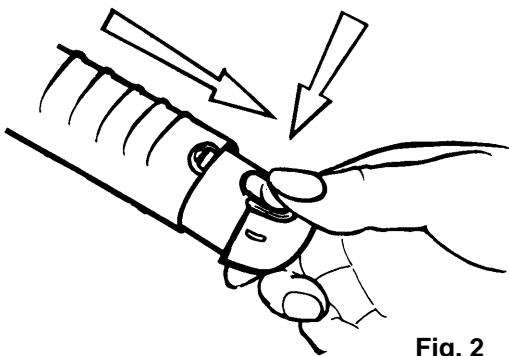 


Fig. 2

INSTRUCTIONS FOR USE (cont.)

3. Fill the Water Tank:

Remove the Water Tank cap and fill the Tank with tap water (DO NOT ADD ANYTHING TO THE WATER SUCH AS STARCH). Replace the Water Tank cap. (Fig. 3).

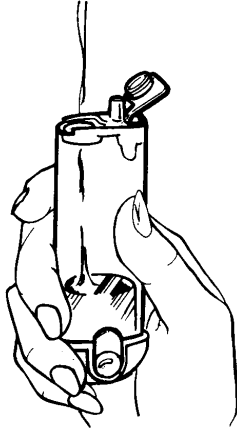 


Fig. 3

4. Replace the Water Tank:

Put the full Water Tank back into the Steamer Handle. You will hear an audible click when the Tank is properly in place. (Fig. 4).

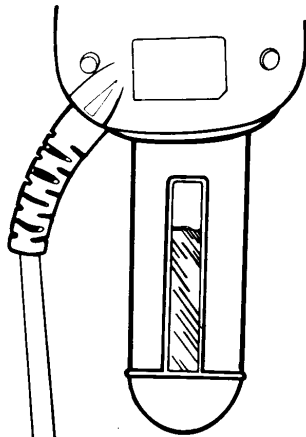 


Fig. 4

INSTRUCTIONS FOR USE (cont.)

5. Plug in the Steamer:*

The Ready Lamp will illuminate when the Steamer is plugged in. The Steamer is ready for use when the Ready Lamp turns off.

*Before plugging the Steamer in, you must first set the dual voltage setting found at the back of the Steamer. Your Steamer can work in either 115 to 230V outlet. If you are using the 230V setting, it takes approximately 2 minutes to reach working temperature. If you are using a lower voltage, it will take the Steamer slightly longer to heat up.

6. Inserting or Removing the Clothes Brush.

To insert: Put the Clothes Brush in position and turn it slightly clockwise (Fig.5). To remove: Turn the Clothes Brush slightly counter clockwise.

7. The Steamer can be used on most articles of clothing or fabrics found in the home.

If you have any doubts, we recommend that you test the Steamer on the inside of the garment or fabric first, in case there are any damages caused by the heat or the moisture. With delicate materials, such as silk or velvet, we recommend that you take off the Clothes Brush and steam the material from a distance (approximately 1-2 feet).

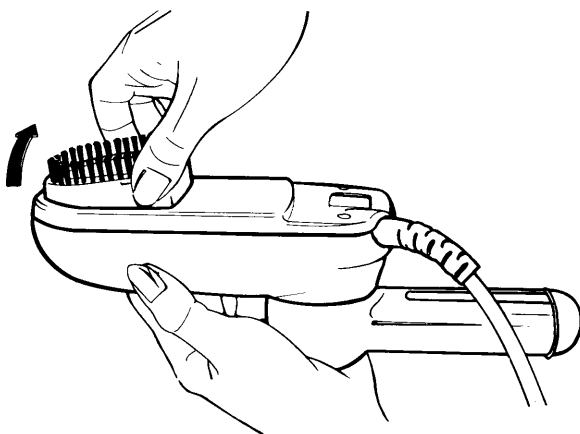 


Fig. 5

INSTRUCTIONS FOR USE (cont.)

8. Hang the creased or wrinkled clothes on a hanger.

Pull the clothing tight with one hand, place the Steamer over the affected areas. Gently press the Steamer against the clothing or fabric and then press and release the STEAM Button. The steam will penetrate the fabric instead of just passing over it.

9. Move the Steamer up and down over the fabric.

When doing this, press the STEAM Button several times, and at the same time smooth the fabric with the Clothes Brush.* After steaming is completed, allow the garment to cool while still on the hanger.

* Pressing the STEAM Button at regular intervals (Fig.6) can produce a jet of steam. For best results, do not press the STEAM Button more than 5 times once the Ready lamp has turned off.

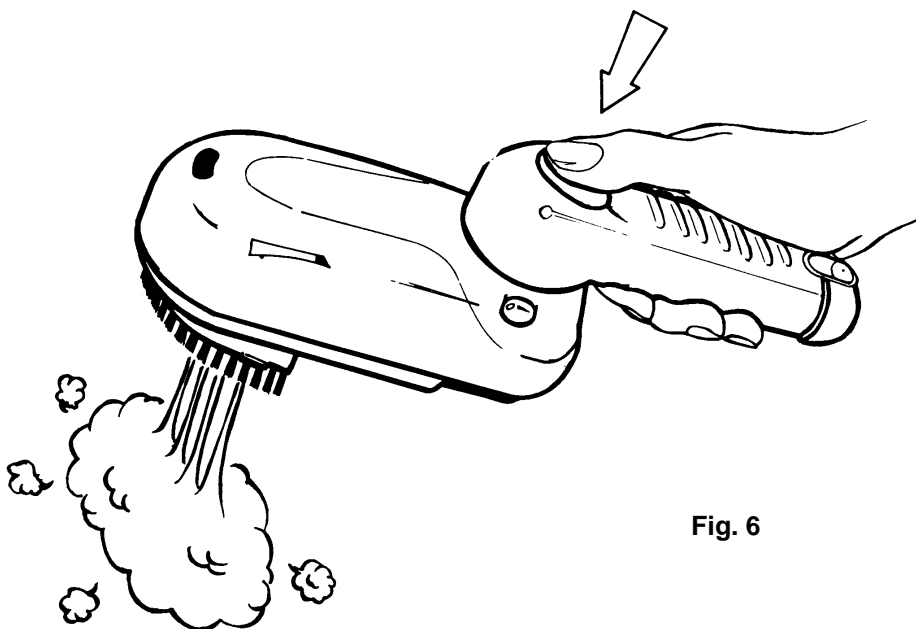 


Fig. 6

INSTRUCTIONS FOR USE (cont.)

10. You can use your Steamer to care for curtains and upholstery too.

Creases can be removed from curtains directly on the rod. Follow regular steaming instructions. The appearance of upholstery can be improved by steaming. If you must use the Steamer in a horizontal position, occasionally hold it upright for the best results.

 
11. Frequently check the water level in the Tank to see if there is enough water for steaming.

Refill the Tank as necessary.



USER MAINTENANCE INSTRUCTIONS

1. When you have completed your steaming task, remove the plug from the electrical outlet and allow the Steamer to cool. If you do not plan to use the Steamer again in the near future, drain the water out the Tank.
2. To store the Steamer, first drain the water from the Water Tank then press the UNLOCK Button and swing Handle back to its original position. Store in a cool, dry place and out of reach of children, or in the Carrying Pouch provided. Do not wrap cord tightly around the Steamer, as this could cause it to fray.
3. To clean the exterior of the Steamer, simply wipe with a moist cloth only. Make sure that the Steamer is cool and unplugged when doing so.

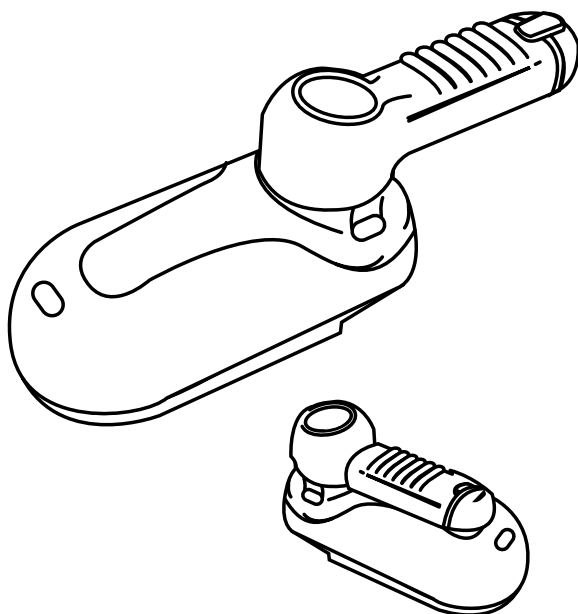

ONE YEAR LIMITED WARRANTY

This Salton Product warranty extends to the original consumer of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violations of written instructions furnished by Salton, Inc., or to units that have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract, or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year limited warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at Salton, Inc.'s option), when the product is returned to the Salton, Inc. facility. The repaired or replacement product will be in warranty for the balance of the one year warranty period and an additional one month period. No charge will be made for such repair or replacement.

Service and Repair

Should the appliance malfunction, you should first call toll-free 1-800-233-9054 between the hours of 9:00am and 5:00pm Central Standard Time and ask for Customer Service stating that you are a consumer with a problem.

In-Warranty Service: For an appliance covered under the warranty period, no charge is made for service or postage. Call for a pre-paid return mailing label (U.S. customers only).

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$8.00 for return shipping and handling. Salton, Inc. cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem; your full return address and daytime phone number; a note describing the problem you experienced; a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

ATTN: Repair Department, Salton, Inc.
708 South Missouri St., Macon 63552



For more information on Salton/Maxim products:
visit our website: <http://www.eSalton.com>
or email us at: salton@saltonusa.com