 


OWNER'S MANUAL
MODEL No. JW-2

Jewelry Spa™

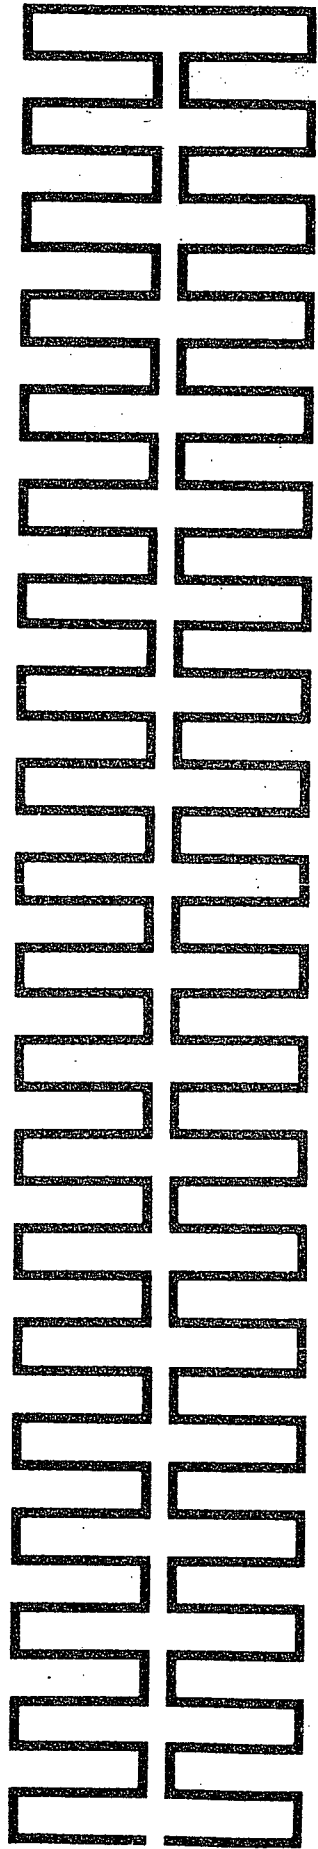

salton®

Get a taste of the good life with Salton.

 
IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed:

1. Read all instructions carefully.
2. To protect against risk of electrical shock, do not immerse the appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from electrical outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Always make sure the appliance is covered before it is turned on.
6. Never operate without the lid in place.
7. Never operate any appliance with a damaged cord set, or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to Salton/MAXIM Housewares, Inc. for examination, repair or electrical/mechanical adjustment.
8. The use of attachments not recommended by Salton/MAXIM may cause fire, electrical shock or injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces.
11. Do not use flammable or toxic liquids.
12. Never drop or insert any object into any electrical opening.

SAVE THESE INSTRUCTIONS

GETTING TO KNOW YOUR JW-2 JEWELRY SPA™

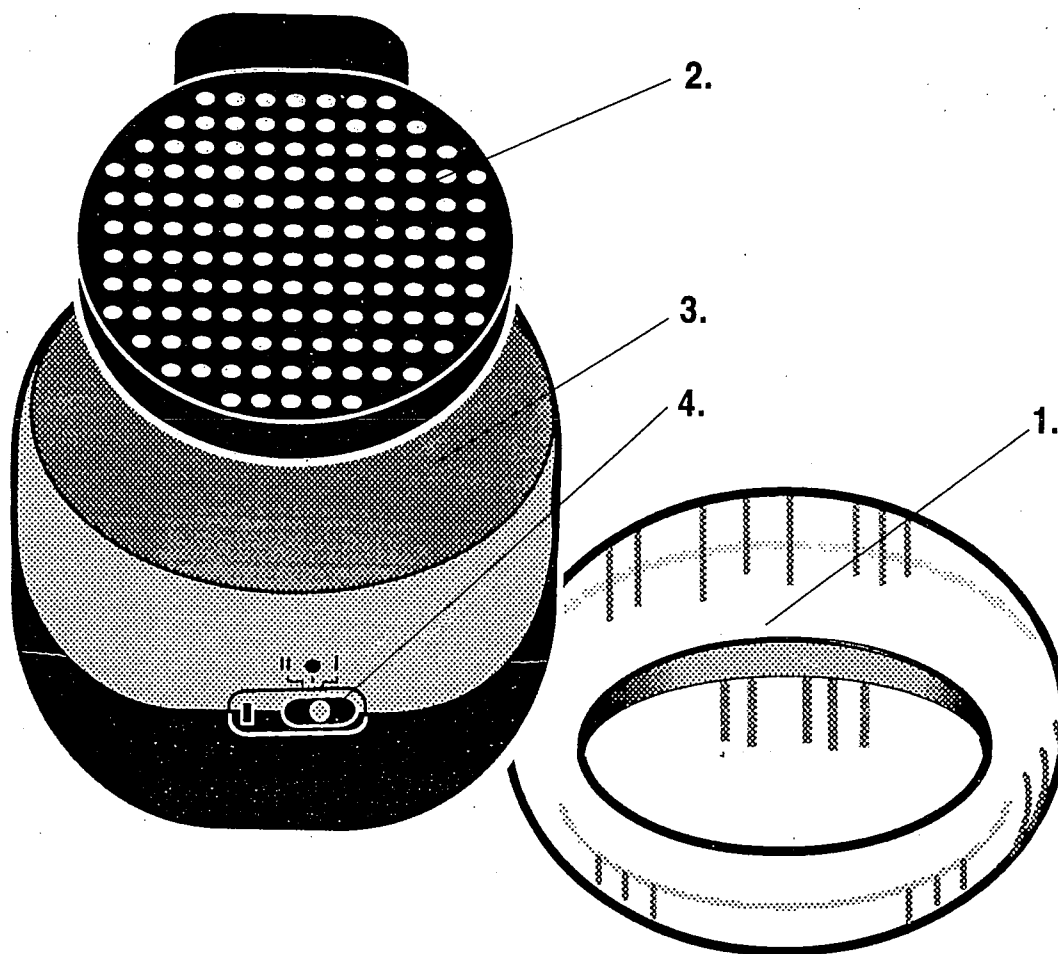

1. See-through Lid

2. Jewelry Tray

3. Spa Chamber

4. LO-OFF-HI Switch

HOW TO USE YOUR JW-2 JEWELRY SPA™

1. Fill spa chamber to the water line with clean warm water. Add 1/2 teaspoon of mild, liquid dish soap.
2. Put jewelry to be cleaned in basket. Make sure not to overload the basket.
3. Gently place the tray into the chamber. Place lid onto the Jewelry Spa™ and plug into a 120VAC outlet.
4. Move activator switch to the HI (II) position. After approximately five minutes, move the switch back to the "OFF" (○) position.
5. Unplug the Jewelry Spa™, remove the lid and the jewelry tray and empty liquid from spa chamber. Refill with fresh, clean water.
6. Replace the tray and the lid and plug into 120VAC outlet.
7. Move activator switch to the LO (I) position for one minute of sonic treatment.
8. Move to "OFF", (○) remove lid and tray and place the jewelry on a soft, lint-free cloth for air drying.
9. Unplug the Jewelry Spa™ and pour out liquid.
10. **For best results, always use fresh water.**

MAINTENANCE AND STORAGE

Your Jewelry Spa™ is designed for household use only and is virtually maintenance-free.

If cleaning becomes necessary, disconnect the appliance from the electrical outlet, wipe unit with a damp cloth. When not in use, unplug the appliance. Handle cord carefully, avoid jerking or straining at plug connections. Simply put Jewelry Spa™ back in its original box and place in a safe, dry location.

SHORT CORD INSTRUCTIONS

A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a longer detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

POLARIZED PLUG

This appliance has a **polarized plug** (one blade is wider than the other), as a safety feature. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

LIMITED WARRANTY

Products distributed by Salton/MAXIM Housewares, Inc. are warranted for one year from date of purchase against defects in workmanship and material. During that period these defects will be repaired or the product will be replaced at Salton/MAXIM's option, without charge. This warranty covers normal consumer usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, neglect, installation, commercial use or improper maintenance. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares, Inc., or to units which have been altered or modified without authorization of Salton/MAXIM Housewares, Inc., or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible. This warranty does not cover damage which results from unauthorized repairs.

Service and Repair

 
DO NOT attempt to repair your SALTON® JW-2 Jewelry Spa™. Attempts to repair this appliance yourself may render it dangerous to use. Should the appliance malfunction, you should first call toll free 1-800-233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER CUSTOMER SERVICE stating that you are a consumer with a problem. If the problem cannot be resolved, you will be asked to return the appliance to the factory for repair. Under no circumstances should you attempt to open the housing and repair the appliance. Should you do this, your warranty will be voided.

To Return for Service

1. Securely package and return the product, PREPAID to:
Salton/MAXIM Housewares, Inc., Repair Department
550 Business Center Drive, Mt. Prospect, IL 60056
2. Be sure to enclose:
 - a. Your name, address and phone number.
 - b. The date of purchase (or receipt as a gift).
 - c. An explanation of the malfunction or reason for return.
 - d. Eight dollars (\$8.00) Check or Money Order payable to Salton/MAXIM Housewares, Inc. for return postage and handling.
 - e. To insure prompt "In-Warranty" service, be sure to include proof of date of purchase.

We recommend you take the necessary precaution of insuring the parcel.

3. **Toll Free** Number: 1-800-233-9054.

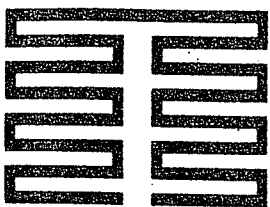

salton®