

Accu Toaster

Model ET-20

Instructions and Warranty




Important Safeguards

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the factory for examination, repair, or adjustment. See Warranty.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. A short power-supply cord is provided in accordance with Underwriter's Laboratories Safety Standards to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised in their use. If an extension cord is used: (a) The electrical rating of the extension cord should be at least that of the appliance. (b) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Toasting Lever must be in the "Up" position before attaching or disconnecting the plug from wall outlet.
13. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
14. A fire may occur if toaster is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
15. Do not attempt to dislodge food when toaster is plugged in.
16. Do not use this appliance for other than intended use. This appliance is for household use.

Save These Instructions

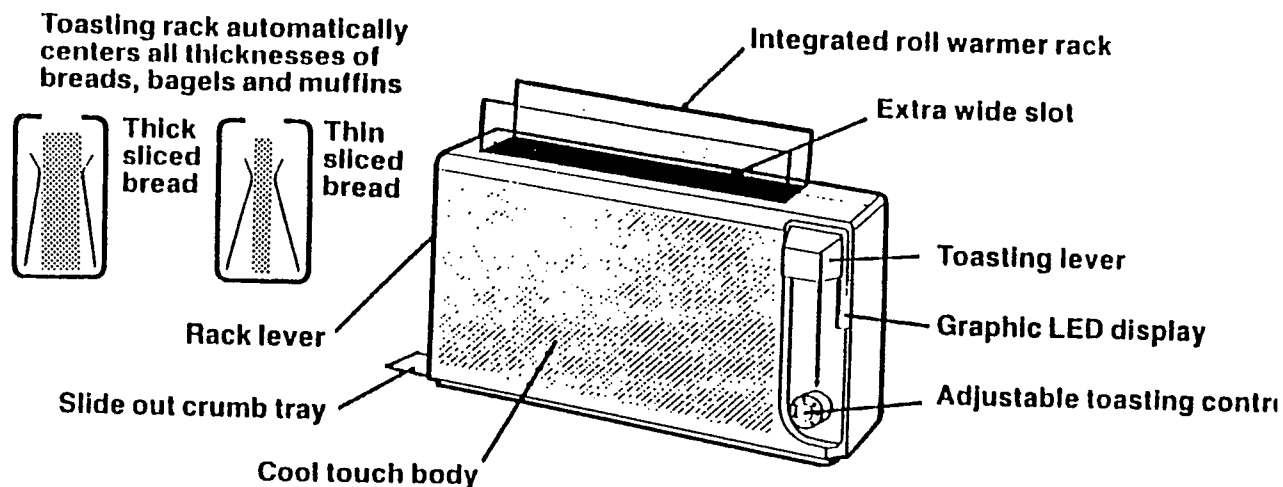

MAXIM'S ACCU TOASTER features the latest toaster technology, including a cool touch exterior, wide slot, roll lifter, ready-beeper, and a toasting rack which automatically adjusts to evenly toast all thicknesses of bread, bagels, and muffins.

Variable browning control lets you select the degree of browning you prefer.

Using Your Maxim Accu Toaster

1. When using for the first time, remove all labels and wipe toaster body with a damp cloth.
2. Make sure that crumb tray is fully closed before plugging toaster into wall outlet.
3. BEFORE TOASTING FOR THE FIRST TIME, set line of the browning control to position 2, and preheat the toaster without inserting any bread. This will disperse the odor characteristic of new heating elements.
4. Your toaster depends upon free air flow to remain cool. **DO NOT BLOCK TOP OPENINGS. DO NOT PLACE ANY OBJECT OVER THE TOP OPENING.**
5. Set line on position 2 for white toast, and use positions 3-6 for English muffins, bagels, etc. The browning control setting will vary according to the moisture content and thickness of the baked goods which you toast.
6. Frozen bread and other baked goods will normally require the browning control to be set one position higher than fresh food. A lower browning position should be selected when toasting dry bread or reheating toast.

Using Your Maxim Accu Toaster (cont'd)

7. After selecting desired browning level, place bread or baked goods in slot, and depress toasting lever until it locks into position. This will lower the food into the slot and switch on the heating element. The toasting rack will automatically adjust to center the food for even browning. The LED display lights will count down as the toast nears readiness.
8. The ready-beeper will sound and bread or baked goods will automatically pop up when desired degree of toasting has been reached.
9. It is not necessary to wait for toaster to cool before reloading.
10. If food jams in the slots, disconnect the toaster plug from outlet, and remove food with wooden tongs only after toaster has cooled down.
11. TO USE THE INTEGRATED ROLL RACK turn the lever on the side of the toaster counter-clockwise until the racks pop up. Place rolls, buns, or any other item too large for the toaster slot onto the racks. The setting you choose still depends on the thickness of the item being toasted and the moisture content.

Useful Hints

1. If you wish to interrupt the toasting process, push the toasting lever upward. This action will pop up the toasting rack.
2. When browning only one slice, place in the middle of the slot for best results.
3. When toasting two slices, they should be of equal size and freshness for even toasting.
4. Most types of baked goods may be browned in your Maxim Accu Toaster. However, slices should not be so thick that they cause burning or jamming.
5. Do not place buttered toast or wrapped food in toaster. Do not toast pastries with runny fillings or frostings.

Care and Cleaning

1. Always unplug cord before cleaning.
2. To remove crumbs, shake the toaster so that crumbs fall into the crumb tray at bottom. Slide crumb tray out of toaster to clean. DO NOT USE ANY ABRASIVES.
3. To clean body of toaster, simply wipe outside with damp cloth or sponge. Dry with another cloth. DO NOT USE ANY ABRASIVES.
4. Do not use a fork or other sharp metal objects to clean the inside of the toaster, as it may damage the heating elements.

LIMITED WARRANTY

Machines distributed by Salton/MAXIM Housewares Group are warranted for one year from date of purchase against defects in workmanship and material. During that period these defects will be repaired or the product will be replaced at Salton/MAXIM's option, without charge. This warranty covers normal consumer usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, neglect, installation, commercial use or improper maintenance. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares Group, or to units which have been altered or modified without authorization of Salton/MAXIM Housewares Group, or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Service and Repair

DO NOT attempt to repair your MAXIM ET-20 Accu Toaster. Should the appliance malfunction, you should first call toll free 1-800-233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER CUSTOMER SERVICE stating that you are a consumer with a problem. If the problem cannot be resolved, you will be asked to return the machine to the factory for repair. Under no circumstances should you attempt to open the housing and repair the machine. Should you do this, your warranty will be voided.

To Return for Service

1. Securely package and return the product, PREPAID to: Salton/MAXIM Housewares Group, Repair Department, 550 Business Center Drive, Mt. Prospect, IL 60056
2. Be sure to enclose:
 - a. Your name, address and phone number.
 - b. The date of purchase (or receipt as a gift).
 - c. An explanation of the malfunction or reason for return.
 - d. Six dollars (\$6.00) Check or Money Order payable to Salton/MAXIM Housewares Group for return postage and handling.
 - e. To insure prompt "In-Warranty" service, be sure to include proof of date of purchase.

We recommend you take the necessary precaution of insuring the parcel.

3. **Toll Free** Number: 1-800-233-9054.

Printed in CEE

© 1990 Salton/MAXIM Housewares Group

MAXIM®

Salton/MAXIM Housewares Group, 550 Business Center Drive, Mt. Prospect, IL 60056