 


OWNER'S MANUAL
MODEL WEK9430

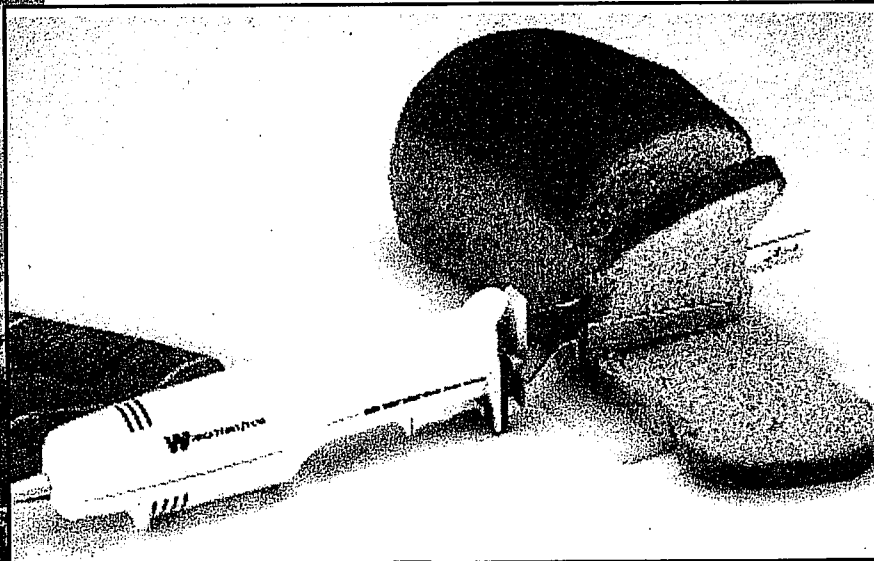

**ELECTRIC KNIFE
WITH SLICING
GUIDE**

White-Westinghouse®

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS**
2. To protect against risk of electrical shock, do not put the electric knife and blades into water or other liquid.
3. Close supervision is necessary when appliance is used by or near children or invalids.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. Disconnect when changing blades.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.
10. Do not let cord contact hot surface, including the stove.
11. Do not operate knife in water or under running water.
12. Blades are sharp. Handle carefully. Always handle blades with hand away from cutting edge. Always store blades with cutting edge away from you.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

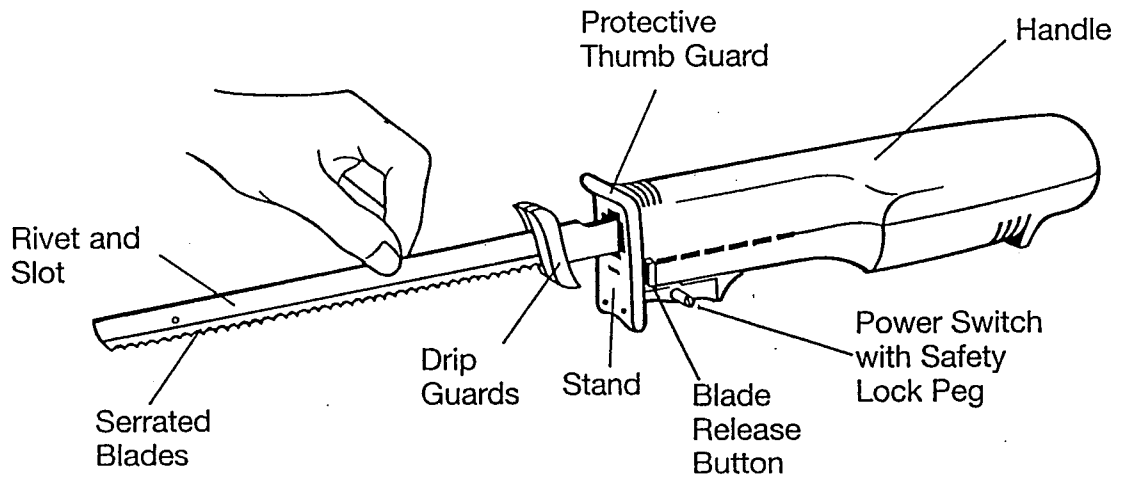 


FIG 1

**DO NOT REMOVE OR INSTALL BLADES WHILE UNIT IS PLUGGED IN.
KEEP FINGERS AWAY FROM SHARP BLADE.**

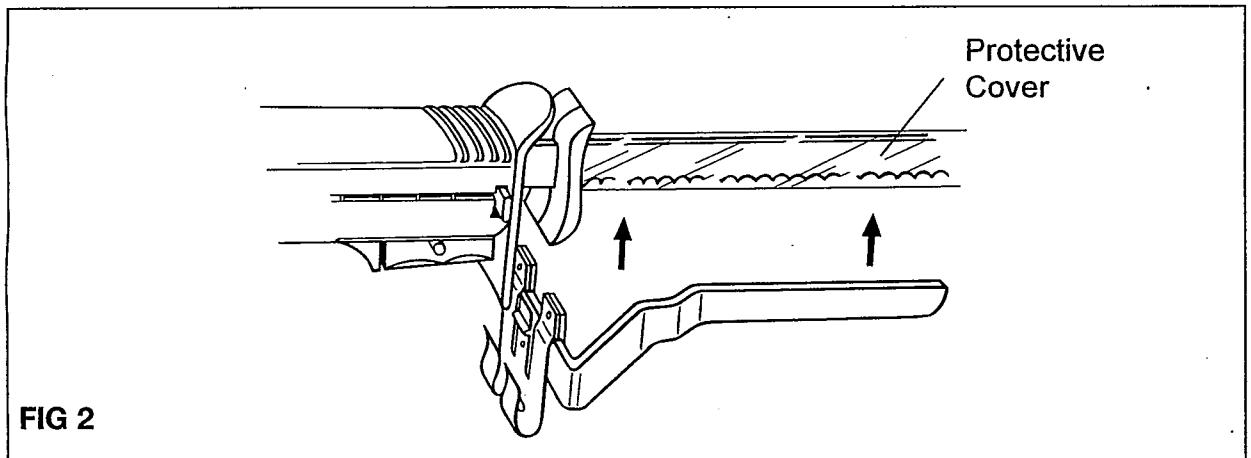 


FIG 2

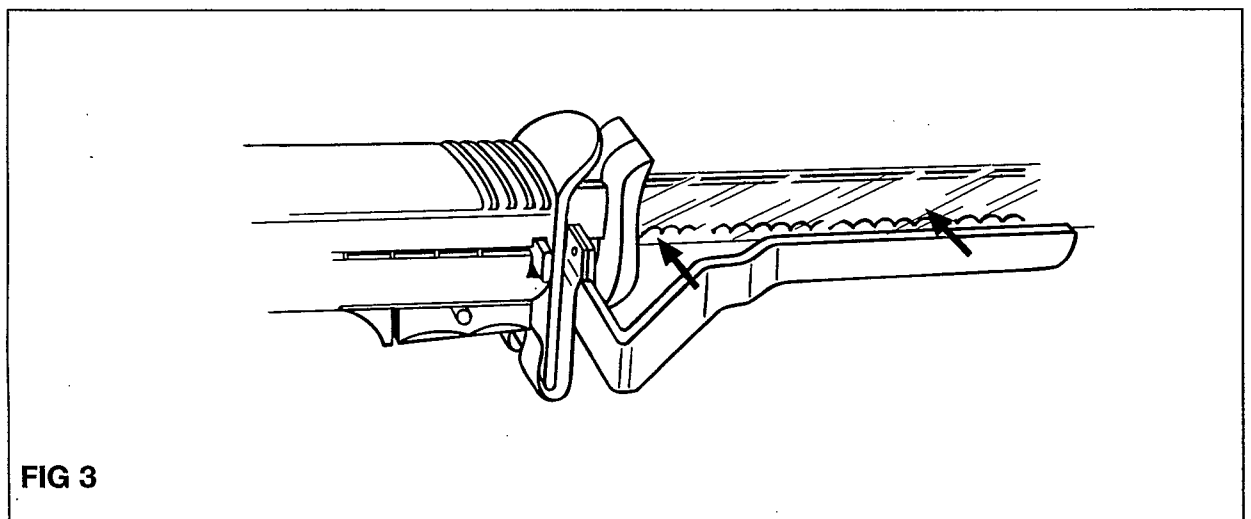 


FIG 3

This appliance is for HOUSEHOLD USE ONLY and may be plugged into any AC electrical outlet (ordinary household current). Do not use any other type of electrical outlet.

NOTE: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

HOW TO USE YOUR ELECTRIC CARVING KNIFE

For your protection, the **Power Switch** has a **Safety Lock**. To operate, plug in and slide the **Safety Lock Peg** to the unlock position; depress the **Power Switch** and knife will be in full operation. When you are finished carving, return the **Safety Lock Peg** to the locked position and unplug. Knife will only operate when the **Safety Lock Peg** is in the unlocked position.

Place knife directly on food to be carved. Press the **Power Switch**, and the knife will begin to slice. Guide the knife in the direction you wish to slice. There is no need to apply any pressure; the knife will do the work. It is best to use a cutting board when carving food with the electric knife to avoid scratching or chipping plates. Do not attempt to cut through frozen foods.

CAUTIONS: Never insert or remove Blades while knife is still plugged in. Always hold the Blades with the serrated edges away from you.

HOW TO INSERT BLADES

Attach the two **Blades** together by inserting the **Rivet** on one blade into the **Slot** on the other and sliding them together. Be sure the **Drip Guards** are lined up evenly.

Grasp the top of the knife blades with the serrated edges away from you, and insert the **Blades** into the **Slot** in the **Handle**. Push both **Blades** in until you hear them click into place. Remove protective cover.

HOW TO ATTACH SLICING GUIDE

Turn off and unplug unit from the electrical outlet. To avoid injury from sharp **Blade** edges, place **Protective Cover** cover over **Serrated Blades**. (Fig. 2, Fig. 3) Push up and snap into place, making sure attachment is securely tightened. Rounded edge of **Slicing Guide** should be parallel with serrated side of **Blades**. Remove **Protective Cover**. Plug in, unlock and depress the **Power Switch** to begin slicing.

TO ADJUST SLICING GUIDE

Position guide to the desired thickness by pushing the **Guide Bar** from side to side to determine the exact width. (Fig. 3)

TO DETACH THE SLICING GUIDE

Turn off unit and disconnect power. Unsnap and pull off from bottom of **Stand**.

NOTE: Serrated blades are sharp; use caution when attaching and detaching slicing guide.

HOW TO REMOVE BLADES

Unplug from electrical outlet. Grasp top of the knife blades, making sure serrated edges are facing away from you, and press the **Blade Release Button**. Then carefully pull the **Blade** from the **Handle**.

USER MAINTENANCE INSTRUCTIONS

This appliance is permanently lubricated and will not require additional lubrication for the life of the unit. It contains no user serviceable parts. Refer service to qualified service personnel.

WHILE USING: Untwist cord from time to time to avoid tangling.

TO CLEAN:

1. Unplug unit. Remove **Blades** from the **Power Handle** before washing. Separate **Blades** by sliding the **Rivet** for one blade out of the **Slot** of the other blade.
2. Wash the **Blades** in warm, soapy water. **Blades** may also be washed in a dishwasher. Rinse and dry thoroughly; store **Blades** in the **protective cover**.
3. Use a soft, slightly damp cloth to wipe **Handle** surface. Do not allow water or any other liquid to get into the **Handle**. **DO NOT IMMERSE HANDLE IN WATER.**

TO STORE: Unplug appliance, and store in its box or in a clean, dry place. **Never wrap the Cord tightly around the appliance.** Do not put any stress on the **Cord** where it enters the unit, as it could cause the **Cord** to fray and break.

ONE-YEAR LIMITED WARRANTY

This White-Westinghouse product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied, and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model (at the store's option) when the product is returned to Kmart. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Important Notice

If any parts are missing or defective, return this product to the place of purchase, or contact our Consumer Service Department for assistance.

Consumer Service

This White-Westinghouse product is distributed by:

Salton/MAXIM Housewares, Inc.
550 Business Center Drive
Mount Prospect, IL 60056
E-mail: Salton550@aol.com

Any questions or comments can be directed to Salton/MAXIM's address, or call the Consumer Service Department:

1-900-884-8818
Monday-Friday
9 a.m. - 5 p.m. CST

You will be charged 95 cents per minute, with a maximum charge of \$3.80 for this call.

White-Westinghouse trademark used under license.
©1996 White Consolidated Industries, Inc.

Made in China for
Kmart Corporation
Troy, Michigan 48084

Printed in Hong Kong