


OWNERS MANUAL
Model No. WP1


Magic Peeler

New Electric Vegetable Peeler

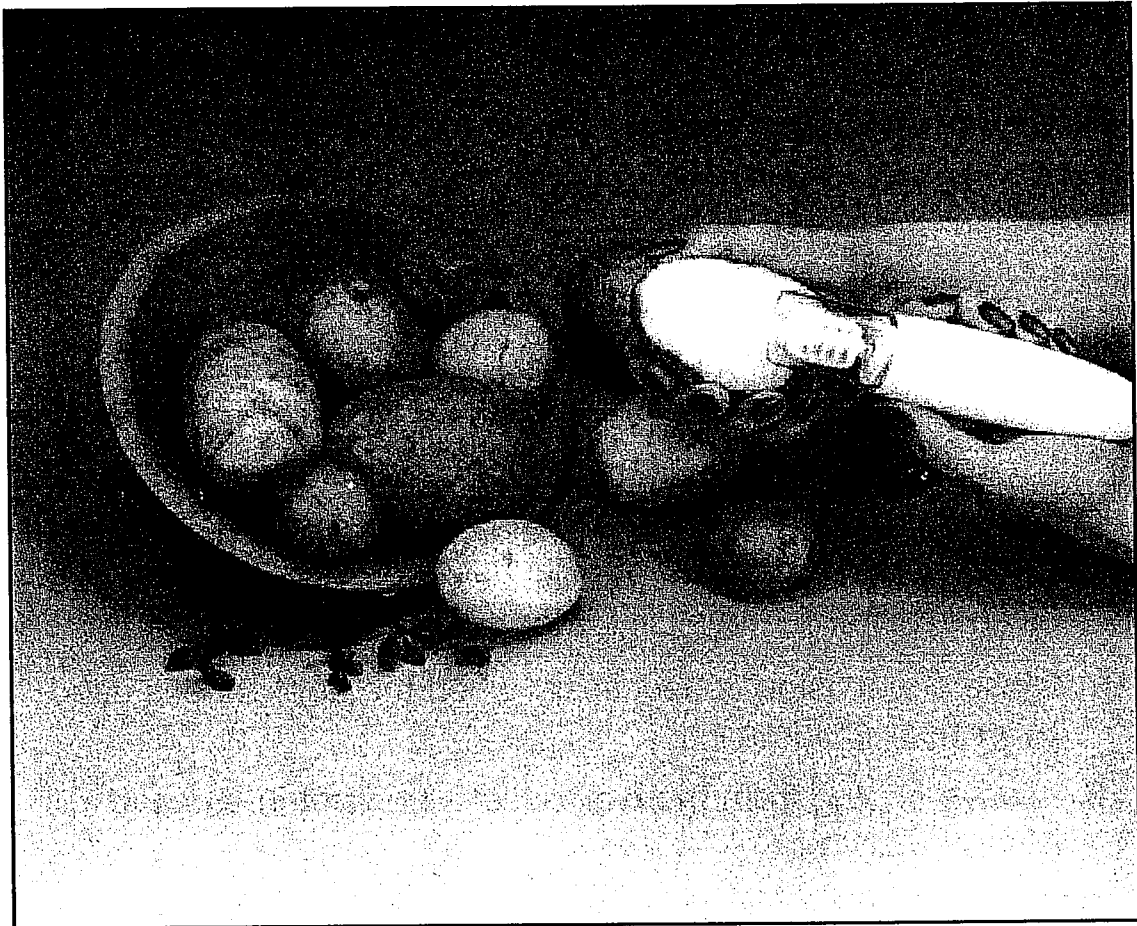

salton®

Getting to Know Your Salton Wonder Peeler

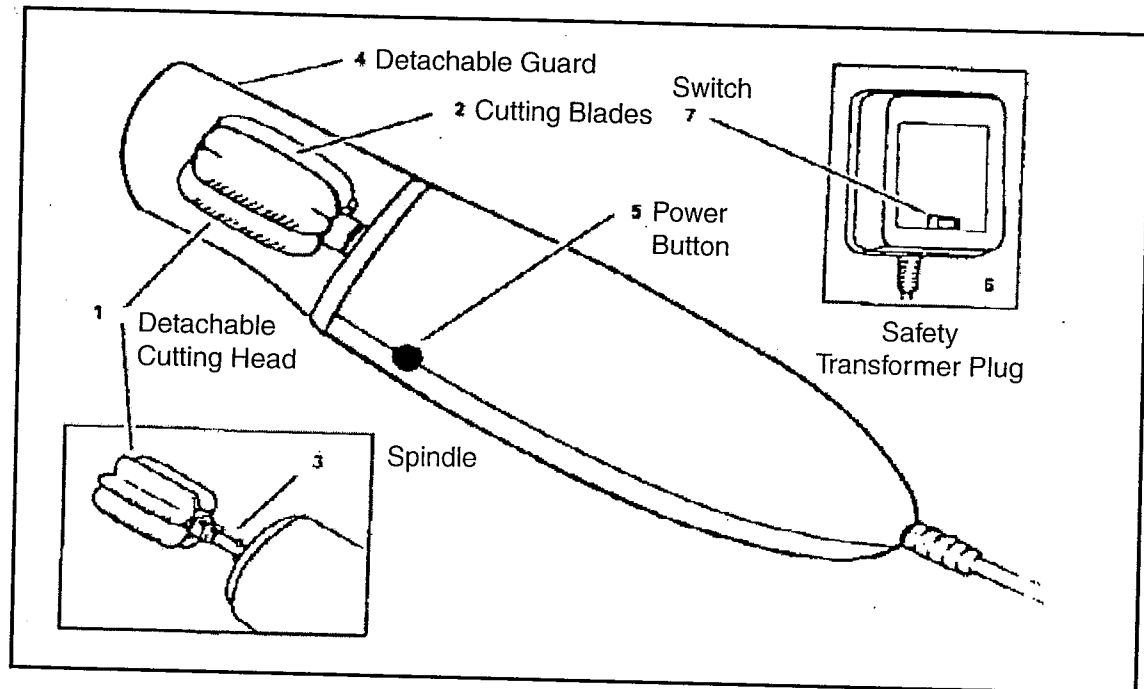

IMPORTANT NOTICE

*If any parts are missing or defective,
DO NOT return this product,
Please call our Customer Service Department for assistance.*

800-233-9054 Monday - Friday 9am - 5pm CST

Thank You

Important Safeguards

1. When using electrical appliances basic safety precautions should always be followed.
2. Please read all instructions carefully before operating and retain for future use.
3. The transformer is an integral part of the product and no attempt should be made to change or remove it.
4. The peeler is an effective cutting tool. Do not touch the cutting head during use or run rotating cutting head over skin.

CAUTION: *THIS APPLIANCE IS A CUTTING TOOL. PRECAUTIONS SHOULD BE TAKEN TO PREVENT RISKS OF CUTS OR FRICTION BURNS CAUSED BY TOUCHING THE CUTTING HEAD DURING USE. TO PREVENT ENTANGLEMENT , MAKE SURE LONG HAIR IS KEPT AWAY FROM THE ROTATING CUTTING HEAD.*

5. Do not use this appliance outdoors.
6. To protect against damage or electrical hazard, do not immerse any part of the appliance (other than cutting head or guard after removal) in water or any other liquid.
7. Close supervision is necessary when the appliance is used by or near children.
8. Always unplug from the wall outlet when not in use and before cleaning.
9. Do not operate any appliance with a damaged cord or transformer , after an appliance malfunctions or if it has been damaged in any manner. Return to Salton Maxim Housewares, Inc. for examination or repair.
10. The use of attachments not recommended by Salton Maxim Housewares, Inc. may cause fire , electrical shock or injuries.
11. Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted. Ensure the cord is always kept clear of the cutting head during use.

12. Do not place on or near a electric or gas burner, or where it could touch a hot oven or microwave.
13. Do not use abrasives, caustic cleaners, or oven cleaners when cleaning this appliance.
14. When using this item make sure all items of clothing, long hair and other similar items are kept clear of the rotating cutting head.
15. Do not use this appliance for other than intended use.

SAVE THESE INSTRUCTIONS

This appliance is **FOR HOUSEHOLD USE ONLY**

Instructions for Use

1. Ensure the Cutting Head and Guard are securely in place.
2. Select Left or Right handed operation by moving the switch on the transformer.
3. Plug the Transformer into a wall outlet.
4. Hold vegetable or fruit in one hand with the Guard at the top of the food.
5. Press the Power Button to operate. The head will rotate and you will hear a gentle humming sound.
6. Using very light strokes move the Cutting Head over the surface of the vegetable or fruit.. Always move peeler away from you.

User Maintenance Instructions

1. Before cleaning or removing parts always unplug the peeler from the wall outlet.
2. Remove Guard by holding firmly at it's base and slide it out

of the guard groove. Clean and dry thoroughly.

3. Carefully pull Cutting Head off spindle.
4. Clean Cutting Head by using a soft brush and warm water to remove waste trapped in the blades.
5. Dry thoroughly and replace by pushing on to the spindle and turning until it snaps into position.
6. Replace guard by sliding back into position.

For Best Results

1. The Wonder Peeler can work on many different kinds of fruits and vegetables, from potatoes, carrots and cucumbers to pears and kiwi fruit.
2. The wonder Peeler does not work as well on smooth, waxy fruits & vegetables such as apples.
3. Use fresh produce as older produce tends to soften.
4. For easy clean up place a large bowl on the counter to catch the peelings from your produce.

ONE-YEAR LIMITED WARRANTY

This Salton/MAXIM product warranty extends to the original consumer purchaser of the product

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares, Inc., or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton/MAXIM Housewares, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects of failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at Salton/MAXIM's option) when the product is returned to the Salton/MAXIM facility. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair

Should the appliance malfunction, you should first call toll free 1 800 233 9054 between the hours of 9:00 am and 5:00pm Central Standard Times and ask for CUSTOMER SERVICE stating that you are a consumer with a problem.

In-Warranty Service: For an appliance covered under the warranty period, no charge is made for service or postage. Call for pre-paid return mailing label. (US Customers Only)

Out-of Warranty Service: A flat rate charge by model is made for out of warranty service. Include \$6.00 for return shipping and handling.

Salton/MAXIM cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Return the appliance to:

ATTN: Repair Department, Salton/Maxim Houseware, Inc.
550 Business Center Drive, Mt. Prospect, Illinois 60058

For more information on Salton/MAXIM products:

visit our website: <http://www.SALTON-MAXIM.com> or

E-mail us at SALTON 550@aol.com

Printed in China

©1997 Salton/MAXIM Housewares, Inc.