 


OWNER'S MANUAL
Model No. SR2

PRO
STEAM

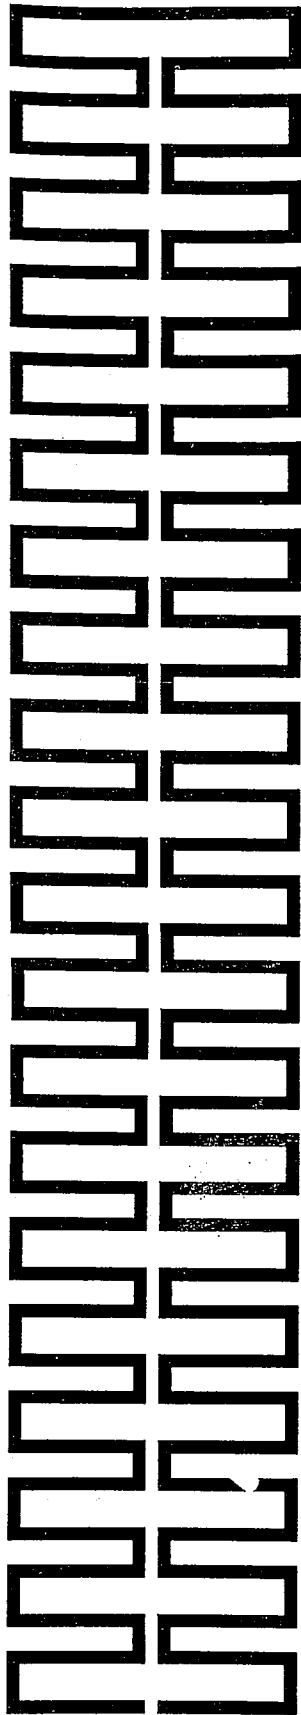

salton®

Get a taste of the good life with Salton.

Important Safeguards

When using your iron, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Use iron for its intended use.
3. To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
4. The iron should always be turned OFF before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
6. Always disconnect iron from electrical outlet when filling with water or emptying, and when not in use.
7. Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron; Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
8. Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
9. Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down. There may be hot water in the reservoir.

 
SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 10-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

Save These Instructions

Operating Instructions

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

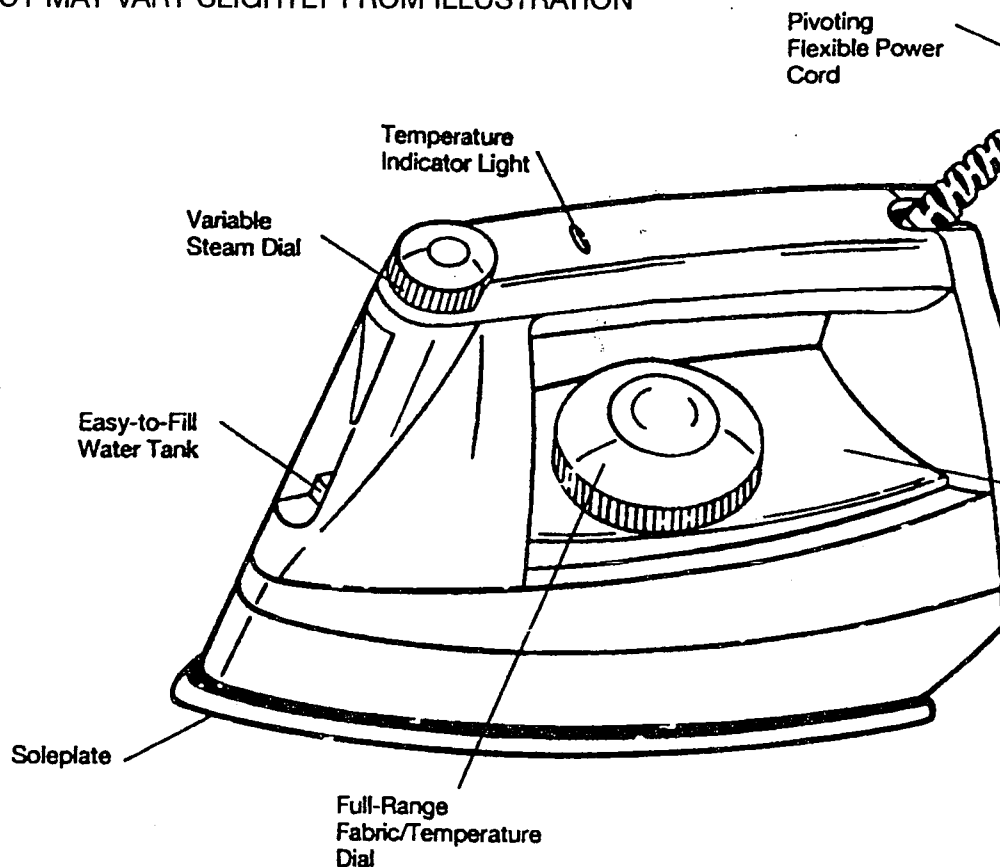

Care and Maintenance

This appliance is for household use and may be plugged into any AC electrical outlet (ordinary household current).

NOTE: This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug fits in a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SPECIAL ATTENTION:

Your new appliance is designed with a protective coating around the heating elements. When plugged in and operating for the first time, there may be a little momentary smoking while this coating is initially heated. This represents no danger to the user and does not indicate a defect in the unit. When using for the first time, allow the appliance to continue heating until the smoke dissipates. This should last only about 30 seconds.

operating temperature. Turn the Variable Steam Dial to the amount of steam desired: light, medium or maximum. For maximum steaming, keep water level above the minimum refill line.

The Temperature Indicator Light glows when turned on and goes off after temperature is reached. This will indicate to you that the unit is operating properly, keeping the iron at its operating temperature. The Temperature Indicator Light works in both steam and dry ironing settings.

NOTE: *For steam, you must set the Fabric/Temperature Dial to a higher setting, linen, cotton or wool.*

Always pour out any water left in the iron after each use. Be sure the iron is unplugged and in the "Off" position. Slowly tilt iron nose down over the sink, with the steam vents facing away from you. The water will run out of the reservoir. Take caution when emptying water, as it may be hot.

DRY IRONING: Place Variable Steam Dial in the "Off" position. Set Fabric/Temperature Dial and begin.

TO TURN IRON OFF: Turn the Fabric/Temperature Dial to the "Off" position and unplug the iron. Allow iron to cool completely before storing.

WHEN NOT USING, PLACE IRON ON HEEL REST TO AVOID BURNING THE FABRIC OR DAMAGING OTHER SURFACES.

User Maintenance Instructions

TO CLEAN: Approximately once a month or so you should engage the self-cleaning feature to remove any scales or impurities. Fill the water reservoir to 1/2 full.

Place the iron on the Heel Rest. Plug into an electrical outlet and turn the Fabric/Temperature Dial to the highest heat setting and the Variable Steam Dial to the maximum steam position. Allow iron to heat up until the Temperature Indicator Light goes out. Turn off and remove the plug from the outlet. Hold the iron horizontally over the sink. Boiling water and steam will begin to flow from the steam holes in the Soleplate. Move the iron forward and backward to help expel impurities. When steaming stops, repeat procedure until the reservoir is empty.

TO CLEAN SOLEPLATE: The iron should be fully cooled before Soleplate cleaning begins. Apply a small amount of mild cleaner to a damp cloth. Gently rub Soleplate, then wipe with a moist cloth.

NEVER USE scouring pads or abrasive cleaners on Soleplate, as this may scratch the surface.

 
BEFORE USING: Preheat, move iron over an old cloth several times to remove any residue from the Soleplate.

TO STORE: Unplug appliance and allow to cool. STORE IN UPRIGHT POSITION on Heel Rest. Never store iron lying on Soleplate.

How To Use Your New Steam Iron


WARNING:

Irons are extremely hot; do not leave unattended while plugged in. Keep children away; this is not a toy.

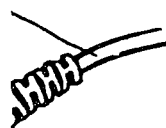

Heel Rest

 Full-View Water Window

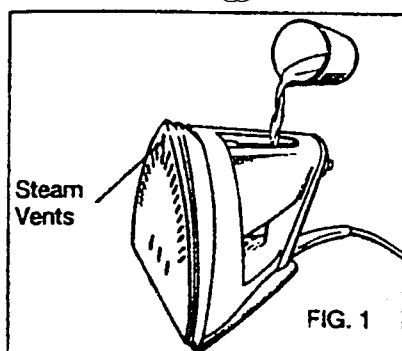

Steam Vents

FIG. 1

Always check the ironing instructions on the garment label first. Sort the fabrics out according to the ironing temperature. The iron heats up faster than it cools down. Therefore, start ironing the articles requiring the lower temperatures, and then progress to the higher temperatures. If ironing instructions are missing and you know the fabric, refer to the fabric chart on the iron. If you are not sure of the fabric, test by ironing an inconspicuous area such as an inside seam or edge. If the iron drags or the fabric changes color, lower the temperature and/or use a pressing cloth.

For blended fabrics, you must always use the lower setting. (E.g., a garment with 60% nylon and 40% wool should be set at the temperature indicated for nylon.)

ALWAYS TEST BY IRONING AN INCONSPICUOUS AREA.

BEFORE USING: Preheat; move iron over an old cloth several times to remove any residue from the Soleplate.

HOW TO FILL WITH WATER: Make sure iron is unplugged and the Fabric/Temperature Dial is in the "Off" position. Place iron on the Heel Rest and set the Variable Steam Dial on the "Off" setting. Pour water into Water Tank (Fig. 1).

In areas that have very hard water, use of distilled water is preferred. Be careful not to overfill. If steam should fail to start when using, and iron is in ironing position, gently bump the Soleplate on the ironing board once or twice. This helps to start the steam action.

NOTE: Water may drip from Steam Vents when iron is used with the Steam Button in the up position, if Temperature Selector is set below steam area or if the iron is not preheated for 1 to 2 minutes. If dripping still occurs after preheating with Temperature Selector in steam area, move the Temperature Selector to a slightly higher setting.

STEAM IRONING: Fill with water as described above, plug into electrical outlet, and set Fabric/Temperature Dial to appropriate setting. In the steam range, these settings are linen, cotton or wool. The Temperature Indicator Light will come on, indicating the iron is plugged in and turned on. The Temperature Indicator Light will turn off when the iron reaches its

ONE-YEAR LIMITED WARRANTY

This Salton/MAXIM product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares, Inc., or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton/MAXIM Housewares, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at Salton/MAXIM's option) when the product is returned to the Salton/MAXIM facility. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair

Should the appliance malfunction, you should first call toll-free 1-800-233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CUSTOMER SERVICE stating that you are a consumer with a problem.

In-Warranty Service: For an appliance covered under the warranty period, no charge is made for service or postage. Call for pre-paid return mailing label. (U.S. Customers Only)

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$8.00 for return shipping and handling.

Salton/MAXIM cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem; your full return address and daytime phone number; a note describing the problem you experienced; a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Return the appliance to:

ATTN: Repair Department, Salton, Inc.
708 South Missouri St. Macon, MO 63552-1343

For more information on Salton/MAXIM products:

visit our website: <http://www.SALTON-MAXIM.com> or
E-mail us at SALTON 550 @ aol.com

Printed in China

© 1996 Salton/MAXIM Housewares, Inc.