 


Westinghouse

Steam **xtreme**™

Touch Sensor™ Steam Iron

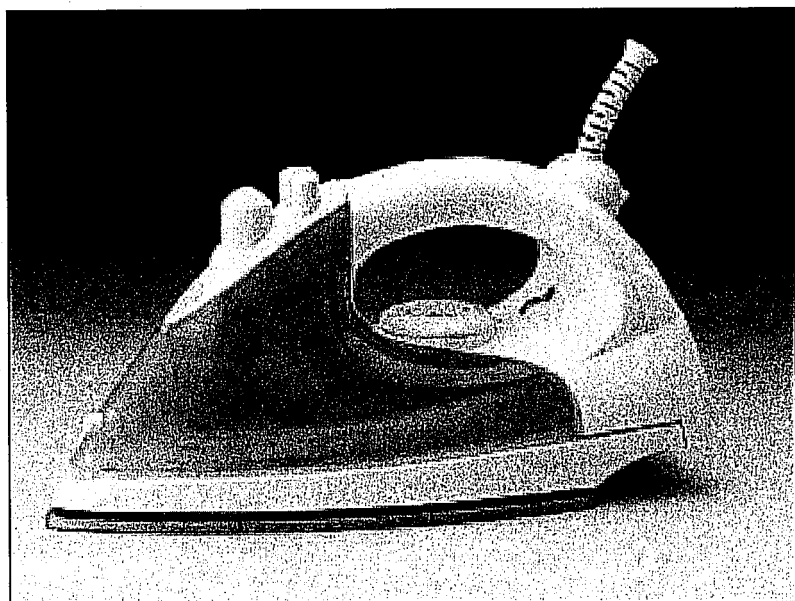

WST5003

You can be sure...if it's Westinghouse

IMPORTANT SAFEGUARDS

When using your flat iron, basic safety precautions should always be followed including the following:

1. Read all Instructions.
2. Use Iron only for its intended use.
3. To protect against a risk of electric shock, do not immerse the Iron in water or other liquids.
4. The Iron should always be turned to MIN before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Let Iron cool completely before putting away. Loop cord loosely around Iron when storing.
6. Always disconnect Iron from electrical outlet when filling with water or emptying and when not in use.
7. Do not operate Iron with a damaged cord or if the Iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the Iron. Incorrect reassembly can cause a risk of electric shock when the Iron is used. Contact Consumer Service for examination and repair.
8. Close supervision is necessary for any appliance being used by or near children. This appliance is not for use by children. Do not leave Iron unattended while connected or on an Ironing board.
9. Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam Iron upside down---there may be hot water in the reservoir.
10. Position Iron carefully on ironing board to avoid it from being knocked over.

SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 15-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

SAVE THESE INSTRUCTIONS

For Household Use Only

ADDITIONAL IMPORTANT SAFEGUARDS

CAUTION HOT SURFACES: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires or other damage to persons or property.

1. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
4. Do not leave this appliance unattended during use.

Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Electric Power

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

Getting To Know Your Westinghouse WST5003 Steam Extreme Iron

The box containing your Westinghouse Steam Extreme Iron should include the following parts. If any of the following parts are missing, contact customer service.

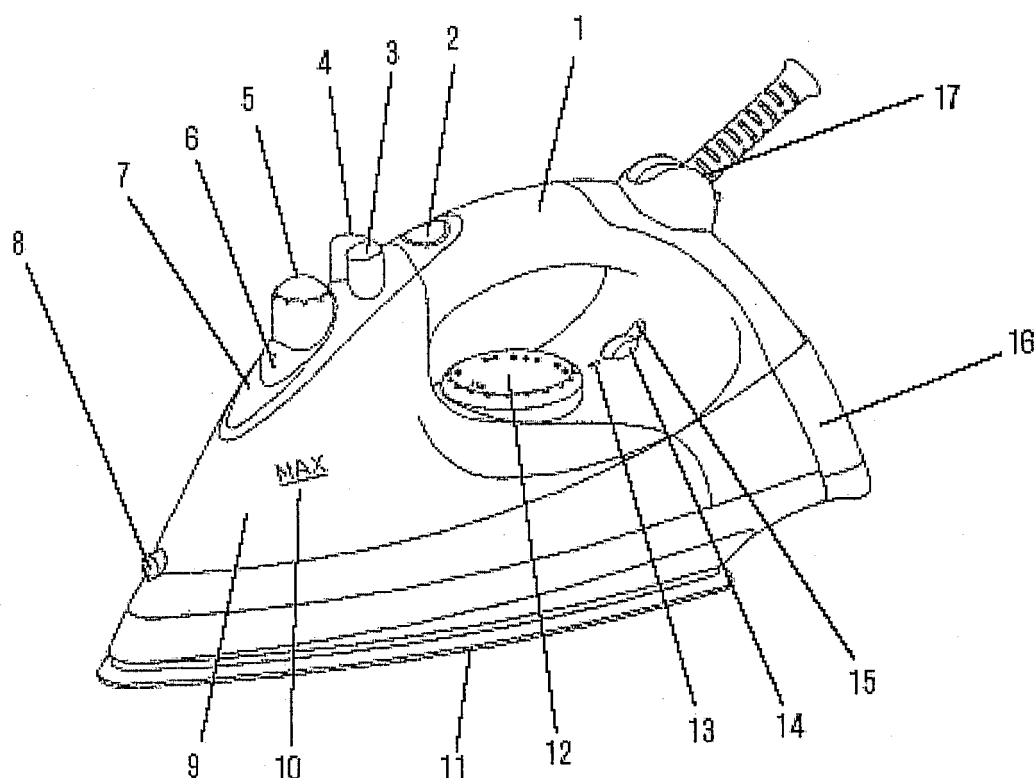 


FIGURE 1

- | | |
|---|--|
| 1. Soft-Touch Handle | 9. Detachable Water Tank (P/N 50484 WST) |
| 2. Detachable Water Tank Button | 10. Maximum Water Level |
| 3. Burst of Steam Button | 11. Non-Stick Soleplate |
| 4. Spray Button | 12. Temperature Control Dial |
| 5. Variable Steam Dial/Steam Valve
(P/N 50483) | 13. Temperature Control Indicator Line |
| 6. Variable Steam Indicator Line | 14. Green Auto Shut-Off Light |
| 7. Water Tank Opening | 15. Red Power On/Heating Light |
| 8. Spray Nozzle | 16. Iron Base |
| | 17. Pivot Cord |

Getting To Know Your Westinghouse WST5003 Steam Extreme Iron (cont'd)

Variable Steam Dial Settings

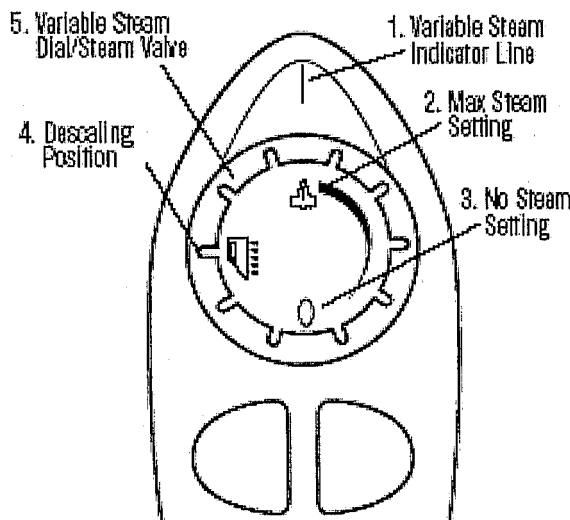 


FIGURE 2

Temperature Dial Settings

Fabric	Temperature/Steam
Delicates Nylon Acetate Silk	Low ● ⊘
Polyester Wool	Medium ●● ⊘
Cotton Linen	High ●●● ☼

FIGURE 3

For best results, check garment labels for the temperature and steam setting recommended by the fabric manufacturer, or consult the enclosed garment care tips pamphlet for additional information. To prevent damaging garments from too hot of an iron; it is best to first iron garments that require a low temperature. If you should need to switch from a high setting to a lower temperature, for example ●●● Cotton to ● Nylon, allow the iron to cool down for about 5 minutes to reach the lower temperature.

Patented Automatic Safety Shut-Off Feature

This Iron has two kinds of safety shut-off mechanisms. One is a patented, touch-sensitive "brain" in the handle which turns the iron on or off when it is in the horizontal position. The other is a timer that automatically shuts the iron off if it is left resting in the upright vertical position for more than 15 minutes.

Auto Off/On (Figure 4)

When the iron is on, the green Auto Shut-Off Light will come on. When the iron is off, the green Auto Shut-Off Light will go off.

FIGURE 4



FIGURE 5

 
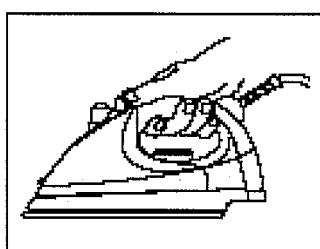 


FIGURE 6

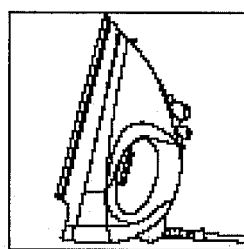

Power On/Heating (Figure 4)

When the iron is heating up or the temperature setting has been adjusted, the red Power On/Heating Light will come on. When the temperature setting has been reached, the red Power On/Heating Light will go off.

Horizontal Position (Figure 5)

When the iron is plugged in and resting in the horizontal position, it will remain on as long as your hand is making contact with the handle. Once you take your hand off the handle, the iron automatically turns itself off. The green Auto Shut-Off Light and red Power On/Heating Light will both turn off. For example, if you are ironing and leave the iron with the Non-Stick Soleplate down on the ironing board to answer the phone, the iron will automatically begin to de-energize. Although de-energized and starting to cool, the iron still remains hot. Use caution to prevent burning or scorching when leaving the iron with the soleplate in the down position. The iron will turn back on as soon as you grip the handle and resume ironing. **Important:** To return the iron to the desired temperature, allow it to rest in the upright position until the red Power On/Heating Light goes off.

Vertical Position (Figure 6)

When the iron is plugged in and resting on its heel, it will remain on for 15 minutes, allowing ample time to reposition garments during the ironing process. If the iron is left resting for more than 15 minutes, it will automatically shut-off. To begin ironing again after the timer has shut off the iron, pick it up by the handle. The green and red lights will come on. Turn the Temperature Control Dial to desired setting and return it to its upright position. When the temperature setting has been reached, the red Power On/Heating Light will go out and you are ready to iron.

OPERATING INSTRUCTIONS

Before First Use

1. Remove any protective coverings from the Non-Stick Soleplate and the body of the Iron.
2. Unwind and straighten the power cord.
3. Flush the Non-Stick Soleplate steam vents to ensure that no stain is transferred onto the fabric from residue possibly left in the vents from the manufacturing process. To do that, see SELF-CLEANING/FLUSHING.

Note: When the Iron is plugged in for use, the Iron must first be placed in the horizontal position with your hand making contact with the handle (see Figure 5). The Iron can then be placed in the vertical position (see Figure 6) and the desired temperature selected. If the Iron is not first placed in the horizontal position, the Iron will not heat-up. This is an additional safety feature.

Ironing Tips

- If you are unsure of a garment's fabric content, start on a low setting and test the Iron on an area of the garment that does not show, such as a seam. Gradually increase the heat setting until wrinkles remove without damaging the fabric.
- To freshen up garments made of velvet, felt, suede or velour, hold the steaming Iron horizontally 2 inches above the fabric for a gentle steaming. Make sure the Iron does not come in contact with the fabric.
- To prevent shine, Iron dark garments or those made of silk, acetate or rayon inside out.

Using As A Dry Iron

The Iron can be used on the dry setting with or without water in the Detachable Water Tank. However, it is best to avoid having the Detachable Water Tank too full of water while dry ironing.

1. If using for the first time, see BEFORE FIRST USE.
2. Position Temperature Control Dial to MIN, lowest setting.
3. Turn the Variable Steam Dial to the 0 position for no steam.
4. Stand the Iron, on its heel, in an upright position on a heat resistant surface. Plug into a 120 V ~ 60 Hz outlet.
5. Turn the Temperature Control Dial clockwise to the desired setting.
6. Tilt the iron to the horizontal position (see Figure 5) to turn the Iron on. It may then be returned to the vertical position (see Figure 6) to preheat the Iron.
7. When the red Power On/Heating Light goes off, the Iron has reached the desired temperature. The light will continue to turn off and on during use to maintain the proper temperature.
8. When finished using, turn Temperature Control Dial to MIN, lowest setting and unplug. Allow the Iron to cool before cleaning the exterior or storing.

OPERATING INSTRUCTIONS (cont'd)

Filling The Detachable Water Tank.

CAUTION: IF THE IRON IS HOT, DO NOT FILL WITH WATER.

Fill the Detachable Water Tank with tap water or distilled water. Do not use chemically descaled water or any other liquids.

1. Unplug and allow the iron to cool before filling.
2. Turn the Variable Steam Dial to no steam setting, the 0 position.
3. Press the Detachable Water Tank Lock button to release the Detachable Water Tank (see FIGURE 7).
4. Fill water through the Water Tank Opening (see FIGURE 8).
5. Fill to the MAX level as marked on the Detachable Water Tank (see FIGURE 9).
6. To attach the Detachable Water Tank, push in until it snaps into position (see FIGURE 7).

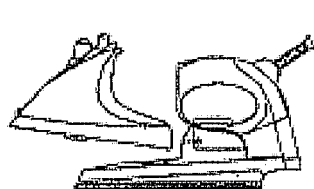 


FIGURE 7

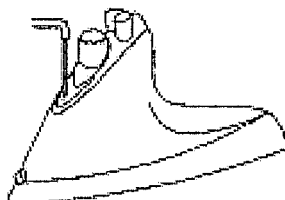 


FIGURE 8

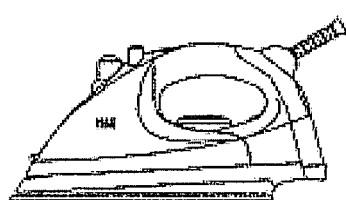 


FIGURE 9

Using As A Steam Iron

When using as a steam iron, be sure the temperature setting on the temperature dial is on the maximum steam setting *******. Do not use any other setting for steam ironing.

1. See BEFORE FIRST USE.
2. Unplug the iron from the outlet.
3. Fill the Detachable Water Tank with water; see FILLING THE DETACHABLE WATER TANK.
4. Stand the iron on its heel in an upright position on a heat resistant surface. Plug into a 120 V ~ 60 Hz outlet.
5. Turn the Temperature Control Dial to maximum position *******.

NOTE: Always set the Temperature Control Dial to the maximum position for steam.

6. Tilt the iron to the horizontal position (see FIGURE 5) to turn the iron on. It may then be returned to the vertical position (see FIGURE 6) to preheat the iron.
7. Allow approximately 45 seconds for the iron to reach the desired temperature. The red Power On/Heating Light will turn off. The light will continue to turn off and on during use to maintain the proper temperature.
8. Turn the Variable Steam Dial clockwise for more steam and counter-clockwise for less steam. Turn the Variable Steam Dial to **0** position for maximum steam.
9. When finished, turn the Temperature Control Dial to MIN, turn Variable Steam Dial to the "0" position and unplug iron. Allow iron to cool before cleaning the exterior of the iron for storing.

CAUTION: AVOID COMING IN CONTACT WITH ESCAPING STEAM.

OPERATING INSTRUCTIONS (cont'd)

Burst Of Steam

For a penetrating burst of steam to iron faster and to smooth difficult wrinkles, firmly press the Burst of Steam Button (see FIGURE 10). The red Power On/Heating Light must be on for best results. Do not press the Burst of Steam Button more than three times successively. Pause for at least 5 seconds to let the Iron reheat for additional steam. For maximum steaming, keep the Detachable Water Tank at least half full.

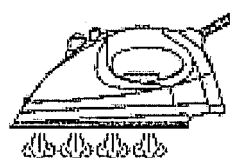 


FIGURE 10

Spray

For a mist of water to moisten the dry and difficult fabrics such as linen, cotton or wool, or to handle stubborn wrinkles, aim the Spray Nozzle and press the Spray Button (see FIGURE 11). The spray function is also handy to moisten creases accidentally ironed into the fabric. The spray function can be used on any setting and does not affect the ironing temperature.



FIGURE 11

Using The Vertical Steam Function

The vertical steam feature allows you to eliminate wrinkles from drapes without having to take them off the rod or to freshen the appearance of clothing on the hanger.

1. If using for the first time, see BEFORE FIRST USE.
 2. Unplug the iron from the outlet.
 3. Fill the Detachable Water Tank with water, see FILLING THE DETACHABLE WATER TANK.
 4. Turn the Temperature Control Dial and Variable Steam Dial to desired setting.
 5. Stand the iron on its heel in an upright position on a heat-resistant surface. Plug into 120 V ~ 60 Hz outlet.
 6. Allow approximately 45 seconds for the Iron to reach the desired temperature. The red Power On/Heating Light will turn off.
 7. Hold the iron 7-15 inches away from the garment and press the burst of steam button once (see FIGURE 12).
 8. Wait a few seconds before pressing the Burst of Steam Button again. The red Power On/Heating Light will cycle on and then off during this process. Do not press the burst of steam button more than three times successively when the red Power On/Heating Light is ON. For best results, keep Detachable Water Tank at least half full.
 9. When finished, turn Temperature Control Dial to MIN, turn Variable Steam Dial to 0 and unplug the Iron. Allow Iron to cool before cleaning the exterior of the Iron for storing.
- CAUTION: AVOID COMING IN CONTACT WITH ESCAPING STEAM.**

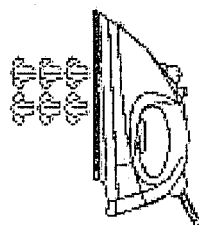 


FIGURE 12

User Maintenance Instructions

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to a qualified appliance repair technician if servicing is needed.

Care And Cleaning

CAUTION: Unplug the iron from the electrical outlet and allow to cool before cleaning the exterior of the iron and storing. Never Immerse the iron in water.

NOTE: Do not put any chemical cleaning agents or solvents in the Detachable Water Tank. If starch or other residues cling to the Non-Stick Soleplate, use a hot iron cleaner according to directions. Hot iron cleaner is available at mass merchandise, discount or hardware stores.

Emptying The Detachable Water Tank

The Detachable Water Tank should be emptied after each use.

1. When finished, turn Temperature Control Dial to MIN, turn the Variable Steam Dial to 0 position and unplug the iron from the electrical outlet.
2. Detach the water tank as stated in FILLING THE DETACHABLE WATER TANK.
3. Hold the Detachable Water Tank upside down and gently shake it to remove the remaining water in the tank (see FIGURE 13).
4. Press the Burst of Steam and Spray Buttons to release any remaining water.

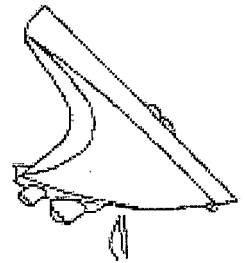 



FIGURE 13



Self-Cleaning/Flushing

Flushing the iron is advised after every 5 uses or more regularly to prevent harmful mineral build-up that can clog the Iron and prevent it from heating and steaming properly.

1. Fill the Detachable Water Tank half full; see FILLING THE DETACHABLE WATER TANK.
2. Stand the iron on its heel in an upright position on an iron-safe, heat resistant surface. Plug into a 120 V ~ 60 Hz outlet.
3. Turn the Temperature Control Dial clockwise to the maximum setting *******.
4. The red Power On/Heating Light will turn off when the Iron has reached the desired setting.
5. Wait for one more cycle, the red Power On/Heating Light will cycle on and back off again.
6. Turn the Temperature Control Dial counter-clockwise to the "0" position.
7. Unplug cord from outlet.
8. Turn the Variable Steam Dial counter-clockwise to descaling position . The Variable Steam Dial will raise slightly.
9. Steam and hot water will flow through the vents on the Non-Stick Soleplate, washing away the scales and minerals that have built-up in the iron.
10. Gently move the iron back and forth until the Detachable Water Tank is empty.
11. Press the Variable Steam Dial and turn to the 0 position.

User Maintenance Instructions (cont'd)

Cleaning Steam Valve

1. Turn the Variable Steam Dial counter-clockwise to the descaling position  and pull out the Steam Valve to remove from the Iron (see FIGURE 14).
2. Soak the Steam Valve in white vinegar to dissolve calcium and mineral deposits (see FIGURE 15).
3. Never use any sharp or rough objects to remove the deposits from the Steam Valve.
4. Rinse the Steam Valve with tap water.
5. Replace the Steam Valve in the descaling position  and gently press down until in position.
6. Turn the Variable Steam Dial to 0 position.

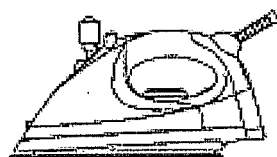 


FIGURE 14



FIGURE 15

Storing The Iron

Remove the cord from the outlet by grasping the plug rather than pulling the cord. Empty the Detachable Water Tank after each use, see **EMPTYING THE DETACHABLE WATER TANK**. Allow the iron to **COOL COMPLETELY** before putting away. To protect the Non-Stick Soleplate, place the iron in an upright position on its heel. Wrap cord around iron base (see FIGURE 16).

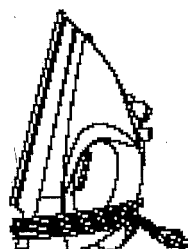 


FIGURE 16

LIMITED ONE-YEAR WARRANTY

Warranty Coverage: This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

Warranty Service: To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product. In either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

To return the appliance, ship to:

ATTN: Repair Center
708 South Missouri Street
Macon, MO 63552 USA

To contact us, please write to, call, or email:

Consumer Relations Department
PO Box 7366
Columbia, MO 65205-7366 USA
1-800-233-9054
E-mail: consumer_relations@toastmaster.com


What Is Not Covered: This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

LIMITATION ON DAMAGES: THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website: www.maxlm-toastmaster.com.

WESTINGHOUSE,  and "YOU CAN BE SURE...IF IT'S WESTINGHOUSE" are trademarks of WESTINGHOUSE ELECTRIC CORPORATION and used under license.

Patent No. 6,307,182
Printed in China

P/N 61630