



# **Coffee Mill**

**Model GC-30**

**Instructions and Warranty**

**MAXIM<sup>®</sup>**

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions carefully.
2. To protect against risk of electrical shock, do not immerse the appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from electrical outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to Salton/MAXIM Housewares, Inc. for examination, repair, electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by Salton/MAXIM may cause fire, electrical shock, or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Check bean chamber for presence of foreign objects before using.
11. Do not use appliance for other than intended use.


## SAVE THESE INSTRUCTIONS

**This appliance is for household use only.**

# Additional Important Instructions

1. If this appliance falls or accidentally becomes immersed in water, unplug it immediately. **Do not reach into the water!** Do not use this appliance after it has fallen into or becomes immersed in water. Return it to the Salton/MAXI Service Center for examination, repair or adjustment.
2. To reduce the risk of injury to persons or property, never use this appliance in an unstable position. Make sure that the lid, removable storage chamber, and the grinding wheel are **securely** assembled into the appliance before use.
3. This appliance should not be operated or cleaned by children. Keep this appliance out of the reach of children.
4. This appliance should be plugged into a 120V AC electric outlet only.
5. Always check the bean chamber for the presence of foreign objects before using.
6. Only coffee beans should be placed into the bean chamber.
7. **WARNING:** *To avoid serious injury, never place fingers or objects through the receptacle at the bottom of the bean chamber or through the spout through which ground coffee is emptied into the storage chamber.*
8. **READ THIS ENTIRE OWNER'S MANUAL BEFORE CLEANING OR OPERATING THIS APPLIANCE!**

## Description of Parts

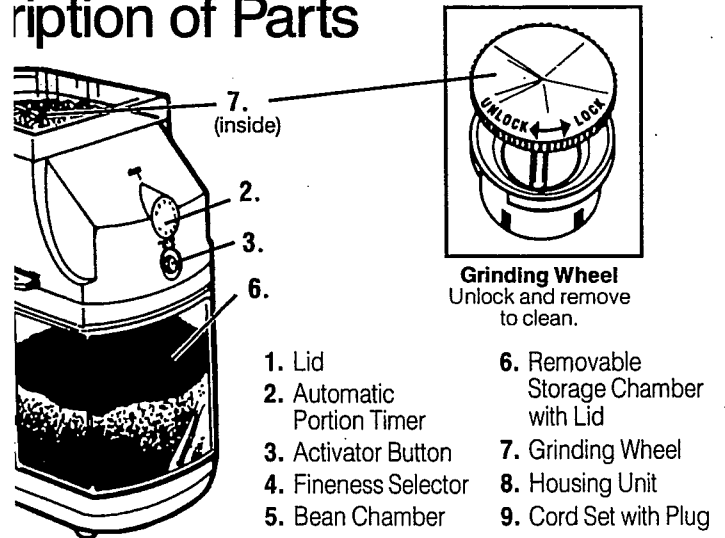

## Before Using for the First Time

Before using your MAXIM® Coffee Mill for the first time, make sure it is unplugged. Then wipe the storage chamber, the lid, and the bean chamber with a damp cloth. Allow to dry completely before using.

**1: THE LID AND STORAGE CHAMBER ARE NOT DISHWASHER SAFE.**

**2: TO AVOID ELECTRIC SHOCK, NEVER IMMERSE THIS APPLIANCE IN WATER OR IN ANY OTHER LIQUID.**

## Instructions for Use

Before using the lid, make sure the bean chamber is empty and clean.

Add coffee beans into the bean chamber on top of the lid and replace the lid. The bean chamber will hold 4 oz. of coffee beans which is approximately the amount for 8 cups of coffee.

Plug the cord into a 120V AC electrical outlet.

Turn the fineness selector on the left side of the unit. It has 12 settings from coarse to fine. After using the mill a few times, you can determine the proper setting to suit your own taste.

## Instructions for Use *(continued)*

Place the storage chamber with the cover in position into the unit and make sure it snaps in securely.

Set the automatic portion timer for the amount of cups you are going to grind.

**NOTE:** The markings on the adjusting knob serve as a guide to help you to prepare the right amount of coffee. Depending on the desired strength of the coffee, you may set the timer on a smaller or larger number of cups.

Push the activator button to start the coffee mill.

The grinder will grind the desired amount of coffee and will then switch off automatically.

**TE:** If you want to switch off the appliance before the time lapses, simply turn the portion timer to the "OFF" position.

Remove the storage chamber.

Unplug the appliance.

## Maintenance Instructions

For cleaning, unplug the appliance from electrical outlet.

Wash the lid and storage chamber in warm, soapy water.

Rinse and dry.

**V: THE LID AND STORAGE CHAMBER ARE NOT DISHWASHER SAFE.**

**3: TO AVOID ELECTRIC SHOCK, NEVER IMMERSE THIS APPLIANCE IN WATER OR IN ANY OTHER LIQUID.**

Clean the bean chamber with a brush to remove any residual coffee. The grinding wheel area can be cleaned by locking the wheel. **Make sure to lock the grinding wheel again before using the coffee mill the next time.**

The motor base may be wiped with a damp cloth.

**APPLIANCE IS FOR HOUSEHOLD USE ONLY.**

There are no user serviceable parts inside the **Coffee Mill**. Do not attempt to repair the **Coffee Mill** yourself. See the manual instructions in "Service and Repair" section.

## LIMITED WARRANTY

Products distributed by Salton/MAXIM Housewares, Inc. are warranted for one year from date of purchase against defects in workmanship and material. During that period these defects will be repaired or the product will be replaced at Salton/MAXIM's option, without charge. This warranty covers normal consumer usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, neglect, installation, commercial use or improper maintenance. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares, Inc., or to units which have been altered or modified without authorization of Salton/MAXIM Housewares, Inc., or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible. This warranty does not cover damage which results from unauthorized repairs.

## Service and Repair

DO NOT attempt to repair your MAXIM® GC-30 Coffee Mill. Attempts to repair this appliance yourself may render it dangerous to use. Should the appliance malfunction, you should first call toll free 1-800-233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER CUSTOMER SERVICE stating that you are a consumer with a problem. If the problem cannot be resolved, you will be asked to return the appliance to the factory for repair. Under no circumstances should you attempt to open the housing and repair the appliance. Should you do this, your warranty will be voided.

## To Return for Service

1. Securely package and return the product, PREPAID to:  
Salton/MAXIM Housewares, Inc., Repair Department  
550 Business Center Drive, Mt. Prospect, IL 60056
2. Be sure to enclose:
  - a. Your name, address and phone number.
  - b. The date of purchase (or receipt as a gift).
  - c. An explanation of the malfunction or reason for return.
  - d. Eight dollars (\$8.00) Check or Money Order payable to Salton/MAXIM Housewares, Inc. for return postage and handling.
  - e. To insure prompt "In-Warranty" service, be sure to include proof of date of purchase.
3. **Toll Free** Number: 1-800-233-9054.

We recommend you take the necessary precaution of insuring the parcel.

Printed in Hong Kong

© 1993 Salton/MAXIM Housewares, Inc.