 


cook's essentials®

HIGH PERFORMANCE KITCHENWARE

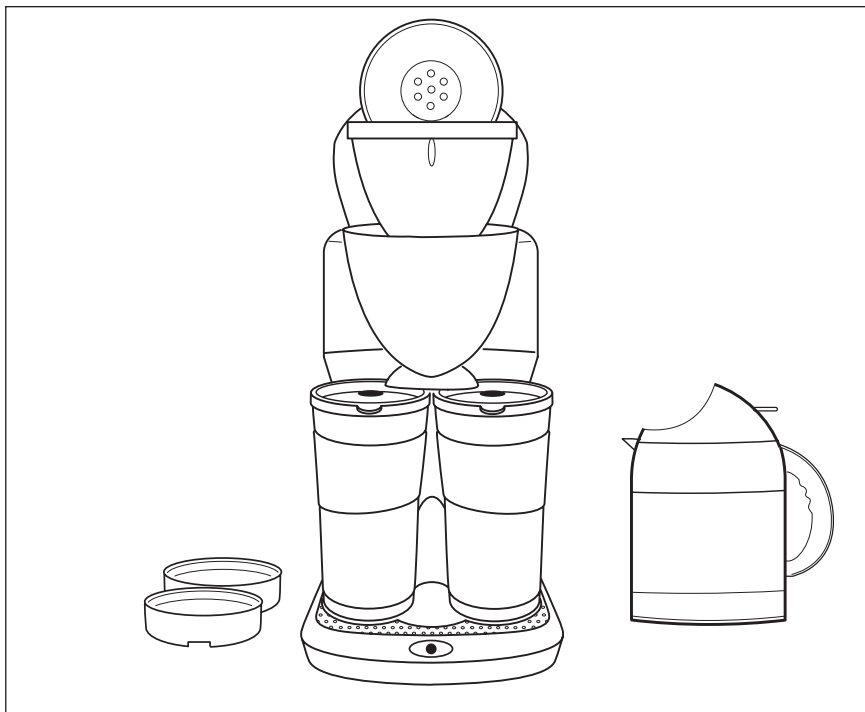

**TAKE 2™
COFFEE MAKER
WITH TWO 16 OZ. THERMAL MUGS
& THERMAL CARAFE**

MODEL CETCM2C

OWNER'S MANUAL

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
7. The use of an accessory not evaluated for use with this appliance may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, press the Power Switch to the **OFF** position, then remove the plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Be certain Filter Basket, Water Chamber Lid, and Flow Nozzle are securely in place before operating appliance.
14. Scalding may occur if the Water Chamber Lid is lifted or if the Filter Basket is removed, or if the Flow Nozzle is moved during the brewing cycle.
15. The Thermal Mugs and Thermal Carafe are designed to be used with this appliance. They must never be used on a range top.
16. Do not use a cracked Thermal Mug or Thermal Carafe.
17. Do not clean Thermal Mugs or Thermal Carafe with cleansers, steel wool pads, or other abrasive material.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

ADDITIONAL IMPORTANT SAFEGUARDS

WARNING: This appliance generates heat and escaping steam during use. Use proper precautions to prevent the risk of burns, fires, or other injury to persons or damage to property.

WARNING: DO NOT ADJUST WHILE BREWING COFFEE OR AFTER WATER IS ADDED.

1. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Use **water only** in this appliance! Do not put any other liquids or food products in this appliance. Do not mix or add anything to the water placed in this appliance, except as instructed in the User Maintenance Instructions to clean the appliance.
4. DO NOT attempt to move an appliance containing hot liquids. Allow appliance to cool completely before moving.
5. Keep appliance at least 4 inches away from walls or other objects during operation. Do not place any objects on top of appliance while it is operating. Place the appliance on a surface that is resistant to heat.
6. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
7. If this appliance falls or accidentally becomes immersed in water or any other liquid, unplug it immediately. **Do not reach into the water! Do not use this appliance after it has fallen into or has become immersed in water.** Contact Consumer Service for examination and repair.
8. Do not leave this appliance unattended during use.
9. The appliance must be left to cool down sufficiently before adding more water to avoid splattering.
10. Always use fresh, cool water in your appliance. Warm water or other liquids, except as listed in cleaning section, may cause damage to the appliance.
11. Do not put Thermal Mugs or Thermal Carafe into a microwave.

SHORT CORD INSTRUCTIONS

A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

BEFORE USING YOUR cook's essentials® CETCM2C TAKE 2™ COFFEE MAKER WITH CARAFE

IMPORTANT: Never place Thermal Mugs or Thermal Carafe on a hot stove or in a microwave. Never let Thermal Mugs/Thermal Carafe stand in water.

Before using your Take 2™ Coffee Maker for the first time, we suggest you become familiar with all of its parts. Read all instructions and cautions carefully.

Before brewing coffee, follow instructions for cleaning. See CARE AND CLEANING section in this manual.

CAUTION: Do not immerse cord, plug, or Coffee Maker unit in water or other liquids.

HELPFUL HINTS FOR BREWING

- Always use fresh, cold water for brewing. In areas with hard water or where water contains a high mineral content, use cold filtered water for optimal coffee taste.
- For best results, use #2 paper cone filters.

GETTING TO KNOW YOUR cook's essentials® CETCM2C TAKE 2™ COFFEE MAKER

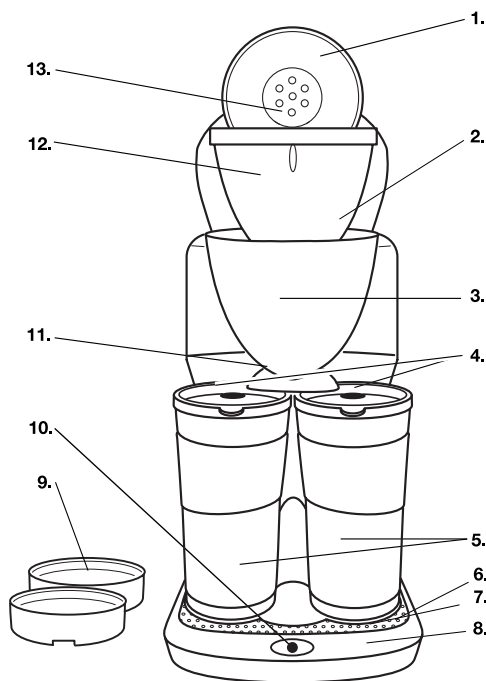 


FIGURE 1
Dual Mug Set Up

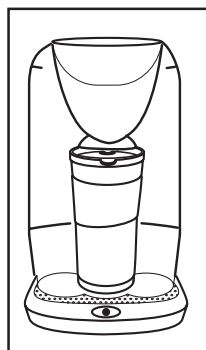 


FIGURE 3
Single Mug
Set Up

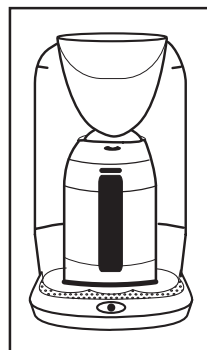 


FIGURE 4
Carafe
Set Up

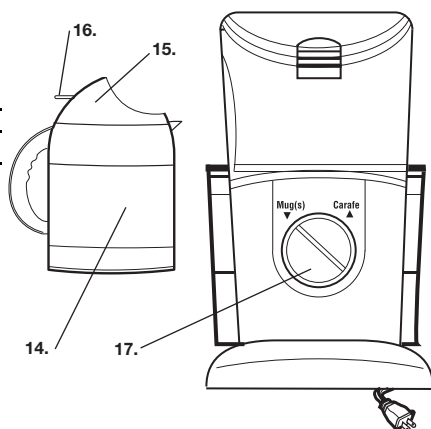 


FIGURE 2
Backside w/ Thermal
Mug/Carafe Dial

- | | |
|---|---|
| 1. Water Chamber Lid | 10. Power Switch with Indicator Light |
| 2. Water Chamber with Water Level Indicator | 11. Flow Nozzle (P/N 30908) |
| 3. Filter | 12. Removable Filter Basket (P/N 30907) |
| 4. Thermal Mug Lids (P/N 30909) | 13. Filter Basket Tab |
| 5. Thermal Mugs without Lids (P/N 30911) | 14. Thermal Carafe (P/N 31032) |
| 6. Removable Drip Tray Grid (P/N 31032) | 15. Thermal Carafe Lid (P/N 31033) |
| 7. Drip Tray (not shown) (P/N 31037) | 16. Pour Lever |
| 8. Base | 17. Mug/Carafe Dial |
| 9. Thermal Mug Covers (P/N 30924) | |

BREWING

1. Plug into 120V ~ 60 Hz outlet.
2. Make sure the Power Switch is in the **OFF** position. The Power ON Indicator Light will be OFF.

IMPORTANT: Place Coffee Maker on a level surface.

3. Using the Thermal Mug/Carafe Dial located on the back of the Coffee Maker (see Figure 2), turn the Dial clockwise to raise the Coffee Maker to the Carafe (upper) position. Turn the Dial counter-clockwise to lower the Coffee Maker to accommodate one or two Thermal Mugs.
4. Lift up the hinged Water Chamber Lid and fill to desired level with cold, fresh water for **1 Mug** or **2 Mugs**, or **Carafe** using the Water Level Indicator on the Water Chamber.

WARNING: When making one Thermal Mug, do not fill above the 1 Mug mark.

IMPORTANT: If cream or milk will be added to Thermal Mugs or Thermal Carafe, use less water for brewing.

5. For optimal holding temperature, rinse the inside of Thermal Mugs or Thermal Carafe with warm water before brewing. Place Lids securely on tops of Thermal Mugs. Press down on the Lids to ensure proper fit.

NOTE: You can brew either one Thermal Mug or two Thermal Mugs or the Thermal Carafe at once. Place Thermal Mugs snugly on Base/Drip Tray of unit as shown in Figure 1 (for two Thermal Mugs) or Figure 3 (for one Thermal Mug) or Figure 4 (for Thermal Carafe). Use the contoured design on the Drip Tray as a guide for Thermal Mug/Carafe alignment.

NOTE: *When using the Thermal Carafe, it is necessary to place the Thermal Carafe onto the Base/Drip Tray with the Handle facing outward, towards you.* (See Figure 4.) Make sure the Carafe is seated properly onto the Base/Drip Tray under the Flow Nozzle.

6. Insert a #2 paper cone filter into the Removable Filter Basket and add coffee grounds. Use approximately 1-1/2 to 2 tablespoons for each Thermal Mug of coffee. Use approximately 4-1/2 to 6 tablespoons of coffee for the Thermal Carafe. Close Water Chamber Lid.
7. Press the Power Switch **ON**. The Indicator Light will illuminate.

CAUTION: Avoid contact with heated water.

IMPORTANT: Do not remove Thermal Mugs /Thermal Carafe until the Indicator Light has turned OFF. The Indicator Light will turn OFF approximately two minutes after brewing is complete. This delay will allow the last drops of coffee to flow into the Thermal Mugs or Carafe.

8. After Indicator Light turns OFF, Thermal Mugs or Thermal Carafe may be safely removed.
9. If brewing more than one cycle, allow unit to cool for 10 minutes between cycles.

Using the Thermal Carafe To Serve

When the coffee is finished brewing, carefully remove the Thermal Carafe from the Base/Drip Tray. The Carafe will be in the closed position to retain heat. Press the Pour Lever with your thumb to pour coffee from the Carafe. When you release the Pour Lever, the Carafe will automatically be in the closed position.

USER MAINTENANCE INSTRUCTIONS

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THE BOTTOM COVER. NO USER-SERVICEABLE PARTS ARE INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.

Care and Cleaning

1. Make sure Power Switch is in the **OFF** position. The Indicator Light will be OFF.
 2. Unplug and allow to cool completely before cleaning.
 3. Open Water Chamber Lid and lift up on the tab of Removable Filter Basket. Discard any paper filter and coffee grounds.
 4. Remove Flow Nozzle by turning counter-clockwise a quarter turn and pulling down.
 5. Wash Removable Filter Basket, Flow Nozzle, Removable Drip Tray Grid, Thermal Mugs and Thermal Mug Lids, and Thermal Carafe in warm, soapy water. Rinse and dry thoroughly.
 6. Clean the outside of the Coffee Maker with a damp cloth.
- CAUTION: DO NOT IMMERSE CORD, PLUG OR COFFEE MAKER UNIT IN WATER OR OTHER LIQUID.**
7. Replace Removable Filter Basket and Flow Nozzle for next use.

Descaling

We recommend that you descale your Coffee Maker once a month because mineral deposits can form a coating in the Coffee Maker, causing slower brewing time and possibly an off flavor in the coffee. Use a cleaner recommended for Coffee Makers. To descale your unit:

1. Pour two ounces of vinegar or coffee cleaner into the Water Chamber. Add cold water to the **2 Mugs** mark on the Water Level Indicator.
2. Adjust the Mug/Carafe Dial; then place both Thermal Mugs or the Thermal Carafe in proper position on the Base/Drip Tray of the unit. When using the Thermal Carafe, make sure that the Handle is facing outward, towards you. (See Figure 4.)
3. See BREWING section in this manual. Follow brewing instructions except **do not add coffee to the filter**.
4. When the Indicator Light turns OFF, wait 15 minutes and pour solution from Thermal Mugs or Thermal Carafe back into Coffee Maker. Be sure that the Removable Filter Basket is still in proper position.
5. Turn unit ON again. Allow all of the solution to empty into Thermal Mugs or Thermal Carafe. When Indicator Light turns OFF, discard solution.
6. Allow unit to cool 10 minutes. To rinse unit, add cold water to the **2 Mugs** mark on the Water Level Indicator. Close Water Chamber Lid. Follow brewing instructions except **do not add coffee to the filter**.
7. At the end of the cycle, allow the unit to cool. Discard water and paper filter. Wash and dry Thermal Mugs and Thermal Carafe and other removable parts.
8. Unplug Coffee Maker from outlet. When Coffee Maker has cooled, wipe exterior with a damp cloth.

