

DESKTOP BUBBLE LIGHT

OWNER'S MANUAL & OPERATING INSTRUCTIONS Model ABL3SLQ

WET TUNES™

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER: To protect against risk of electrical shock:

- I. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- 2. Do not place or drop into water or other liquid.
- 3. Do not reach for a product that has fallen into water. Unplug immediately.

WARNING: To reduce the risk of electrocution, fire, burn, or injury to person:

- 1. This unit will be warm to the touch while in operation and until cooled after the unit has been turned off.
- 2. Keep out of the reach of children and pets.
- 3. Always operate the lamp on a firm, stationary surface.
- 4. Do not operate the lamp on any warm or hot surfaces; operate only at room temperature.
- 5. Do not use if cracked or damaged.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

ADDITIONAL SAFEGUARDS

- 1. When unit is activated, the water level will rise slightly. Be sure to leave a minimum one inch between the water level and the top of the tube.
- 2. Do not block the Air Opening on the Cap. This will cause an increase in pressure in the tube, which may permanently damage the unit and cause injury to persons.
- 3. Speaker is water resistant but not waterproof. Do not allow water to come into contact with the unit's Speaker, Switches or Buttons.
- 4. Do not allow the transformer to get wet.
- 5. This appliance has no user serviceable parts. Do not try to repair it yourself. Refer to the warranty section of this manual.
- 6. Close supervision is necessary when this appliance is used by, on, or near children, invalids or disabled persons.
- 7. Ensure that your hands are dry when operating the switch or removing the plug.
- 8. Do not allow the cord to hang where it can be easily tripped over or pulled.


PLASTICIZER WARNING

CAUTION: To prevent Plasticizers from migrating from the finish of the counter top, table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top. Failure to do so may cause the finish to darken. Permanent blemishes or stains can appear.

ed

ß

GETTING TO KNOW YOUR DESKTOP BUBBLE LIGHT

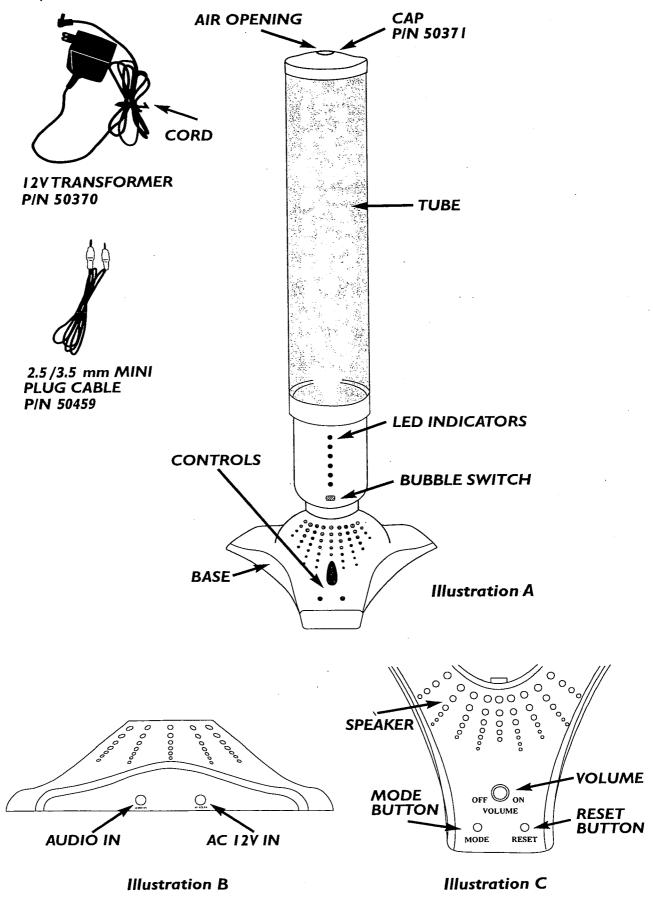

1T

Congratulations on your purchase of the Desktop Bubble Light, one of the latest developments in sound and light therapy by Relaxor®. This unique device combines lights, nature sounds and a modulated bubble device that gives you bubbles moving in synchronization with the sounds. You can even plug your own sound source (such as a radio or TV) into the unit and watch the bubbles move to the beat of your favorite tunes! Please follow the instructions carefully to gain a better understanding of your Desktop Bubble Light.

SETTING UP YOUR DESKTOP BUBBLE LIGHT

- 1. Carefully unpack Bubble Light and Transformer from box.
- 2. Remove Cap and carefully fill tube with water to within one inch from top of Tube. You may wish to rinse out the tube first to remove any packing dust that may have settled in the tube.
- 3. Replace Cap.
- 4. Carefully place lamp on a flat, stable surface. Be careful not to spill water on Base of unit. (See Illustration A).
- 5. Plug Transformer into the "AC 12V IN" socket, located on the back of the Base. (See Illustration B).
- 6. Plug the other end of the Transformer into a standard household 120V electrical outlet.

TO POWER THE UNIT


- 1. Turn the VOLUME knob clockwise to power the unit and activate the LED lights. (See Illustration C). The unit must be powered in order to activate the bubbles and sounds.
- 2. The three-color, yellow, red and blue LEDs will be activated.

JME

T

NATURE SOUNDS

I. To activate the nature sounds, slide the Bubble Switch to the NATURAL position. Press the MODE button to activate the first sound, Bird Song. The top LED will illuminate to denote that the Bird Song sound has been activated. In the NATURAL setting, the bubbles will move in-synch with the nature sounds.

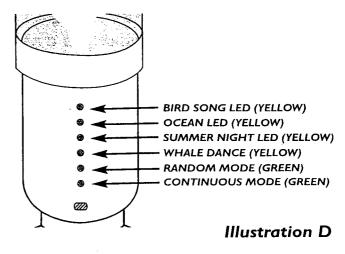

- 2. Continue pressing the MODE button to toggle through the various sound modes: Bird Song, Ocean, Summer Night, Whale Dance, Random Mode (unit randomly selects sounds) and Continuous Mode (unit plays all four sounds in order, continuously). The various LEDs will illuminate to indicate which nature sound has been activated.
- 3. To switch from bubbles that move in synchronization with the sounds to a constant stream of bubbles, slide the Bubble Switch to CONSTANT.
- 4. To deactivate the nature sounds, press the RESET button.
- 5. When finished, turn the VOLUME dial to OFF and unplug unit.

EXTERNAL SOUND SOURCE

- 1. To watch the bubbles move in synch with your own music, slide the Bubble Switch to the EXTERNAL setting.
- 2. Select sound source. A variety of sound formats may be played through the Audio Bubble Light, including cassette tapes, CDs, AM/FM radio, MP3s, mini disks and even your television.
- 3. Insert the 3.5 mm Mini Plug Cable into the Audio Out terminal or Headphone Jack of sound source selected. Make sure the Plug with two stripes goes into your external sound source. (See Illustration E).
- 4. Plug the end of the 2.5 mm Mini Plug Cable SOUND SOURCE with one stripe into the Audio In socket located on the back of the Base. (See Illustration B).

THIS PLUG FOR BUBBLE LIGHT

THIS PLUG FOR SOUND SOURCE

Illustration E

5. Activate external sound source. Sounds will now play through the built-in

Speaker in the Base. The bubbles will move in synch to your sounds. You can increase or decrease the amount of bubbles by adjusting the Sensitivity Dial on the back of the unit. (See illustration F).

- 6. To switch from bubbles that move in synch with the sounds to a constant stream of bubbles turn the Sensitivity Dial to LOW.
- 7. When finished, turn VOLUME dial to OFF and unplug unit.

NOTE: The quality of the sound output may vary depending on the source you select. We do not guarantee that every sound source will work with the unit.

NOTE: Sounds will not play through unit if the 2.5 mm Mini Plug Cable is plugged in the wrong way.

NOTE: Varying the volume of your external sound source will effect the intensity of the bubbles in the same manner as the Sensitivity Dial. (See Illustration F). However, varying the volume of the unit's Speaker will not affect the intensity of the bubbles.

NOTE: Some music will work better for illustrating the synchronized bubble effect. Experiment with your favorite sounds or CDs to see which ones work best. **AUTO**

SHUT-OFF

SENSITIVITY

DIAL

TIMER

This unit is equipped with a 30-minute shut-off timer. To activate, simply slide the Timer Switch to 30 MIN. To deactivate timer, slide the Timer Switch to OFF. (See Illustration F).

TO CLEAN: Unplug appliance and allow it to cool. **Illustration F**Use a soft, slightly damp cloth or sponge to wipe the surface. Never use abrasive cleaners or solvents, as they may scratch the surface. Do not allow water to come into contact with the unit's Speaker, Switches or Buttons.

TO STORE: Unplug unit and allow it to cool. Drain and allow unit to dry. Store unit in its box or in a clean, dry place. Never store unit while it is still plugged in.

USER MAINTENANCE: This appliance contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified service personnel if unit is damaged or if any parts are missing.

W) ELLOW)

V) N) IREEN)

on D

om ays e to:

's to T.

ıgh

on E

ilt-in

LIMITED ONE YEAR WARRANTY

Warranty: This Relaxor® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1 (800) 233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number ABL3SLQ when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (800) 233-9054.

Out-of Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$6.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

ATTN: Repair Center Salton, Inc. 708 South Missouri Street Macon, MO 63552 **To contact us,** please write to, call, or email:

Salton, Inc. P.O. Box 1637 Columbia, MO 65205-1637

1-800-233-9054

E-mail: Salton@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and in no event shall Salton be liable for any incidental or consequential damages, losses or expenses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products: visit our website: www.salton-maxim.com

©2002 Salton, Inc. All rights reserved.

P/N 61048

Made in China

06/02