 


CONVECTION OVEN WITH ROTISSERIE MODEL CV8020A

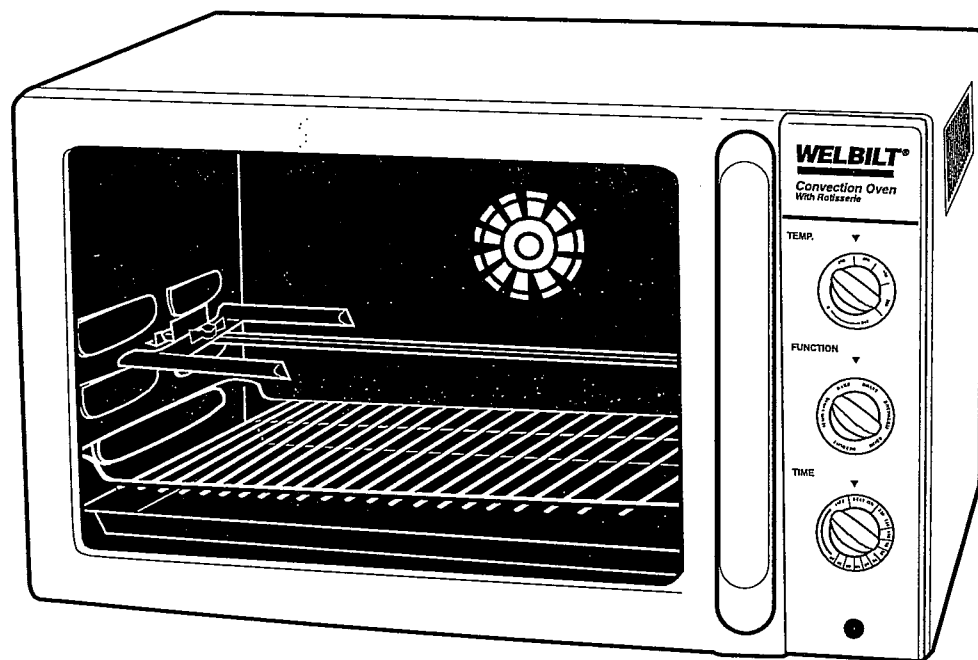

INSTRUCTION MANUAL

WELBILT®

HOUSEHOLD USE ONLY

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. Close supervision is necessary when any appliance used by or near children.
4. To protect against electric shock, do not immerse cord, plug, or any parts of the oven in water or other liquids.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest Authorized Service Center for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
8. Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
9. When operating the oven keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
10. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
11. To disconnect, turn the control to OFF, then remove the plug. Always hold the plug, but never pull the cord.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. Do not cover the bottom or any other part of the oven with metal foil. This may cause overheating of the oven.
14. Use extreme caution when removing tray or disposing of hot grease or other hot liquids.
15. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
16. A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on the Oven during operation.
17. Extreme caution should be exercised when using containers constructed of other than metal or glass.
18. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
19. Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
20. Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.
21. This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can break, but the pieces will not have sharp edges. Avoid scratching door surface or nicking edges. If the door has a scratch or nick, contact our toll-free customer service line before using the oven.
22. Do not use outdoors.
23. Do not use appliance for other than intended use.
24. This appliance is for **HOUSEHOLD USE ONLY**.

SAVE THESE INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **Do not attempt to defeat this safety feature.**

If needed, an extension cord may be used if you are careful in its use:

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. An extension cord must be arranged so that it will not drape over the counter or tabletop where it can be pulled on by children or tripped over accidentally.

**Convection cooking is the preferred method of cooking by many chefs.
You get superior results while saving time and energy.**

 
When roasting meats, the fan circulates hot air around the roast, sealing in flavor and juices. The roast is crispy and evenly browned on the outside, moist and flavorful on the inside. When baking, the fan maintains uniform heat throughout the oven. Baked goods are even, golden brown like those from the finest pastry shops. Large, half-sheet pans slide right into the oven in the place of the rack.

The oven also has settings for broil, slow cook, and defrost. It is equipped with a ROTISSERIE SPIT and forks. You can rotisserie roast two chickens or an oven roast weighing up to 8 pounds. The slow-turning spit provides natural basting of meats while fats drip away.

The oven can also be used to proof bread dough and for dehydrating. Dehydrating screens can be purchased separately.

Please take a few minutes to read this manual before using your oven to become familiar with its parts and operation. Included you will find a wide assortment of tasty recipes that were specially written for use in your new Convection Oven With Rotisserie.

PRINCIPAL PARTS AND FUNCTIONS

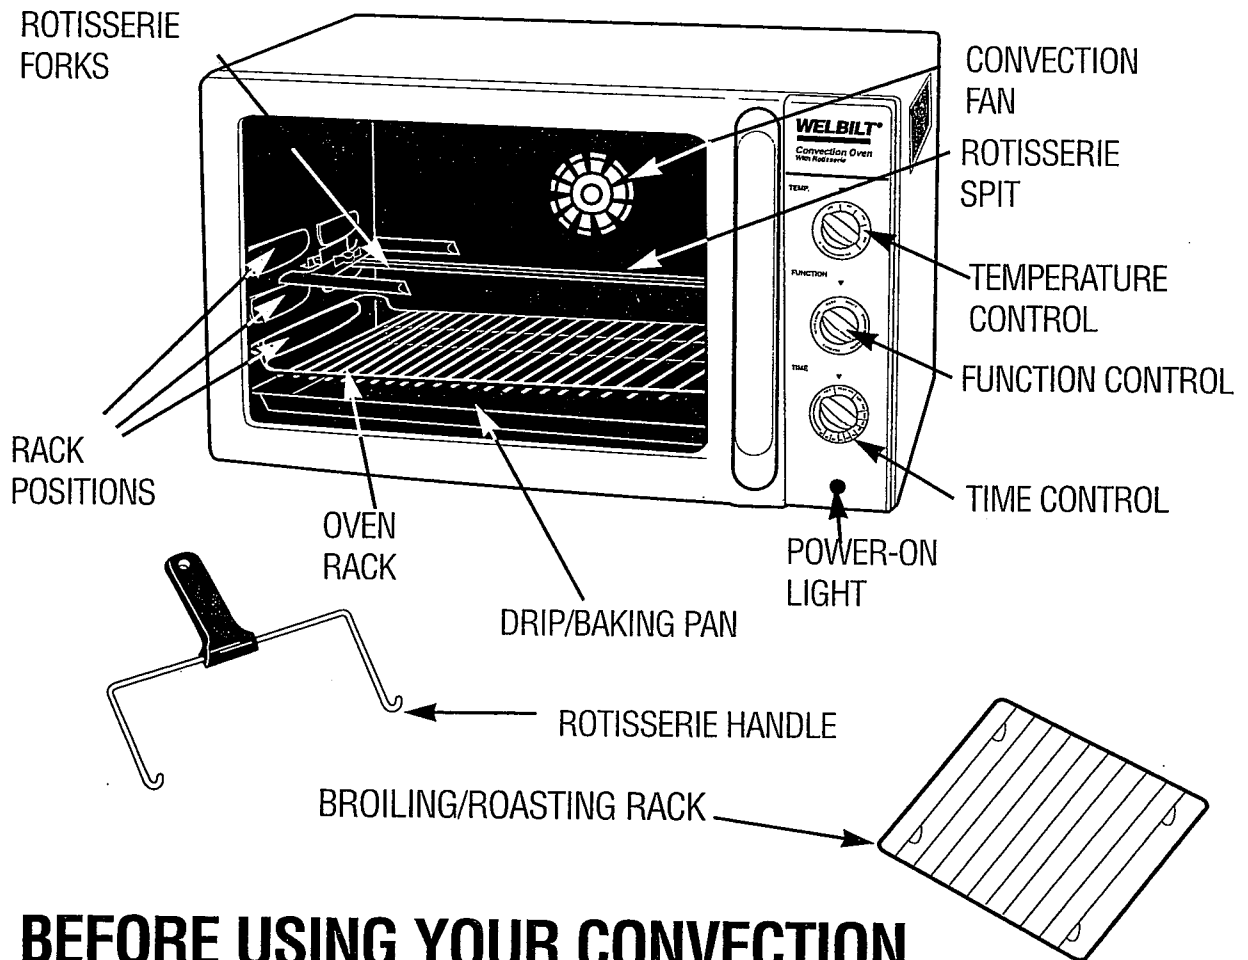

BEFORE USING YOUR CONVECTION OVEN WITH ROTISSERIE

1. Read all instructions in this manual carefully. The information included in this book will help you to use your WELBILT® Convection Oven with Rotisserie to its fullest.
2. Place your oven on a level surface such as a countertop or table. Be sure the sides, back, and top of the oven are at least four inches away from any walls, cabinets, or objects on the counter or table.
3. Remove all stickers from the oven except the rating label located on the back.
4. Remove OVEN RACK, DRIP/BAKING PAN, BROILING/ROASTING RACK, ROTISSERIE SPIT and forks. Wash them in hot, sudsy water or in the dishwasher and dry thoroughly before placing in the oven.
5. When you are ready to use the oven, be sure that the TEMPERATURE and TIME CONTROLS are in the OFF position. Plug the cord into a 120-volt AC outlet.

IMPORTANT: Be sure that this is the only appliance operating on this circuit.

6. We recommend a "trial run" at a high temperature to familiarize yourself with your oven and to eliminate any protective substance or oil that may have been used for packing and shipping. Set the TEMPERATURE CONTROL to MAX, FUNCTION CONTROL to BROIL, and the TIME CONTROL to 20 minutes. After the first 10 minutes, switch the FUNCTION CONTROL to BAKE to activate the lower heating elements. A small amount of smoke and odor may be detected. This is normal.
7. To avoid scratching, marring, discoloration, or fire hazard do not store anything on top of the oven, especially during operation.

USING YOUR CONVECTION OVEN WITH ROTISSERIE

Please familiarize yourself with the following oven functions and accessories prior to the first use:

TEMPERATURE CONTROL-Choose the desired or recommended temperature from DEFROST to MAX.

 
TIME CONTROL-When you turn the knob to the left (counterclockwise) the oven will remain ON until it is manually shut off. To activate the timer, turn the knob to the right (clockwise). The timer is used for defrosting, slow cooking, baking, roasting, rotisserie roasting, and broiling for 120 minutes (2 hours) or can be used as an independent timer. When the time has elapsed or the knob is manually turned to the OFF position, a bell will ring and oven will shut off.

FUNCTION CONTROL-Select desired cooking function (Defrost, Slow Cook, Bake, Roast, Rotisserie, Broil).

POWER-ON LIGHT-Illuminates when the oven is on.

OVEN RACK-Used in one of three positions for defrosting, slow cooking, baking, and proofing.

NOTE: When reference is made to the OVEN RACK facing up or down, please refer to the following:



Facing up



Facing down

DRIP/BAKING PAN-Slides into rails below the RACK POSITIONS in the oven for baking, roasting, broiling, and rotisserie roasting.

BROILING/ROASTING RACK-Fits into the DRIP/BAKING PAN for broiling and roasting.

OPERATION

CAUTION: Appliance surfaces are hot during and after use.

- The fan will operate for all functions, but the heating elements will operate differently.
- Be sure that the TEMPERATURE CONTROL is set on "0" and the TIME CONTROL is set to OFF before plugging the cord into the outlet for use and when unplugging after use.
- Set the TEMPERATURE CONTROL and the FUNCTION CONTROL before setting the TIME CONTROL.
- The oven will only operate if the TIME CONTROL is turned to a time setting or if it is turned to the ON position.
- For even cooking, always place foods in the oven with at least one inch of space on all sides to allow proper air circulation.
- Preheat the oven when using the broil function.

COOKING CONTAINERS

- The DRIP/BAKING PAN included with the oven is suitable for cookies, rolls, biscuits, nachos, pork chops, etc.
- Most standard baking pans and casserole dishes are suitable for the convection oven. The oven allows you to bake 2 - 8" pie or cake pans, 1 - 9" or 10" pie or cake pan, 1 - 10" bundt or angel food cake pan, 1 - 12-cup muffin pan, 1 - 13" x 9" x 2" baking pan, 1 jelly roll pan, 2 loaf pans, or 1 - 14" x 9" cookie sheet.
- Choose bakeware made of metal, oven-proof glass or ceramic.

- Your convection oven is designed to hold a **half-sheet pan**.
- Many convenience foods are packaged in non-metallic containers suitable for use in microwave ovens as well as regular ovens. Check package directions to determine if the container is suitable for use in a regular oven.

BAKING

The bottom heating elements and half of the top heating elements cycle on and off to maintain the selected temperature.

Convection baking is very consistent and even. The oven heats quickly, so preheating is not necessary. The fan circulates hot air around the food making baked goods rise quickly and evenly. Most baked goods are placed on the rack facing up in the lowest rack position. In many convection ovens, it is necessary to lower the baking temperature to achieve acceptable results. The Convection Oven has been designed for easy use. Lowering the baking temperature is not necessary. Follow package or recipe directions for best results.

The convection oven is designed to hold a half-sheet pan. There is no need to use the OVEN RACK, as the standard half-sheet pan will slide into one of the rack positions. In most cases, you should use the lowest rack position. The DRIP/BAKING PAN included with your oven can also be used for baking. It is coated for easy clean up. **The DRIP/BAKING PAN should always be removed from the rails in the bottom of the oven when baking as it will interfere with the flow of hot air from the bottom elements.** When used as the BAKING PAN, it should be placed on the OVEN RACK.

1. Place the OVEN RACK in the lowest rack position facing up.
2. Place the BAKING PAN on the center of the OVEN RACK.
3. When baking in a half-sheet pan, remove the OVEN RACK and place the half-sheet pan in the lowest rack position.
4. Set the TEMPERATURE CONTROL to the recommended temperature.
5. Set the FUNCTION CONTROL to BAKE.
6. Set the TIME CONTROL according to recipe directions.
7. Check baked goods 5-10 minutes before expected completion.

Recommended Baking Temperatures

Cakes:	325° F- 350° F
Cheesecake:	300° F
Quick Bread:	375° F
Muffins:	400° F
Pies:	425° F
Cookies (large):	350° F
Cookies (jumbo):	325° F

Proofing Bread Dough

When making yeast bread, you can proof (raise) the bread in the oven on the Bake function. Set the TEMPERATURE CONTROL to 175° F (the dot between 150 and 200). Reduce the recipe rising time by 25% to 30% and set the TIME CONTROL to that time. Allow dough to double in size. Turn the TEMPERATURE CONTROL to the desired baking temperature and the TIME CONTROL to the shortest completion time given in the recipe.

DEFROSTING

The heating elements do not operate for this function.

For defrosting, the fan circulates air to thaw food in a shorter period of time than conventional methods of defrosting.

IMPORTANT: Defrosted foods should be cooked as soon as possible after thawing and should never be left at room temperature when completely thawed as harmful bacteria will begin to grow. **DO NOT** defrost large amounts of food at one time.

1. Place the DRIP/BAKING PAN in the rails near the bottom of the oven.
2. Place the OVEN RACK in the lowest rack position facing up.
3. Place the food to be defrosted in the center of the OVEN RACK.
4. Set the TEMPERATURE CONTROL to "0".
5. Set the FUNCTION CONTROL to DEFROST.
6. Set the TIME CONTROL to the shortest amount of time necessary for defrosting. Check food when the timer shuts off and the bell rings. Add more time if necessary.

SLOW COOKING

The bottom heating elements cycle on and off to maintain the selected temperature.

Slow cooking is a long cooking process at a low temperature used to tenderize less tender cuts of meat and blend flavors in soups and stews. Foods to be slow cooked are usually placed in a covered casserole dish with some liquid and cooked at 250° F for 4 to 12 hours.

1. Place the OVEN RACK in the lowest rack position facing up.
2. Place the covered casserole dish with food to be slow cooked on the center of the OVEN RACK.
3. Set the TEMPERATURE CONTROL to 250° F.
4. Set the FUNCTION CONTROL to SLOW COOK.
5. Set the TIME CONTROL to the STAY ON position and follow recipe instructions for time.

NOTE: The DRIP/BAKING PAN should always be removed from the rails in the bottom of the oven when slow cooking, as it will interfere with the flow of hot air from the bottom heating elements.

ROASTING

The top heating elements cycle on and off to maintain the selected temperature.

When roasting, hot air circulates around the meat sealing in flavor and juices. The roast is crispy and evenly browned on the outside, moist and flavorful on the inside. Roasting time is 25% to 30% faster than conventional ovens.

1. Place the BROILING/ROASTING RACK in the DRIP/BAKING PAN.
2. Place the meat fat side up on the BROILING/ROASTING RACK (unless otherwise directed).
3. It is not necessary to preheat the oven during roasting.
4. Slide the DRIP/BAKING PAN into position in the rails at the bottom of the oven.
5. Set the TEMPERATURE CONTROL to the desired temperature.
6. Set the FUNCTION CONTROL to ROAST.
7. Set the TIME CONTROL to the shortest time. If more than 2 hours, set to STAY ON and check after the shortest time.

Use the following chart as a guide for roasting. Use a reliable meat thermometer for the most accurate results. Roasts should stand for 10 to 15 minutes before carving. During this time, they will continue to cook, which will increase the meat thermometer reading by approximately 10° F.

Roasting Chart (* Roasting times are per pound:)

Type/Oven Temp.	Weight (lb.)	Approx. Roasting Time	Meat Therm. Reading (F)
Beef: 350°			
Sirloin Tip/ Top Round	3-8	20-22 min. 23-24 min. 25-27 min.	Rare-120° F-130° Med-140°-150° Well-160°-170°
Eye Round	3-6	18-20 min. 21-23 min. 24-26 min.	Rare-120°-130° Med-140°-150° Well-160°-170°
Standing Rib	3-6	20-22 min. 23-24 min. 25-27 min.	Rare-120°-130° Med-140°-150° Well-160°-170°
Pork: 350°			
Loin (Bone in)	3-6	25 min.	Well-170°
Loin (Boneless)	3-8	15 min.	Well-170°
Fresh Ham	4-8	25 min.	Well-170°
Smoked Ham: 325°			
Fully Cooked w/ bone (Half)	6-8	15 min.	140°
(whole)	12-16	15-17 min.	140°
Lamb: 350°			
Leg	6-8	20-23 min. 25 min.	Med-170° Well-180°
Poultry: 325°			
Chicken, unstuffed	6-8	20 min.	180°
Chicken, stuffed	6-8	25 min.	180°
Turkey, unstuffed	16-22	15 min.	180°
Turkey, stuffed	16-22	20 min.	180°

ROTISSERIE ROASTING

The top heating elements cycle on and off to maintain the maximum temperature in the oven.

Rotisserie roasting is a healthy way to cook meats because the slow-turning spit provides natural basting while fats drip away. The rotisserie can be used to roast meats up to 8 pounds and will easily handle two 4-pound chickens. Season the roast with salt, pepper or your favorite spices, or brush with barbecue sauce, or, vegetable oil as desired. It is not necessary to preheat the oven for rotisserie roasting.

1. Place one ROTISSERIE FORK on the end of the ROTISSERIE SPIT OPPOSITE the point with the tines facing the center and tighten the screw slightly.
2. Slide the pointed end of the ROTISSERIE SPIT through the center of the roast.
3. Place the other ROTISSERIE FORK on the other end of the ROTISSERIE SPIT WITH the tines facing the roast.
4. Adjust the roast so that it is centered on the ROTISSERIE SPIT. Make sure the forks secure the roast on the spit and tighten the screws.
5. When cooking poultry, legs and wings should be secured to the body with string, making the roast as compact as possible. This is necessary for smooth movement of the ROTISSERIE SPIT.
6. Season or baste the roast as desired.
7. Place the DRIP/BAKING PAN on the rails on the bottom of the oven to catch the drippings.
8. Put the pointed end of the ROTISSERIE SPIT in the drive socket on the right interior wall of the oven.
9. Place the grooved end on the spit support on the left interior wall of the oven.
10. Set the TEMPERATURE CONTROL to MAX.
11. Set the FUNCTION CONTROL to ROTISSERIE.
12. Set the TIME CONTROL to the shortest time. If more than 2 hours, set to STAY ON and check after the shortest time.
13. When the roast is done, turn the TEMPERATURE CONTROL to "0" and the TIME CONTROL to OFF, and unplug the oven.
14. Remove the ROTISSERIE SPIT FROM the oven using the ROTISSERIE HANDLE included. Place the roast on a cutting board or platter and allow to stand for 10-15 minutes.
15. Using a pot holder, loosen the screw on the ROTISSERIE FORK and slide it out. Remove the ROTISSERIE SPIT with other fork from the roast. Carefully remove the ROTISSERIE FORKS and carve the roast.

CAUTION: The ROTISSERIE SPIT, ROTISSERIE FORKS, SCREWS, and the roast will be hot. Use mitts or pot holders for handling.

Use the following chart as a guide for rotisserie roasting. Use a reliable meat thermometer for the most accurate results. Roasts should stand for 10 to 15 minutes before carving. During this time they will continue to cook, increasing the meat thermometer reading by approximately 10° F.

Rotisserie Chart

Type	Weight	Temperature Setting	Time
Chicken	3-4 lb. 4-8 lb.	MAX MAX	1 ½ - 2 hr. 2 - 2 ½ hr.
Pork Roast	4-6 lb.	MAX	1 ½ - 2 hr.
Roast Beef	3-5 lb.	MAX	1 ½ hr. (Rare) 1 ¾ hr. (Med) 2 hr. (Well)
Cornish Hens -2	1.5 lb. each	MAX	1 hr.
Smoked Ham Boneless	4-5 lb.	MAX	1 ½ - 2 hr.

BROILING

The top heating elements cycle on and off to maintain the maximum temperature in the oven.

In the convection oven, it is not necessary to turn food because the fan circulates the hot air around the food. The food must be placed on the BROILING/ROASTING RACK fitted into the DRIP/BAKING PAN to allow the circulation of air.

If browner meats are desired, brush the surface with Worcestershire sauce or browning and seasoning sauce. Barbecue or other sweet sauces should be brushed on during the last 15 minutes of broiling. They will burn if applied too early in the cooking.

1. Remove the DRIP/BAKING PAN, and BROILING/ROASTING RACK from the oven.
2. Place the OVEN RACK facing down in the center rack position.
3. Set the TEMPERATURE CONTROL to MAX.
4. Set the FUNCTION CONTROL to BROIL.
5. Set the TIME to 20 to preheat the oven for 20 minutes.
6. While the oven is preheating, place the BROILING/ROASTING RACK in the DRIP/BAKING PAN. Place the food to be broiled directly on the BROILING/ROASTING RACK, unless otherwise directed.
8. When the oven is preheated it will automatically shut off and the bell will ring.
9. Place the DRIP/BAKING PAN with the BROILING/ROASTING RACK and the food on the OVEN RACK and close the door.
10. Set the timer for the shortest broiling time recommended. It is not necessary to turn food during broiling.

CAUTION: DO NOT leave the oven unattended during broiling.

Broiling Chart

Type	Weight/Thickness	Desired Doneness	Cooking Time
Beef: <i>Steak: Porterhouse, Sirloin, London Broil, Top Round</i>	1 inch	Rare Medium Well Done	18-20 min. 21-23 min. 24-28 min.
Hamburger	6 ounces (1 inch)	Rare Medium Well Done	15-17 min. 18-21 min. 22-25 min.
Pork: <i>Chops Ribs Sausage Chicken</i>	1 inch Cut in pieces Links Pieces with skin Boneless breasts Halves with skin	Well Done Well Done Well Done Well Done Well Done Well Done	19-23 min. 30-35 min. 25-30 min. 20-25 min. 12-15 min. 30-40 min.
Fish: <i>Fillet Steaks</i>	1/2 inch 1 inch	Well Done Well Done	10-12 min. 15-20 min.

CARE AND CLEANING

1. Turn the TEMPERATURE CONTROL to "0" and the TIME CONTROL to OFF and unplug before cleaning.
2. Allow oven and accessories to cool completely before cleaning.
3. Clean the outside of the oven with a damp cloth and dry thoroughly. Clean stubborn stains with a nonabrasive liquid cleaner. Rinse and dry thoroughly. Do not use metal scouring pads or abrasive cleaners that will scratch the surface.
4. Clean the glass door with a cloth or sponge dampened with warm, sudsy water. Dry thoroughly.
5. Wash the OVEN RACK, the BROILING/ROASTING RACK and DRIP/BAKING PAN in hot, sudsy water or in the dishwasher. Rinse and dry thoroughly.
6. If crumbs and spills have accumulated at the bottom of the oven, wipe with a damp cloth. Dry thoroughly.
7. DO NOT use abrasive cleaners or metal scouring pads to clean the OVEN RACK, BROILING/ROASTING RACK, or DRIP/BAKING PAN. Clean stubborn stains with a nylon or polyester mesh pad and a mild, nonabrasive cleaner such as Soft Scrub®, Cameo® or Bon Ami®. Rinse and dry thoroughly.
8. The walls on the inside of the oven have a continuous clean coating which absorbs food spatter during oven use. Remove heavy spatter after use with a nylon or polyester mesh pad, sponge or cloth dampened with warm water. Blot dry with a paper towel or soft, dry cloth.
9. DO NOT use cleaning agents, cleansers, or metal scouring pads on the continuous clean coating, as this may reduce its effectiveness.

REPLACING THE LIGHT BULB

The light bulb inside the oven can be replaced if it burns out. New light bulbs may be obtained at your local hardware store. Please make sure the bulb is a 15-watt oven-rated bulb. To remove the old light bulb, loosen the screw on the light bulb cover on the upper rear corner of the right interior wall. Remove the cover. Turn the bulb counterclockwise to remove. Place the new bulb in the socket and turn the bulb clockwise to tighten. Replace the light bulb cover and tighten the screw.

RECIPES

Oatmeal Raisin Muffins

1/2 cup whole wheat flour
3/4 cup white flour
3/4 cups old fashioned oats (oatmeal)
1/4 cup brown sugar, firmly packed
1 teaspoon cinnamon
2 teaspoons baking powder
1 teaspoon baking soda
1 teaspoon salt
1 cup buttermilk
1 egg
1 teaspoon vanilla
1/4 cup oil
1 cup raisins

Spray a 12-cup muffin pan with cooking oil spray or line with cupcake liners. In a large mixing bowl, combine dry ingredients. In another bowl combine, buttermilk, egg, vanilla, and oil. Slowly stir into the dry ingredients just until combined. Stir in the raisins. Fill the muffins cups to within 1/2 inch of the top. Place the muffin pan on the OVEN RACK in the lowest rack position with rack facing up. Set the oven to 400° F. Bake for 18-22 minutes or until a toothpick inserted in the center comes out clean.

Makes 12 muffins

Blueberry Corn Muffins

1 cup yellow cornmeal
1 cup flour
1/2 cup sugar
1 tablespoon baking powder
1 teaspoon salt
1/3 cup vegetable oil
3/4 cup milk
1 egg
1/2 cup fresh or frozen blueberries, unthawed

Spray a 12-cup muffin pan with cooking oil spray or line with cupcake liners. In a large mixing bowl, combine dry ingredients. In another bowl combine oil, milk, and egg. Slowly stir into the dry ingredients just until combined. Gently fold in the blueberries. Fill the muffin cups to within 1/2 inch of the top. Place the muffin pan on the OVEN RACK in the lowest rack position with rack facing up. Set the oven to 400° F. Bake for 18-20 minutes or until a toothpick inserted in the center comes out clean.

Makes 12 muffins

Pumpkin 'n Pear Bread

1 can (15 ounces) pumpkin
1/4 cup oil
2 eggs
1 can (8.25 ounces) pears with liquid, mashed
1 1/4 cup brown sugar, firmly packed
4 cups flour
1/2 teaspoon salt
2 tablespoons baking powder
1 teaspoon cinnamon
1/4 teaspoon nutmeg
1/4 teaspoon allspice
1/2 cup chopped walnuts

Grease 2 (8 1/2" x 4 1/2" x 2") loaf pans. In a large mixing bowl combine pumpkin, oil, eggs, pears, and brown sugar. In another mixing bowl, combine the remaining ingredients. Stir the dry ingredients into the pumpkin mixture until all the flour is incorporated. Spoon batter into prepared pans. Place the pans on the OVEN RACK in the lowest position with rack facing up. Set the oven to 375° F. Bake for 45-50 minutes or until a toothpick inserted in the center comes out clean.

Makes 2 loaves

Sour Cream Chocolate Cake

1 box (18.5 ounces) chocolate cake mix with pudding in the mix
1 cup sour cream
1/3 cup water
1/2 cup oil
4 eggs
1 cup semi-sweet chocolate morsels

Grease a 10-inch bundt pan. In a large mixing bowl, combine all ingredients, except chocolate chips, using a hand mixer at low speed. Continue to mix at medium speed for about 3 minutes. Stir in the chips. Spoon the batter into the prepared pan. Place the pan with the cake on the rack in the lowest rack position with rack facing down. Set the oven to 350° F. Bake for 45-50 minutes or until a toothpick inserted in the center comes out clean. Remove from the oven and allow to cool on a rack for 10 minutes. Turn the cake onto a serving dish. Cool and sprinkle with powdered sugar.

Makes 1 bundt cake

To make Chocolate Chip Butter Pound Cake: Substitute Recipe Yellow Butter Cake Mix using 1 box (4 serving size) instant vanilla pudding for the chocolate cake mix. Use 1/2 cup butter in place of oil. Follow the recipe as given.

Strawberry Apple Pie

1 pint strawberries, hulled and sliced
3 tart cooking apples, peeled and thinly sliced
1 cup sugar
1/4 cup flour
1/2 teaspoon cinnamon
Pastry for a 2-crust pie

In a large mixing bowl combine the berries, apples, sugar, flour and cinnamon. Fit one of the pie crusts into a 9-inch metal pie plate. Spoon the fruit mixture into the crust mounding the fruit in the center and top with the second crust. Fold the edges of the top crust under the bottom crust, seal and flute the edges. Make several slits in the top of the pie to vent the steam. Place a cookie sheet under the pie to catch any drippings. Place the cookie sheet on the OVEN RACK in the lowest rack position with rack facing up. Set the oven to 425° F. Bake for 45-50 minutes or until golden brown.

Makes 1 pie

Easy Bread Machine Dinner Rolls

1 cup plus 2 tablespoons warm water
1/3 cup butter, cut in pieces
1 egg
3 tablespoons mashed potato flakes
3 cups bread flour
3 tablespoons sugar
1 teaspoon salt
1 envelope active dry yeast

Place all the ingredients in the order listed into the bread pan of an automatic bread machine. Set machine on the dough or manual cycle and press start. When the cycle is complete remove the dough and allow it to stand for 10 minutes. Sprinkle a small amount of flour on a cutting board. Cut the dough in half and roll into two 12-inch ropes. Cut each rope into 12 equal-sized pieces. If the dough becomes sticky while shaping, knead in additional flour. Shape the dough into balls. Spray the DRIP/BAKING PAN with cooking oil spray. Place the rolls on the pan 1/2 inch apart. Place pan on the rack in the lowest rack position with the rack facing up. Set the oven to 175° F and allow to rise for 15 minutes or until double in bulk. Raise the temperature to 400° F. Bake for 12-15 minutes or until golden brown and the rolls sound hollow when tapped.

Makes 24 rolls

Chocolate Swirled Cheesecake

36 (cream filled) chocolate sandwich cookies
1/2 cup melted butter or margarine
3 packages (8 ounces each) cream cheese, at room temperature
4 eggs, at room temperature
1 cup sugar
2 teaspoons vanilla
1 cup sour cream
1 teaspoon lemon juice
2 tablespoons flour
1/4 cup chocolate syrup

Crush cookies using a food processor or a rolling pin. Stir melted butter into the crumbs. Spoon the crumb mixture into a 13" x 9" x 2" baking pan and cover with plastic wrap. Press crumbs evenly into the bottom of the pan. Remove plastic wrap. In a large mixing bowl, using a mixer at medium speed, blend the cream cheese and eggs. Mix until smooth. Add sugar, vanilla, sour cream, lemon juice, and flour. Mix until well combined. Pour the mixture into the prepared pan. Pour the chocolate syrup over the cake in an "S" pattern. Using a knife inserted 1/4 inch into batter, swirl the chocolate into the cake batter. Place the pan on the OVEN RACK in the lowest rack position with rack facing up. Set the oven to 300° F. Bake for 50-60 minutes or until a knife inserted 1-inch from the center comes out clean. Turn TEMPERATURE CONTROL to OFF and allow the cake to cool in oven for 20 minutes. Refrigerate at least 4 hours.

Makes 1 cake

Jumbo Chocolate and Vanilla Chip Cookies

1/4 cup butter
3/4 cup brown sugar
1/4 cup sugar
1 egg
1 teaspoon vanilla
1 1/3 cup all-purpose flour
1/2 teaspoon baking soda
1/2 teaspoon salt
3/4 cup jumbo chocolate chips
1/4 cup vanilla chips

In a mixing bowl, cream the butter and the sugars using an electric mixer. Add the egg and vanilla. Beat well. Combine the flour, baking soda, and salt. Add to the bowl mixing well on low speed. Stir in the chips. Pack a small ice cream scoop or a 1/4 cup measure with dough. Drop the cookie dough on the ungreased DRIP/BAKING PAN. Place the pan on the rack in the lowest rack position with rack facing up. Set the oven to 325° F. Bake for 18-22 minutes or until the cookies are lightly browned.

Makes 24 cookies

Holiday Turkey

1- 16-22 pound turkey
Worcestershire sauce
Seasoned salt
2-3 teaspoons cornstarch
1 teaspoon browning and seasoning sauce
1/4 cup water

Remove neck and giblet packet from the turkey. Rinse turkey well. Rub a small amount of Worcestershire sauce into the skin and sprinkle with seasoning salt or your favorite combination of herbs. Insert an oven thermometer in the thickest part of the breast near the leg. Calculate the approximate cooking time at 15 minutes per pound*. Place the turkey directly on the BROILING/ROASTING RACK in the DRIP/BAKING PAN. Slide the pan into the rails. Set the oven to 325° F. Roast for 4 - 5 1/2 hours. Check the temperature on the meat thermometer occasionally. Continue to cook until the thermometer reads 170° F or the pop-up timer pops. Remove the turkey. Allow the turkey to stand for about 15 minutes before carving. The turkey will continue to cook and the thermometer should read 180° F before carving. Skim the fat from the juices that have accumulated in the pan. Pour these drippings into a small saucepan and add about 1 tablespoon of cornstarch and the browning and seasoning sauce dissolved in 1/4 cup of water.** Cook 5 minutes or until the gravy boils and thickens slightly. Pour the gravy into a pitcher and serve with the sliced turkey.

Makes 16-24 servings

* If the turkey is stuffed, roast 20 minutes per pound.

** If more gravy is desired add an envelope of turkey gravy mix dissolved in 1 cup of water or a can of prepared gravy to the drippings at this time.

Fruity Smoked Ham and Yam Dinner

1 half (6-8 pound) or whole (12-16 pound) smoked ham, bone-in
1/2 cup sweet and sour sauce
1 tablespoon raspberry or strawberry jam
1/2 cup orange juice
1 cup ginger ale
2 tablespoons cornstarch
6 medium-size yams (about 2 pounds)

Combine the sauce, jam, juice, ginger ale and cornstarch. Set aside. Place the ham directly on the BROILING/ROASTING RACK in the DRIP/BAKING PAN. Insert a meat thermometer into the center of the ham away from the bone. Calculate the approximate cooking time at 15 minutes per pound. Slide the pan into the rails. Set the oven to 325° F. Roast 1 1/2 - 2 hours. Check the temperature on the meat thermometer occasionally. One hour before the ham is done, place the yams on the rack around the ham and brush the sauce on the ham. Pour the remaining sauce into the pan. Continue to cook until the thermometer reads 140° F for fully cooked ham or 160° F for uncooked ham. Remove the ham to a board and allow to stand for 10 minutes before carving. Wrap the yams in foil to keep warm while carving the ham. Skim fat from sauce or pour into a fat separator to remove. Pour the sauce into a pitcher and serve with the sliced ham.

Makes 6 to 18 servings, depending on the size of the ham

Apple and Bread Stuffed Roasted Chicken with Roasted New Potatoes

2 tablespoons butter or margarine
1 tart cooking apple, peeled and cut into chunks
1 onion, chopped
4 cups dry bread stuffing mix
1 cup applesauce or apple juice
6-8 pound roasting chicken
Paprika, onion powder and garlic salt, to taste
8 New potatoes
2-3 teaspoons cornstarch
1 teaspoon browning and seasoning sauce or
Worcestershire sauce
1/4 cup water

In a 10-inch fry pan, melt the butter and sauté the apple and onion until nicely browned. Stir in the stuffing mix, applesauce, and water. Allow the stuffing to cool slightly and then spoon into the cavity of the chicken. Sprinkle the skin of the chicken with seasonings. Calculate the approximate cooking time at 25 minutes per pound.* Place the chicken directly on the BROILING/ROASTING RACK in the DRIP/BAKING PAN. Slide the pan into the rails. Set the oven to 325° F. Roast 2 - 2 1/2 hours. About 45 minutes before the chicken is scheduled to be done, place the potatoes on the rack around the chicken. Check the temperature on the meat thermometer occasionally. Continue to cook until the thermometer read 170° F. Remove the chicken. Allow the chicken to stand for about 15 minutes before carving. The chicken will continue to cook and the thermometer should read 180° F before carving. Skim the fat from the juices that have accumulated in the pan. Pour the drippings into a small saucepan. Add about 1 tablespoon of cornstarch and browning and seasoning sauce dissolved in 1/4 cup of water to the drippings to thicken the gravy.** Cook 5 minutes or until the gravy boils and thickens slightly. Pour the gravy

into a pitcher and serve with the sliced chicken.

Makes 6 servings

* If the chicken is unstuffed roast 20 minutes per pound.

** If more gravy is desired add an envelope of chicken gravy mix dissolved in 1 cup of water or a can of prepared gravy to the drippings at this time.

Corn Bread Stuffed Pork Loin

1 bag (6 ounces) corn bread stuffing mix
1 can (14 ounces) chicken broth
1 cup orange juice
2 tablespoons melted butter
1 bag (6 ounces) dried mixed fruit bits or assorted whole dried fruits, chopped
6- to 8-pound whole boneless loin of pork
1 envelope of pork gravy mix dissolved in 1 cup of water

Combine all ingredients except the pork and the gravy mix. Place the pork fat side down on a cutting board. Make slits 1 inch apart in the pork cutting down to within a 1/2 inch of the fat to form a pocket for the stuffing. Be careful not to cut through. Spoon about 1/2 cup of the stuffing into each pocket. Place the roast directly on the BROILING/ROASTING RACK in the DRIP/BAKING PAN. Place a meat thermometer into the center of one of the pork slices. Calculate the approximate cooking time at 15 minutes per pound. Slide the pan into the rails. Set the oven to 350° F. Roast 1 1/2 - 2 hours. The meat is done when the thermometer reaches 170° F. Skim the fat from the juices that have accumulated in the drip pan. Pour these drippings into a small saucepan and add the gravy mix. Cook 5 minutes or until the gravy boils and thickens slightly. Pour the gravy into a pitcher and serve with the sliced pork.

Makes 10-14 servings

Roast Beef with Twice-Baked Cheesy Potatoes

4 to 6-pound boneless sirloin tip roast
Worcestershire sauce
Garlic powder, paprika and dried onion to taste
8 medium-size baking potatoes (about 3 pounds)
4 ounces grated cheddar cheese
4 ounces grated mozzarella
2 tablespoons Parmesan Cheese
1/2 cup sour cream
1/4 cup milk
1 teaspoon garlic powder
1 can of beef gravy or 1 envelope of gravy mix
dissolved in 1 cup water

Rub the surface of the meat with Worcestershire sauce and then sprinkle with garlic, paprika, and dried onion. Calculate the approximate cooking time at 20-22 minutes per pound for rare, 23-24 minutes per pound for medium, and 25-27 minutes per pound for well done. Place a meat thermometer in the thickest part of the roast. Place the roast fat side up, on the BROILING/ROASTING RACK in the DRIP/BAKING PAN. Place the potatoes on the rack around the roast. Set the oven to 350° F. Slide the pan into the rails. Roast for 1 hour 20 minutes to 3 hours and 20 minutes. Check the meat thermometer reading occasionally. Continue to cook until the thermometer reads rare (120° F-130° F), medium (140° F) or well done (160° F-170° F). After 1 hour, remove potatoes to a cutting board and allow to cool for about 15 minutes. Slice a small piece off the top of each potato. Scoop out the potato from the skins and place in a medium mixing bowl. Reserve skins. Add the cheese, sour cream, milk, and garlic powder to the mixing bowl. Blend, with a hand mixer, until the mixture is smooth. Spoon the potato mixture in the potato skins, and sprinkle each with paprika. Place the prepared potatoes on the rack with the

roast 30 minutes before the roast is done. Remove the roast to a cutting board and allow to stand about 10 minutes. Skim the fat from the juices that have accumulated in the drip tray. Pour the drippings into a small saucepan along with the prepared gravy. Cook for 5 minutes or until the gravy thickens. Pour the gravy into a pitcher and serve with the sliced beef.

Makes 8-12 servings, depending on the size of the roast

Turkey 'n Beef Meat Loaf Dinner

1 pound ground turkey
1/2 pound ground beef
1 egg
1/2 cup flavored bread crumbs
1 envelope (1.2 ounces) dried onion soup mix
1/3 cup catsup
1/4 cup water
3 slices American cheese
Worcestershire sauce
3 slices pork or turkey bacon, cut in half
3 medium potatoes, cut in 1/8's
2 medium onions, cut in 1/8's
8 ounces baby carrots
Salt, pepper, herbs and spices, to taste

In a medium mixing bowl combine the meats, egg, bread crumbs, onion soup mix, catsup and water. Mix well and put 1/2 of the mixture on the DRIP/BAKING PAN. Press the cheese in the center of the meat and cover with the remaining meat mixture. Form into an oblong loaf making sure that the cheese is sealed into the meat. Sprinkle Worcestershire sauce over the meat. Place the bacon on the top of the meat loaf. Arrange the potatoes and vegetables around the meat loaf and sprinkle with salt, pepper, and additional herbs or spices, if desired. Place the pan on the rack in the lowest rack position with rack facing up. Set the oven to 350° F. Bake for 50-60 minutes or until the meat loaf and potatoes are nicely browned.

Makes 6-8 servings

Moroccan-Style Leg of Lamb with Couscous and Vegetables

1 tablespoon Dijon mustard
1 tablespoon lemon juice
Garlic powder, onion powder, paprika to taste
6- to 8-pound leg of lamb
1/4 cup oil
1 medium onion, chopped
1 eggplant, peeled and cut into 1-inch cubes
2 carrots, chopped
2 stalks celery, chopped
1 teaspoon dried basil
1 teaspoon salt
1/4 teaspoon pepper
1 can (15 ounces) chick peas with liquid
1 can (14 ounces) beef broth
1 can (16 ounces) stewed tomatoes
2 cups couscous
1 can or 1 envelope brown gravy mix, prepared
as directed

Combine the mustard and lemon juice and brush it on both sides of the lamb. Sprinkle with garlic, onion and paprika. Insert a meat thermometer into the center of the lamb away from the bone. Calculate the approximate cooking time at 25 minutes per pound. Place the roast, fat side up, directly on the BROILING/ROASTING RACK, in the DRIP/BAKING PAN. Slide the pan into the rails. Set the oven to 350° F and roast 2 1/2 to 3 hours. Check the temperature on the meat thermometer occasionally. Continue to cook until the lamb has reached desired temperature: (160° F for rare, 170° F for medium, or 180° F well done). About 20 minutes before the roast is done, sauté the onions in oil in a 3-quart saucepan until lightly browned. Add the carrots and celery and sauté 2 minutes. Stir in the eggplant and the remaining ingredients. Cook for 15 minutes or until the

vegetables are tender and the couscous has absorbed most of the liquid. Remove the lamb and the rack and place the lamb on a cutting board. Allow the meat to stand for about 10 minutes before carving. Skim the fat from the drippings that have accumulated in the pan. Pour these drippings into a small saucepan with the water and gravy mix. Cook 5 minutes or until the gravy boils and thickens. Slice meat and serve with the gravy, couscous, and vegetables.

Makes 12 servings

Bow Tie Pasta and Chicken Cacciatore Casserole

12 ounces bow tie pasta
2 tablespoons olive oil
1 large onion, chopped
2 cloves garlic, crushed
1 medium red pepper, chopped
1 package (10 ounces) fresh mushroom slices
1 1/2 pounds boneless white or dark meat
chicken, cut into bite size pieces
1 tablespoon basil
1 tablespoon dried parsley
1 jar (28 ounces) tomato sauce
1 teaspoon salt
1/4 teaspoon pepper
2 tablespoon grated Parmesan cheese
8 ounces grated mozzarella

Cook the pasta according to package directions. Drain and spoon into a 3-quart casserole. Heat the oil in a 10-inch fry pan and sauté the onion for 3 minutes. Add the garlic, red pepper, and mushrooms. Sauté until the mushrooms are limp (about 3 minutes). Spoon the contents of the fry pan into the casserole with the pasta. Add remaining ingredients except the cheeses. Stir well to combine. Sprinkle the cheeses on top of the casserole. Place the pan on the rack in the lowest rack position with rack facing down. Set the oven to 350° F. Bake for 30 minutes or until the casserole is hot and the cheeses are melted and brown.

Makes 8-12 servings

Chicken Pot Pie

2 pounds boneless white meat chicken, cut
into 3/4 inch chunks
3 stalks celery, with leaves
1 can (10 3/4 ounces) cream of mushroom
soup
1 envelope (1.8 ounces) white sauce mix,
dissolved in 1/2 cup milk
1 can (15.25 ounces) whole kernel corn,
drained
1 package (10 ounces) frozen peas and carrots,
defrosted
2 teaspoons minced dried onion
1 teaspoon garlic powder
1 tablespoon parsley flakes
1/4 teaspoon thyme
2 ready-to-bake pie crusts

Place all of the ingredients except the pie crusts into a 13" x 9" x 2" baking pan. On a lightly-floured board roll both of the pie crusts together to form one 15" x 11" crust. Place the crust over the mixture in the pan. Roll the edges and pinch together making sure to completely cover the filling ingredients. Cut a few slits in the crust to allow the steam to vent. Place the pie on the OVEN RACK in the lowest rack position facing up. Bake at 425° F for 45-55 minutes or until golden brown.

Makes 8-12 servings

Mexican Taco Pie

1 package (8 ounces) refrigerator biscuits
1 pound lean ground beef, turkey, or chicken
1 envelope (1 1/4 ounces) taco seasoning or sloppy Joe mix
1 can (6 ounces) tomato paste
1 1/2 cups water
3 ounces each grated cheddar and Monterey Jack cheeses
Chopped tomato, shredded lettuce, chopped onion, sour cream and guacamole

Place the biscuits into a 9 or 10-inch pie plate, pressing together to form a crust. In a 10-inch fry pan, brown the meat. Drain fat. Add the seasoning package, tomato paste, and water. Stir well to combine. Simmer for 10 minutes. Spoon the meat mixture over the biscuits in the pie plate. Top with the grated cheeses. Place the pie on the rack in the lowest rack position facing up. Set the oven to 400° F. Bake for 25-30 minutes or until the cheese is melted and the edge of the crust browns. Remove the pie from the oven. Top it with chopped tomatoes, shredded lettuce, chopped onion, and dollops of sour cream, and guacamole, if desired.

Makes 6-8 servings

Cheesy Rice and Vegetable Medley

1 bag (16 ounces) frozen cauliflower, broccoli and carrot medley, thawed
1 package (10 ounces) fresh mushroom slices
1 can (10.75 ounces) cheddar cheese soup
1 can (14 ounces) chicken broth
1 1/2 cups water
1 teaspoon each garlic and onion powder
1 cup raw rice

Combine all the ingredients in a greased 13" x 9" x 2" baking pan or a 2-quart casserole dish. Cover tightly with foil or casserole cover. Place the casserole on the OVEN RACK in the lowest rack position facing up. Set the oven to 425° F and bake for 50-60 minutes or until the rice is tender and has absorbed all the liquid.

Makes 12 servings

South of the Border Oven Fried Chicken

3 whole boneless, skinless chicken breasts, cut in half
1/3 cup barbecue sauce
1/4 cup fat-free honey mustard salad dressing
1 tablespoon Worcestershire sauce
2 cups corn flakes, crushed*
1 envelope (1.4 ounces) taco seasoning mix
1 teaspoon salt
1/2 teaspoon garlic powder
1/2 teaspoon onion powder

Cut the chicken into 6 pieces and flatten slightly. Combine the barbecue sauce, dressing, and Worcestershire Sauce in a pie plate. Pour the crumbs onto a flat plate. Dip the chicken into the liquid and the crumb mixture, coating both sides of the chicken. Place the chicken on the BROILING/ROASTING RACK in the DRIP/BAKING PAN. Place the pan on the OVEN RACK in the middle rack position facing up. Set the oven to 425° F. Bake for 20 minutes or until the chicken is nicely browned.

Makes 6 pieces

* For crushed corn flakes, place in a sealable plastic bag and use a rolling pin to crush.

Turkey, Vegetable, and Stuffing Bake

1 pound cooked* turkey (or chicken),
about 4 cups
1 package (16 ounces) frozen mixed vegetables,
thawed
1 can (10.75 ounces) cream of mushroom soup
1 teaspoon garlic powder
1/2 teaspoon onion powder
1 tablespoon Worcestershire sauce
4 ounces grated cheddar cheese
2 1/2 cups dry bread stuffing mix
1 tablespoon melted margarine
1 cup water
1 cup turkey or chicken gravy

Combine the first seven ingredients in a 13" x 9" x 2" baking dish. In a small bowl combine the stuffing mix, butter and water. Top the turkey vegetable mixture with the stuffing and pour the gravy over all. Place the casserole on the OVEN RACK in the lowest rack position with rack facing up. Set the oven to 350° F. Bake for 35-40 minutes or until the stuffing is browned and the casserole is heated through.

Makes 8-12 servings

* Raw chicken can be substituted for cooked chicken. Bake for an additional 10 minutes.

Herb Marinated Broiled Chicken

2 tablespoons grated Parmesan cheese
2 tablespoons olive oil
2 tablespoons lemon juice
1 teaspoon chopped parsley
1 teaspoon chopped chives
1 teaspoon paprika
1 teaspoon dijon mustard
1/8 teaspoon each dill, thyme, sage
4-pound broiler fryer chicken, cut in half

Set the TEMPERATURE CONTROL to Max and the function control to Broil. Preheat for 20 minutes. Combine all ingredients

except chicken in a gallon-size sealable plastic bag. Add the chicken and seal. Marinate at room temperature while the oven is preheating. Remove the chicken from the bag and place it on the BROILING/ ROASTING RACK in the DRIP/BAKING PAN. Pour the extra marinade over the chicken. Slide the pan onto the OVEN RACK in the middle rack position facing down. Broil for 30-40 minutes or until skin is crisp and well browned.

Makes 2-4 servings

Boneless Barbecued Pork Ribs

3 pounds boneless pork ribs, cut 1 1/2 inches thick
1 cup catsup
1/3 cup teriyaki sauce
2 tablespoons brown sugar
1 tablespoon mustard
1 teaspoon garlic powder
1 teaspoon onion powder

Set the TEMPERATURE CONTROL to Max and the function control to Broil. Preheat for 20 minutes. Combine all ingredients except ribs in a small saucepan and bring to a boil. Pour into a large bowl and allow to cool at room temperature. Place the ribs on the BROILING/ROASTING RACK over the DRIP/BAKING PAN. Slide the pan onto the OVEN RACK in the middle rack position facing down. Broil for 15 minutes. Remove the ribs to the bowl containing the sauce. Turn each to coat well. Return the ribs to the rack and cook for 15-20 minutes or until glazed and nicely browned.

Makes 6-8 servings

Broiled Stuffed Salmon with Lemon Butter

2 (1-pound each) salmon filets
1/2 pound seafood salad chunks, chopped
1/2 cup flavored bread crumbs
1/4 cup olive oil
2 tablespoons lemon juice
1/4 cup butter
1 teaspoon dijon mustard
1/2 teaspoon chopped parsley,
1/2 teaspoon chives
1/2 teaspoon dill

Set the TEMPERATURE CONTROL to Max and the FUNCTION CONTROL to Broil. Preheat for 20 minutes. Make a cut lengthwise down the center of the salmon. Combine the chopped seafood, bread crumbs, and olive oil. Stuff the salmon with the combined filling. Place the fish on the BROILING/ROASTING RACK over the DRIP/BAKING PAN. Slide the pan onto the OVEN RACK in the middle rack position facing down. Broil for 13-15 minutes or until the stuffing is brown and the fish flakes easily with a fork. While the fish is cooking, melt the butter and mustard and add the seasonings. Stir well to combine. Pour the lemon butter over the fish before serving or serve separately.

Makes 4 servings

Broiled Breaded Fish Fillets

8 flounder fillets, about 2 pounds total
1/4 cup mayonnaise
1 teaspoon dijon mustard
1 teaspoon lemon juice
1/2 teaspoon dill
2 tablespoons flavored bread crumbs
lemon slices

Set the TEMPERATURE CONTROL to Max and the FUNCTION CONTROL to Broil. Preheat for 20 minutes. Combine the mayonnaise, mustard, lemon juice, and dill. Spray the DRIP/BAKING PAN with cooking oil spray. Place the fillets on the pan. Spread with mayonnaise mixture. Sprinkle the bread crumbs over the fish. Slide the pan onto the OVEN RACK in the middle rack position facing down. Broil for 10-12 minutes or until the crumbs are brown and the fish flakes easily with a fork. Serve with lemon slices.

Makes 6-8 servings

Honey Mustard Spit Roasted Chicken

2 tablespoons honey
1 tablespoon Dijon mustard
1 teaspoon lemon juice
1 tablespoon mayonnaise
1 teaspoon crushed rosemary
1 teaspoon, crushed sage
1/2 teaspoon onion
1/2 teaspoon garlic powder
2 (3-4 pounds each) whole chickens

Place one fork onto the spit and tighten down the screw to fasten it in place. Place the spit through the neck hole. Pierce the skin with the fork and secure it in the surrounding meat. Repeat with the second chicken. Place the second fork onto the spit and press it into the legs of the second chicken. Push them together and tighten the screw on the second fork. Center the chicken on the spit by loosening the screws and re-tightening where needed. Re-adjust the chickens if necessary to be sure they are balanced.* Insert the pointed end of the spit into the right hand side of the drive socket. The left hand side should (the grooved side) rest on the spit support. Place the DRIP/BAKING PAN in the rails in the bottom of the oven. Set the TEMPERATURE CONTROL to MAX and the FUNCTION CONTROL to ROTISSERIE. Cook for 1 hour. Remove the chicken with the ROTISSERIE HANDLE and brush the skin with the honey mustard glaze. Check for doneness by inserting a meat thermometer into the area between the leg and breast of one of the chickens. It is done when the thermometer reads 180° F. Continue to cook 10 minutes for each 10° F needed.

* If you wish you can tie the legs together with white string and then tie the chicken to the spit. This is not necessary if the chickens are placed on the spit as directed.

Barbecue Beef Roast

3/4 cup catsup
2 tablespoons soy sauce
2 tablespoons honey
1-2 teaspoons liquid smoke flavoring
1 teaspoon onion powder
1/4 teaspoon garlic powder
4-5 pound top sirloin roast

Combine all the ingredients except the meat in a small saucepan and bring to a boil. Reduce heat and simmer 10 minutes. Allow the sauce to cool. Place one fork onto the spit and tighten down the screw to fasten it in place. Insert the spit into the center of meat and place the other fork onto the spit. Press it into the meat. Readjust the meat until it is in the center of the spit. Insert the pointed end of the spit into the right-hand side of the drive socket. The left hand-side (the grooved side) rests on the spit support. Place the DRIP/BAKING PAN in the rails in the bottom of the oven. Set the TEMPERATURE CONTROL to Max and the function control to Rotisserie. Cook 1 hour. Brush with barbecue sauce. Check for doneness by inserting a meat thermometer into thickest part of the meat. Do not touch the spit with the thermometer. Continue to cook 10 minutes for each 10° F needed (120° F-130° F for rare, 140° F-150° F for medium, or 160° F-170° F for well done).

Spicy Slow-Cooked Two Bean and Sausage Soup

1 pound hot Italian sausage, casings removed
1 large onion, chopped
1 teaspoon garlic powder
1 teaspoon salt
1/2 -1 teaspoon ground red pepper
3 stalks celery
3 carrots, chopped
2 cans (15 1/2 ounces each) chick peas with liquid
2 pounds lentils, rinsed and drained
2 packages (10 ounces each) frozen chopped spinach, thawed
1 jar (20 ounces) salsa
1 pound boneless chicken thighs

Sauté the sausage in a 10-inch fry pan until lightly browned. Stir in the onions and sauté until browned. Spoon the sausage and onions into a 3-quart casserole. Add the remaining ingredients and cover. Place the casserole on the OVEN RACK in the lowest rack position facing up. Set the oven to 250° F and slow cook for 4-6 hours.

Makes 12 servings

Pot Roast Dinner

2 tablespoons flour
1 teaspoon each of garlic powder, onion powder, and paprika
1(4-6 pound) bottom round roast
1 tablespoon oil
1 tablespoon Worcestershire sauce
1 cup water
1 can (14 ounces) beef broth
2 tablespoons minced dry onions
1 envelope (1.5 ounces) beef stew seasoning mix
1/2 pound carrots, peeled and cut in 1/3's
1 1/2 pounds potatoes cut in 1/4's
1 cup water

Combine the flour and seasonings in a plastic bag. Place the roast in the bag and shake to coat. In a 10" fry pan, brown the coated roast on all sides in the oil. Place the roast in a 3-quart casserole dish along with the Worcestershire sauce, water, beef broth, onion soup, and stew seasoning mix. Cover. Place the casserole on the OVEN RACK in the lowest rack position facing up. Set the oven to 250° F and slow cook for 4-6 hours. Add the vegetables and remaining water if needed. Turn TEMPERATURE CONTROL to 350° F and cook until the vegetables are tender, (about 1 hour). Remove the roast from the casserole and allow it to cool for 10 minutes before slicing. Slice and serve with the vegetables and gravy.

Makes 8-12 servings

LIMITED WARRANTY

What is Covered and For How Long?

This warranty covers all defects in workmanship or materials in the mechanical and electrical parts, arising under normal usage and care, in this Welbilt® product for a period of 12 months from the date of purchase provided you are able to present a valid proof-of-purchase. A valid proof-of-purchase is a receipt specifying item, date purchased, and cost of item. A gift receipt with date of purchase and item is also an acceptable proof-of-purchase. Product is intended for household use only. Any commercial use voids the warranty.

YOU MUST KEEP YOUR ORIGINAL PROOF-OF-PURCHASE TO OBTAIN WARRANTY SERVICE.

Who is Covered?

The original retail purchaser or gift recipient who can provide proof-of-purchase.

What Will Be Done?

During the applicable warranty period within normal household use, we will repair or replace, at our discretion, any mechanical or electrical part which proves defective, or replace unit with a comparable model.

How Can You Get Service?

Call 1-800-872-1656.

DO NOT RETURN THIS WELBILT® PRODUCT TO APPLIANCE CO. OF AMERICA, LLC

All service must be performed by an ACA authorized Service Center. A valid proof-of-purchase must be submitted to obtain warranty service. Maintain a copy of proof-of-purchase for your records. In the event service is required:

- a. ACA is not responsible for loss or damage during incoming shipment.
- b. Carefully package product for prepaid shipment and insure it with the carrier. Be sure to enclose any accessories related to your problem.
- c. Retain tracking information for your protection in case of loss or damage in shipment.

THIS LIMITED WARRANTY COVERS UNITS PURCHASED AND USED WITHIN THE UNITED STATES AND DOES NOT COVER:

 
- * Damages from improper installation.
- * Damages in shipping.
- * Defects other than manufacturing defects.
- * Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- * Damage from service by other than an authorized dealer or service center.
- * Any transportation and shipping charges.

MANUFACTURER MAKES NO WARRANTY, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTIES OF FITNESS OR MERCHANTABILITY, EXCEPT AS EXPRESSLY SET FORTH ABOVE WITH RESPECT TO SUCH PRODUCTS OR PARTS THEREFOR. NOR SHALL MANUFACTURER HAVE INCURRED ANY OTHER OBLIGATIONS OR LIABILITIES ON ITS PART OR BE LIABLE FOR ANY ANTICIPATED OR LOST PROFITS, INCIDENTAL DAMAGES, CONSEQUENTIAL DAMAGES, TIME CHARGES OR ANY OTHER LOSSES INCURRED IN CONNECTION WITH THE PURCHASE, INSTALLATION, REPLACEMENT, OR REPAIR OF SUCH PRODUCTS OR ANY PARTS THEREFOR WHETHER ORIGINAL EQUIPMENT OR INSTALLED AS A REPLACEMENT COVERED BY THIS WARRANTY OR OTHERWISE; AND MANUFACTURER DOES NOT AUTHORIZE ANY PERSON TO ASSUME FOR MANUFACTURER ANY OTHER LIABILITY IN CONNECTION WITH THE PRODUCTS OR PARTS THEREFOR.

Manufacturer assumes no liability for delay in performing its obligations hereunder if failure results, directly or indirectly, from any cause beyond its control, including but not limited to acts of God, acts of government, floods, fires, shortages of materials, strikes and other labor difficulties, or delays, or failures of transportation facilities.

REPLACEMENT PARTS


ROTISSERIE
HANDLE

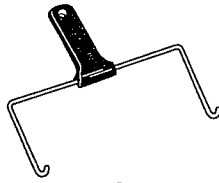


DRIP/BAKING
PAN



 
BROILING/ROASTING
RACK

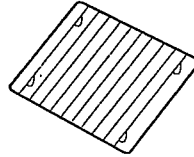


OVEN
RACK

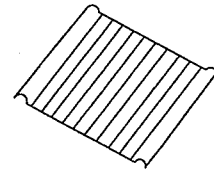 

ROTISSERIE
FORKS

 

ROTISSERIE SPIT

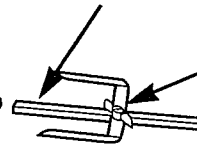 

ROTISSERIE
SCREWS

TINE

If you would like to order replacement or spare parts for your Convection Oven with Rotisserie, please call ACA Consumer Relations at 1-800-872-1656. We accept VISA, MasterCard, or Discover. Please refer to **Model CV8020A** when placing your order.

IMPORTANT NOTICE

PLEASE DO NOT RETURN TO STORE
If you have any problem with the unit contact
ACA Consumer Relations Center for service

PHONE: 1-800-872-1656

Please read operating instructions before
using this product
Please keep original box and packing materials
in the event that service is required

WELBILT[®]

This product is manufactured and distributed by
Appliance Co. of America under license from Welbilt[®] Corporation.

APPLIANCE CO. OF AMERICA, LLC