
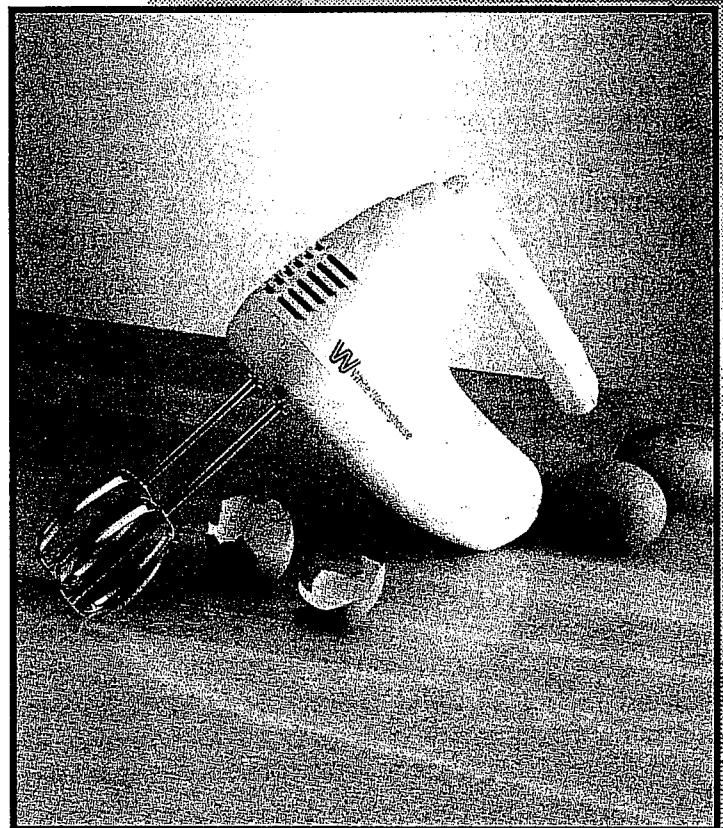



White Westinghouse™

***3-Speed
Hand Mixer
with
Chrome
Beaters***

OWNER'S MANUAL

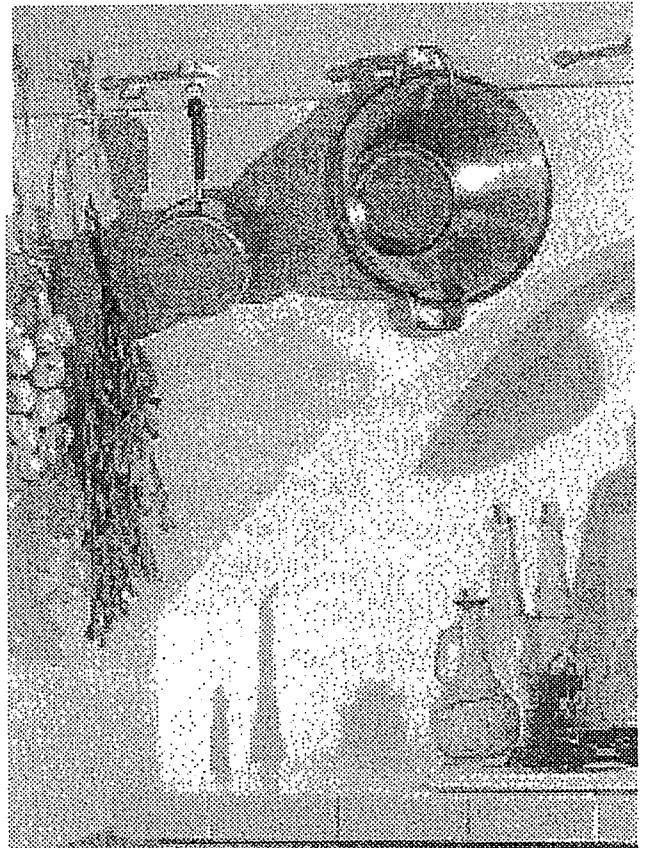

MODEL WWMX3

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:


1. Read all instructions
2. To protect against electrical shock, do not submerge the Mixer or allow AC cord to come in contact with water or other liquids.
3. This appliance should not be used by children, and care should be taken when used near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
10. Keep hands and utensils out of container while mixing to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used, but must be used **only** when the unit is not running.
11. Remove Beaters from Mixer before washing.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

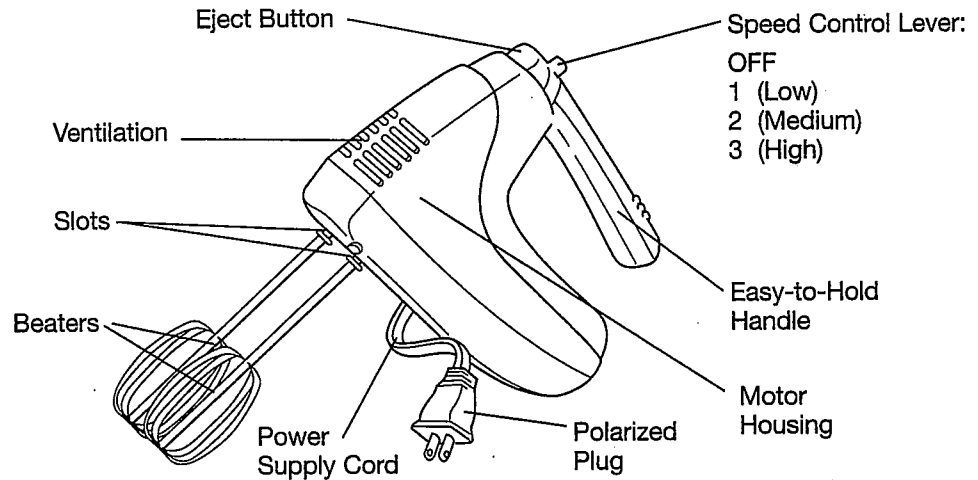

This appliance is for **HOUSEHOLD USE ONLY**. It may be plugged into any AC electrical outlet (ordinary household current). Do not use any other type of outlet.

NOTE: This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug fits in a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

This 3-Speed Hand Mixer is capable of mixing several ingredients. Simply place Beaters in container holding ingredients, and switch on. You can use your versatile Mixer to make cakes, pies, whipped toppings, mashed potatoes and much more. The three speeds allow you to mix a variety of foods.

HOW TO USE YOUR MIXER

ATTACHING BEATERS: Be sure appliance is unplugged. Align notches on Beaters with Slots on the unit, and push until they click and lock into place.

Insert plug into any standard household outlet. Place Beaters directly into container holding ingredients to be mixed. Slide the Speed Control Lever to 1 (Low) position to start mixing, then increase to 2 (Medium) and 3 (High) as needed.

REMOVING BEATERS: Slide Speed Control Lever to the "OFF" position. Unplug appliance. Push down on the Eject Button to eject Beaters.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing is needed.

TO CLEAN: NEVER IMMERSE MOTOR HOUSING IN WATER. First, be sure unit is unplugged. Eject Beaters from unit and wash in warm, soapy water and dry thoroughly. Wipe Motor Housing with a damp cloth or sponge.

TO STORE: Unplug unit; store in its box or in a clean, dry place. Never store it while it is hot or still plugged in. **Never wrap cord tightly around the appliance.** Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

ONE-YEAR LIMITED WARRANTY

This White-Westinghouse product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied, and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model (at the store's option) when the product is returned to Kmart. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Important Notice

If any parts are missing or defective, return this product to the place of purchase.

Consumer Service

This White-Westinghouse product is distributed by:

Salton®
550 Business Center Drive
Mount Prospect, IL 60056
E-mail: White-Westinghouse@saltonusa.com

Any questions or comments can be directed to Salton's address, or call the Consumer Service Department:

1-800-233-9054
Monday-Friday
8 a.m. - 5 p.m. CST

White-Westinghouse trademark used under license.
©1998 White Consolidated Industries, Inc.

Made in China for
Kmart Corporation
Troy, Michigan 48084

Printed in China