


Michael Graves 4-Slice Long Slot Toaster

owner's manual

SAVE THIS USE AND CARE BOOK

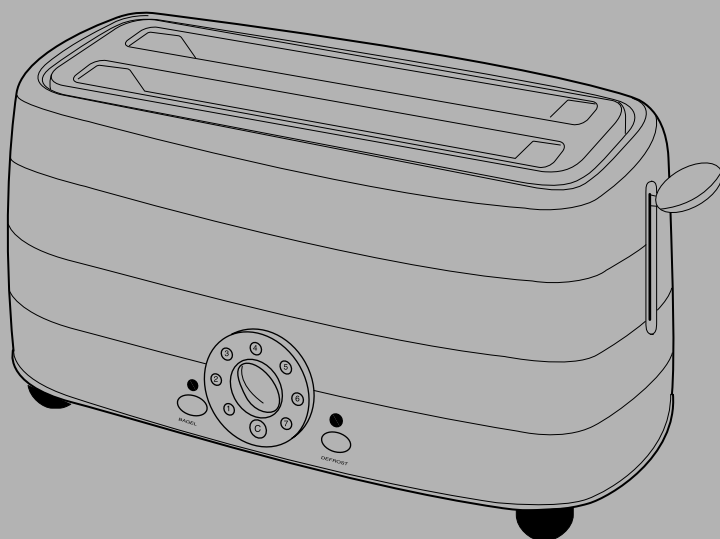

Model MGT4

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, press CANCEL button then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Oversize foods, metal foil packages or utensils must not be inserted in a Toaster as they may involve a risk of fire or electric shock.
14. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
15. Do not attempt to dislodge food when toaster is plugged in.

SAVE THESE INSTRUCTIONS

For Household Use Only

Additional Important Safeguards

CAUTION HOT SURFACES: *This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.*

WARNING: ELECTRICAL SHOCK HAZARD. *Never attempt to dislodge food inside the Toaster while the Toaster is plugged in. Doing so could cause an electrical shock hazard or a risk of fire.*

CAUTION: *This appliance is hot during operation and retains heat for some time after turning off. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Do not place anything on top of the Toaster while it is operating or while it is hot.*

1. A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. **Do not reach into the water!**
3. When using this appliance, provide adequate air space above and on all sides for air circulation. Do not operate this appliance while it is touching or near curtains, wall coverings, clothing, dishtowels or other flammable materials.
4. To reduce the risk of fire, do not leave this appliance unattended during use.
5. If this appliance begins to malfunction during use, immediately press the CANCEL Button and unplug the cord. Do not use or attempt to repair a malfunctioning appliance!
6. The cord to this appliance should only be plugged into a 120V AC electrical wall outlet.
7. Do not use this appliance in an unstable position.
8. Use the toaster on a hard flat surface. Do not place it near a flame or heat or on a soft surface (such as carpet). Avoid placing it where it may tip over during use. Dropping the Toaster could cause it to malfunction.

CAUTION:

- **DO NOT toast pastries with runny fillings or frosting.**
- **DO NOT toast torn slices of bread.**
- **DO NOT place buttered bread or wrapped food into the Toaster.**
- **DO NOT toast small-size breads like "melba", mini-baguettes, breadsticks, etc.**

Polarized Plug

This appliance has a **polarized plug** (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Short Cord Instructions

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

Electric Power


If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

Plasticizer Warning

CAUTION: To prevent Plasticizers from migrating from the finish of the countertop or tabletop or other furniture, place **NON-PLASTIC** coasters or placemats between the appliance and the finish of the countertop or tabletop.

Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.

Getting To Know Your Michael Graves MGT4 4-Slice Long Slot Toaster

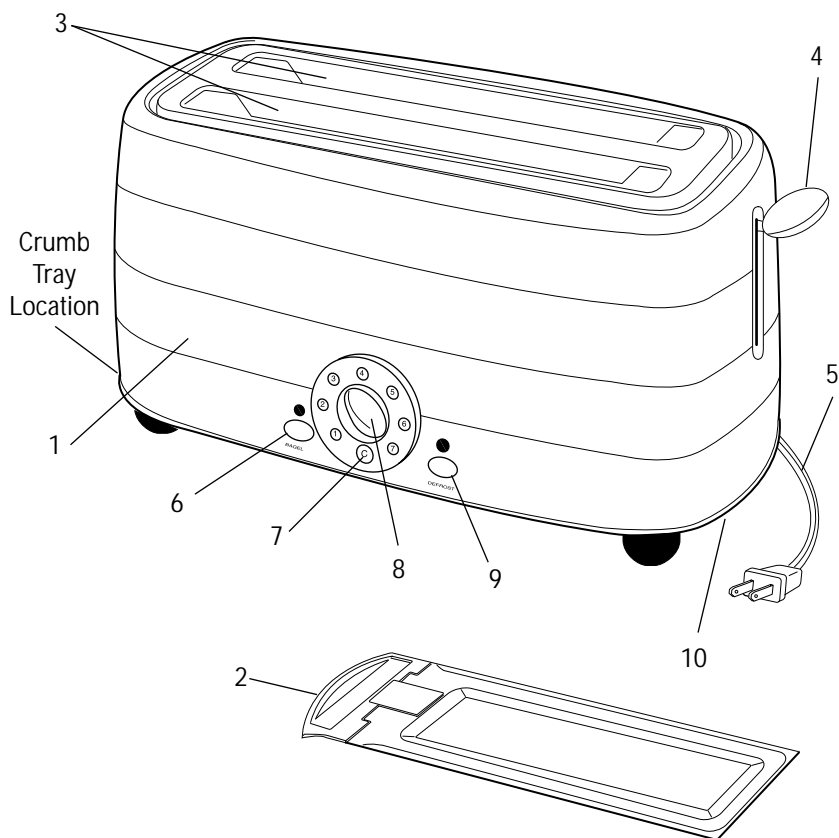

- | | |
|--|--|
| 1. Stainless Steel Exterior | 7. Cancel Button |
| 2. Crumb Tray (P/N 22373) | 8. Adjustable Browning Control |
| 3. Bread Slots | 9. Defrost Button with Indicator Light |
| 4. Carriage Lever | 10. Cord Storage Area (Not Shown) |
| 5. Power Cord | |
| 6. Bagel Cycle Button with Indicator Light | |

Introduction

Congratulations on your purchase of the Michael Graves 4-Slice Long Slot Toaster. This Toaster, with its classic looks and styling, offers you traditional toasting functions with the addition of a "Bagel" and "Defrost" cycle.

Enjoy chewy bagels or English Muffins by activating the "Bagel Cycle" — toasting occurs on only one side!

Or use the convenient "Defrost Cycle" to slowly defrost breads or other bread products before toasting for that perfect toasted consistency every time!

Before First Time Use

1. Remove all packaging materials including those which may be inside the Bread Slots and wipe the exterior with a damp cloth. Dry thoroughly.
2. Do not use abrasive cleaners.
3. Do not put the Toaster, cord or plug in water.
4. Be sure the Crumb Tray is pushed all the way into the Toaster.
5. Unwrap power cord from Cord Storage Area on underside of Toaster.

Instructions for Use

Toasting Bread

1. Be sure no bread or other objects are inside the Bread Slots. Place Toaster on a flat, level surface and plug power cord into a 120V AC electrical outlet.
2. Turn the Adjustable Browning Control to desired setting. (You may want to experiment with the Adjustable Browning Control to determine your preference.) Turn Adjustable Browning Control to "1" for lightest setting; turn to "7" for darkest setting. Or, the Adjustable Browning Control can be set to any number in between for a more medium setting.
3. Remove any protective wrappings from food before placing into Bread Slots. Place bread into Bread Slots. Push down Carriage Lever until it lowers the bread and locks into position at the bottom of the Carriage Slide. As soon as the Carriage Lever locks into position, the Toaster will begin heating. The first time you use your Toaster, you may notice a slight odor. This is normal and will stop as the heating elements continue to heat.
4. The bread will cook to the selected browning setting and will automatically rise when the bread has finished toasting. The Toaster will also turn off when the bread rises.

NOTE: DO NOT change the Adjustable Browning Control selection during the toasting cycle. Press "CANCEL," change the setting and replace bread if desired.

To stop or interrupt the toasting cycle, press "CANCEL" button. The bread will automatically pop-up and the Toaster will turn off.

5. Remove bread from Bread Slots. **Use care when removing bread as the bread and Toaster will still be hot.**
6. Repeat steps 2-3 for additional toast as desired.
7. When all toasting is complete, unplug Toaster from electrical outlet and allow it to cool completely.

NOTE: To prevent a fire hazard, never place bread over the opening of a Toaster, but always place it into the Bread Slots.

Instructions for Use (Cont.)

Removing Lodged Toast - If a piece of toast becomes lodged in the Toaster, unplug the Toaster and allow to cool. Press the Carriage Lever down. Turn the Toaster upside down, and shake the toast loose.

IMPORTANT: Never use a fork or sharp-edged utensil to remove toast, because that may damage the heating element or cause injury.

Pastry - For best results, follow the instructions printed on the pastry package. If the package does not have instructions, position the Adjustable Browning Control in the center. Some pastries may require a second toasting cycle.

NOTE: Do not use this Toaster for toasting pastry items with runny-type frosting or open fillings.

Advanced Features

NOTE: To activate the Bagel or Defrost setting, you must first place the bread into the bread slot(s), push down the Carriage Lever, then press the appropriate button. These functions will not work properly if you press the button, THEN place the bread in the slot(s) and lower the Carriage.

1. Using the 'Bagel' Setting

Always slice bagels into equal halves before toasting. Arrange bagel so the "cut" sides face away from each other. Place bagel into Bread Slot(s). **As soon as Carriage Lever is lowered and locked into position**, press 'BAGEL' button. The Indicator Light above the button will illuminate, indicating the Toaster is in the Bagel cycle. This changes the toasting cycle to heat only the outer elements of EACH bread slot — toasting the bagel only on the "cut" side (keeping the rest of the bagel chewy). The Bagel setting works great for English Muffins, too!

2. Using the 'Defrost' Setting

Place frozen bread, waffles, etc. into Bread Slot(s). **As soon as Carriage Lever is lowered and locked into position**, press the 'DEFROST' button. The Indicator Light above the button will illuminate, indicating the Toaster is in the Defrost cycle. The Toaster will defrost the bread, etc. and then automatically switch to the toasting cycle. This allows the bread, waffles, etc. to reach the proper browning selection.

Important Points

- Remove all protective wrappings from food before placing in Bread Slots.
- For best results, clean Crumb Tray frequently.
- Different breads require different color settings. Carriage Lever may be raised manually or press the 'CANCEL' button at any time to check toast color.
- Do not block top openings. Do not place any object over the top openings.
- Do not toast buttered bread or buttered pita bread. Melted butter will cause fire.
- Bread which has been toasted but not buttered may be reheated. Use a lighter setting and watch it carefully.
- When toasting more than one slice of bread, use slices of similar size, thickness and freshness.
- Stale bread, thin bread or sweet bread products, such as tea cakes and fruit loaf, brown much more quickly than ordinary bread, so they should be toasted on the lighter settings.
- Never immerse Toaster, Cord or Plug in water or other liquid.
- **Never use a fork or sharp-edged utensil to remove toast, because that may damage the heating element or cause injury.**

User Maintenance Instructions

This Michael Graves 4-Slice Long Slot Toaster requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

Cleaning

CAUTION: *Do not immerse Toaster, Cord, or Plug in water or other liquid.*

1. Always unplug the Toaster and allow it to cool fully before cleaning.
2. **Crumb Tray:** The Crumb Tray is located at the bottom of the Toaster. For ease in cleaning, grasp the Crumb Tray Handle and pull all the way out. Brush crumbs from the Tray and, if necessary, wipe with a clean, damp cloth. Always dry the Tray thoroughly before replacing. When replacing the Tray, be sure to push firmly so that it is fully inserted in the bottom of the Toaster.
3. **Exterior:** Wipe surfaces with a clean, damp cloth. Do not use abrasive cleansers, as they may scratch the surface.

Storage

Unplug unit, allow to cool, and clean before storing. Store in its box in a clean, dry place. Never store it while it is hot or still plugged in. Never wrap cord tightly around the appliance, use the Cord Storage Area on the bottom of the Toaster. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

LIMITED ONE YEAR WARRANTY

Warranty: This product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1 (800) 233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number MGT4 when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization (1 800 233-9054).

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$8.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

Attn: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 7366
Columbia, MO 65205-7366
1 800 233-9054
Email: Salton@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and in no event shall Salton be liable for any incidental or consequential damages, losses or expenses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products: Visit our website: <http://www.eSalton.com>

© 2003 Salton, Inc.
All Rights Reserved

P/N 61378
Printed in China

Michael Graves 4-Slice Long Slot Toaster



Michael Graves

The highly acclaimed work of Michael Graves has restored a sense of humanity to modern architecture. Graves, one of the most noted architects of our time, has designed buildings for such clients as Disney,[™] including the company's corporate headquarters and the Walt Disney[™] World Swan and Dolphin Hotels. Gifted in design at every scale, Michael Graves has created products for the home that carry labels such as Alessi, FAO Schwarz, and Steuben. His work has been recognized with scores of awards. Most recently Michael Graves was selected for the 2001 American Institute of Architects Gold Medal award, the highest honor given by the AIA to an individual. In 1999, President Clinton presented Michael Graves with the National Medal of Arts.

The Michael Graves Design[™] Collection provides an inspired balance of form and function. Sensible and sublime, practical and whimsical, the objects envisioned by this world-renowned architect infuse our daily lives with joy.

A handwritten signature in black ink, which appears to read "Graves". The signature is fluid and stylized, with a long horizontal line underneath it.