



0.9 cu. ft.
Microwave Oven



You can be sure...if it's Westinghouse

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- a. Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- b. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- c. Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- d. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

WARNING: To reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" above.
3. This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" found on page 4.
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. Some products such as whole eggs with/without shells and sealed containers – for example, closed glass jars – are able to explode and should not be heated in this oven.
6. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
7. As with any appliance, close supervision is necessary when used by children.
8. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
9. This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair or adjustment.

IMPORTANT SAFEGUARDS (Cont.)

10. Do not cover or block any openings on the appliance.
11. Do not store this appliance outdoors. Do not use this product near water – for example, near a kitchen sink, in a wet basement or near a swimming pool or similar locations.
12. Do not immerse cord or plug in water.
13. Keep cord away from heated surfaces.
14. Do not let cord hang over edge of table or counter.
15. See surface door cleaning instructions on page 18.
16. To reduce the risk of fire in the oven cavity:
 - a. Do not overcook food. Carefully attend appliance when paper, plastic or other combustible materials are placed inside the oven to facilitate cooking.
 - b. Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - c. If materials inside the oven ignite, keep oven door closed, turn oven off and disconnect the power cord or shut off power at the fuse or circuit breaker panel.
 - d. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
17. Liquids such as water, coffee or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.

THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.

SAVE THESE INSTRUCTIONS

For Household Use Only

ADDITIONAL IMPORTANT SAFEGUARDS

1. Oversize foods or oversize metal utensils should not be inserted in a microwave oven as they may create a fire or risk of electric shock.
2. Do not clean with metal scouring pads.
3. Do not store any materials other than manufacturer's recommended accessories in this oven when not in use.

WARNING: TO REDUCE THE RISK OF INJURY TO PERSONS:

1. Liquids such as water, coffee or tea are able to be overheated beyond the boiling point without appearing to be boiling.
2. Do not use narrow necked containers to boil or reheat liquids.
3. To reduce the risk of injury, stir the liquid several times before heating.
4. The liquid may splash out during or after heating or when adding ingredients (instant coffee, etc) resulting in possible harm or injury to persons.
5. After heating, allow the container to stand in microwave oven for at least 40 seconds before removing the container.
6. Do not heat water and oil, or a fat together which may cause a violent eruption.
7. Do not deep fry food in the microwave.
8. Pierce foods with heavy skins such as potatoes, and squash before cooking.
9. Extreme caution should be used if heating feeding bottles and baby foods. Contents should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
10. Cooking utensils may become hot by heat transferred from the heated food. Use potholders as needed to avoid injury.
11. Use only thermometers which are specifically designed for use in microwave ovens.
12. Do not operate any heating or cooking appliance beneath this appliance.
13. Be certain the Glass Tray and Roller Rest are in place when you operate the oven.

WARNING: It is hazardous for anyone other than a trained person to carry out any service or repair which involves the removal of any cover which gives protection against exposure to microwave energy. If there is any damage, do not operate the oven and contact your dealer or manufacturer authorized service provider.

Grounded 3-Conductor Plug

This appliance is equipped with a grounded-type 3-wire cord (3-prong plug). This plug will only fit into an electrical outlet made for a 3-prong plug. This is a safety feature. If the plug should fail to fit the outlet, contact an electrician to replace the obsolete outlet. Do not attempt to defeat this safety feature.

Short Cord Instructions

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

Electric Power

The electrical requirements are a 120 volt 60 Hz, AC only, 20 amp. If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

Radio or TV Interference

Should there be any interference caused by the microwave oven to your radio or TV, check that the microwave oven is on a different circuit, relocate the radio or TV as far away from the oven as feasible or check position and signal of receiving antenna.

Cooking Techniques

Caution should always be taken with using cookware and utensils in microwave ovens. Below is a list of recommended, limited use, and not recommended cookware and utensils.

Recommended

| Cooking Accessories* | Remarks |
|--|--|
| Microwave browning dish | Use to brown the exterior of small items such as steaks and pork chops. Follow the directions provided with your browning dish. |
| Microwaveable plastic wrap | Use to retain steam. Leave a small opening for steam to escape and avoid placing it directly on the food. |
| Paper towels and napkins | Use for short-term heating and covering; these absorb excess moisture and prevent spattering. <u>Do not use recycled paper towels, which may contain metal and could ignite.</u> |
| Glass and glass-ceramic bowls and dishes | Use for heating or cooking. |
| Paper plates and cups | Use for short-term heating at low temperatures. <u>Do not use recycled paper, which may contain metal and could ignite.</u> |
| Wax paper | Use as a cover to prevent spattering. |
| Thermometers | Use only those labeled "Microwave Safe" and follow all directions. Check the food in several places. Conventional thermometers may be used on microwave food once the food has been removed from the oven. |

*Not included with Microwave.

Limited Use

| Cooking Accessories* | Remarks |
|-----------------------------------|---|
| Ceramic, porcelain, and stoneware | Use these if they are labeled "Microwave Safe". |
| Plastic | Use only if labeled "Microwave Safe". |

*Not included with Microwave.

Cooking Techniques (Cont.)

Not Recommended

| Cooking Accessories* | Remarks |
|-------------------------------------|--|
| Glass jars and bottles | Regular glass is too thin to be used in a microwave. It can shatter and cause damage and injury. |
| Paper bags | These are a fire hazard, except for popcorn bags that are designed for microwave use. |
| Styrofoam plates and cups | These can melt and leave an unhealthy residue on food. |
| Plastic storage and food containers | Containers such as margarine tubs can melt in the microwave. |
| Metal utensils | These can damage your oven. Remove all metal before cooking. |

*Not included with Microwave.

Your microwave makes cooking easier than conventional cooking, provided you keep these considerations in mind:

Stirring

Stir foods such as casseroles and vegetables while cooking to distribute heat evenly. Food at the outside of the dish absorbs more energy and heats more quickly, so stir from the outside to the center.

Arrangement

Arrange odd shaped foods, such as chicken pieces or chops, with the thicker, meatier parts toward the outside of the turntable where they receive more microwave energy. To prevent overcooking, place delicate areas, such as asparagus tips, towards the center of the turntable.

Turning

Turn over large foods, such as roasts, midway for optimal cooking and even microwave exposure.

Standing

Foods cooked in the microwave build up internal heat and continue to cook for a few minutes after heating stops. Let foods stand to complete cooking. For example, roasts need standing time to complete cooking in the center without overcooking the outer areas. All liquids, such as soup or hot chocolate, should be shaken or stirred when cooking is complete. Let liquids stand a moment before serving.


Adding moisture

Microwave energy is attracted to water molecules. Food that is uneven in moisture content should be covered or allowed to stand so that the heat disperses evenly. Add a small amount of water to dry food to help cook it.

Getting To Know Your Westinghouse WST3507SS Microwave Oven

The box containing your Westinghouse Microwave Oven should include the following parts. If any of the following parts are missing, contact customer service.

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

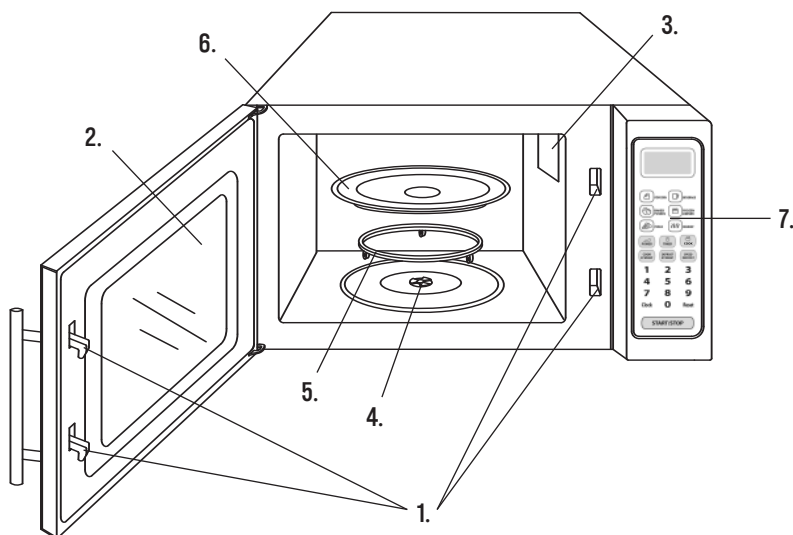

1. Door Safety Lock System
2. Oven Window
3. Mica Sheet (Do Not Remove)
4. Shaft
5. Roller Rest (P/N 22586)
6. Glass Tray (P/N 22587)
7. Control Panel

| | |
|-------------------------------------|--|
| Power Consumption: | 120V-60Hz, 1350W |
| Output: | 900W |
| Operation Frequency: | 2450MHz |
| Outside Dimensions (H x W x D): | 12 x 20 x 16 ⁹ / ₁₆ in. |
| Oven Cavity Dimensions (H x W x D): | 8 ⁷ / ₁₆ x 13 ³ / ₄ x 13 in. |
| Oven Capacity: | 0.9 Cu. Ft. |
| Cooking Uniformity: | Turntable System (Φ 12") |
| Net Weight: | Approx. 34.4lbs |

Getting To Know Your Westinghouse WST3507SS Microwave Oven (Cont.)

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

DISPLAY

Cooking time, power, indicators and present time are displayed.

QUICK COOK BUTTONS

Instant settings to cook popular foods.

POWER

Use to set power levels other than high.

TIMER

Timer functions independently, even while a cooking program is in process.

COOK

Use for multi-stage cooking. Enables cooking at multiple power and time settings automatically.

COOK BY WEIGHT

Programmed cooking based on weight of foods cooked.

DEFROST BY WEIGHT

Programmed defrosting based on the weight of the foods to be defrosted.

SPEED DEFROST

Quick defrost function that alternates defrost and stand times to quickly and effectively defrost foods.

NUMBER PADS (0-9)

Touch to set time or amount.

CLOCK


Sets current time.

RESET

Clears all previous settings and resets cooking.

START/STOP

Touch to start or stop cooking.

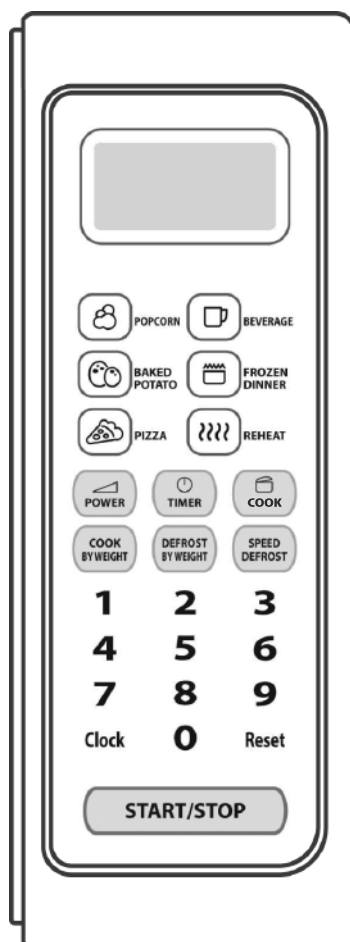

Operating Instructions

Before Using For The First Time

1. Read all instructions in this manual carefully.
2. Carefully unpack your Microwave Oven and remove all packaging materials.
3. Place your Microwave Oven on a level surface such as a countertop or table. Be sure the sides, back and top of the Microwave Oven are at least four inches away from any walls, cabinets or objects on the counter or table.
4. Remove all stickers from the Microwave Oven except the rating label located on the back.
5. Wash Glass Tray and Roller Rest in warm, soapy water. Rinse and dry thoroughly before placing in the Microwave Oven.
6. Remove any dust that may have accumulated during packaging. Simply wipe the Microwave Oven exterior with a clean, damp cloth.
7. Do not use abrasive cleansers.
8. Do not put the Microwave Oven, cord or plug in water.
9. When you are ready to use the Microwave Oven, plug the cord into a 120V AC outlet.
10. To avoid scratching, marring or discoloration, do not store anything on top of the Microwave Oven during operation.

CAUTION: Always wear protective, insulated microwave oven mitts on hands when touching hot Microwave Oven or hot dishes and food or when inserting or removing baking dish and food.

CAUTION: Never use metal bakeware or aluminum inside of Microwave Oven.

Operating Instructions (Cont.)

Signals During Oven Settings

ONE SIGNAL: Oven accepts the entry.

TWO SIGNALS: Oven does not accept the entry, check and try again.

Setting The Clock

1. Touch **CLOCK** pad.
2. Use the number pads to enter the correct time. You must touch at least three numbers to set the clock (one for hour and two for minutes).
3. Touch **CLOCK** pad again.

NOTE: This is a 12 hour clock. When the oven is first plugged in or when power resumes after a power interruption, the display will show **ENTER CLOCK TIME**. If you prefer to not have the clock displayed, touch **RESET**. You can check the clock time while cooking is in progress by touching the **CLOCK** pad.

Using The Oven Timer

1. Touch **TIMER** pad.
2. Enter the amount of time by touching the number pads. Digit time is in minutes and seconds and set left to right. Set one digit (**5** for 5 seconds) or up to four digits (**2 4 0 5** for 24 minutes 5 seconds).
3. Touch **START/STOP** pad.

NOTE: • Time countdown can be seen in display for 3 seconds before clock or cooking time is returned to display.

- Touch **TIMER** and then touch **RESET** to cancel Timer during timing process.

Operating Instructions (Cont.)

Setting Cooking Times and Power Levels

One-Stage Cooking

1. Use the number pads to set a cooking time. You can set a cooking time from one second to 99 minutes and 99 seconds.
2. If you want to set a power level other than 100% power, touch **POWER**, then use the number pads to enter the power level. You can set the power level from 1 to 9.
3. Touch **START/STOP** to start cooking.

USE THESE SINGLE DIGITS TO SET POWER LEVELS:

| NUMBER PAD | % OF POWER |
|------------|------------|
| 9 | 90% |
| 8 | 80% |
| 7 | 70% |
| 6 | 60% |
| 5 | 50% |
| 4 | 40% |
| 3 | 30% |
| 2 | 20% |
| 1 | 10% |

Two-Stage Cooking

Some recipes require different stages of cooking at different temperatures.

1. **Set Stage 1:**
Follow steps 1 and 2 in "One-Stage Cooking".
DO NOT TOUCH **START/STOP**.
2. **Set Stage 2:**
Touch **COOK** then enter proper cooking time and (lower) power level. (Most 2-stage recipes use lower power for the second stage).
3. Touch **START/STOP**.

NOTE: After total time has elapsed, 4-signal sound and **END** appears in display. Touch **RESET** or open oven door to clear **END** before starting another cooking function.

Operating Instructions (Cont.)

Using Speed Defrost

1. Touch **SPEED DEFROST**.
2. Enter desired defrosting time by touching correct number pads. Digital timer sets minutes and seconds from left to right so a single digit can be set (**5** for 5 seconds) or up to 4 digits (**2 4 0 5** for 24 minutes 5 seconds).
3. Touch **START/STOP**.

NOTE: • After time has elapsed four signals sound and **END** appears in display. Touch **RESET** pad or open door to clear **END** before starting another cook function.

- After setting **SPEED DEFROST**, oven can be programmed to automatically switch to one or two-stage cooking.

For SPEED DEFROST and One-Stage cooking, follow steps above. Before touching **START/STOP**, touch **COOK**, enter time and power level. Then touch **START/STOP**.

For SPEED DEFROST and Two-Stage cooking, follow steps above. Before touching **START/STOP**, enter two-stage cooking programs.

Operating Instructions (Cont.)

Using Cook By Weight

1. Touch **COOK BY WEIGHT**.
2. Enter the one digit code by touching the correct number pad.
3. Enter weight.
4. Touch **START/STOP**.

COOK BY WEIGHT CODE DESCRIPTIONS

| CODE | TYPE | MAX WEIGHT |
|------|--------|--------------|
| 1 | Beef | 5 lb. 16 oz. |
| 2 | Mutton | 5 lb. 16 oz. |
| 3 | Pork | 5 lb. 14 oz. |

- Meat must be defrosted and at refrigerated temperature.
- Weight must be in pounds and ounces. Ounce weights less than 10 must be preceded by a 0. If label gives weight in pounds only, change the fraction of a pound to ounces using the following chart:

CONVERTING FRACTIONS OF A POUND TO OUNCES

| FRACTIONS OF A POUND | OUNCES |
|----------------------|---------------------------|
| Less than .03 | 0 |
| .03 to .09 | 1 |
| .10 to .15 | 2 |
| .16 to .21 | 3 |
| .22 to .27 | 4 |
| .28 to .34 | 5 |
| .35 to .40 | 6 |
| .41 to .46 | 7 |
| .47 to .53 | 8 |
| .54 to .59 | 9 |
| .60 to .65 | 10 |
| .66 to .71 | 11 |
| .72 to .78 | 12 |
| .79 to .84 | 13 |
| .85 to .90 | 14 |
| .91 to .97 | 15 |
| above .97 | go to nearest whole ounce |

Operating Instructions (Cont.)

Using Cook By Weight (Cont.)

- Turn meat over when oven signals twice. Touch **START/STOP** to resume cooking.
- After total cooking time, 4 signals sound and **END** appears in display. Touch **RESET** or open oven door to clear **END** before starting another cooking function. Let meat stand a few minutes before carving.

Using Defrost By Weight

1. Touch **DEFROST BY WEIGHT** pad.
2. Enter weight.
3. Touch **START/STOP** pad.

NOTE: • Weight must be in pounds and ounces. Ounce weights less than 10 must be preceded by a 0. If label gives weight in pounds only, change the fraction of a pound to ounces using the chart on page 13.

- Turn food over when oven signals twice. Touch **START/STOP** pad to resume defrosting.
- After total defrosting time, 4 signals sound and **END** appears in display. Touch **RESET** or open oven door to clear **END** before starting another cooking function.

Setting The Child Safety Lock

The safety lock prevents unsupervised operation by children.

To set, press and hold **RESET** for 3 seconds. **LOCK** is indicated on the display. To cancel, press and hold **RESET** for 3 seconds. **LOCK** indication disappears.

Quick Cook Settings

The **QUICK COOK** settings allow you to cook or reheat food automatically without entering power level or time.

For smaller portions, simply touch the applicable pad and start. For larger portions, push the pad twice.

FROZEN DINNER, BAKED POTATO and **BEVERAGE** allow you to cook multiple amounts of the same food. Simply touch pad once, and **ENTER AMT** appears in the display. Enter the amount of serving and touch **START/STOP**.

Operating Instructions (Cont.)

Quick Cook Settings (Cont.)

POPCORN

1. Touch **POPCORN**.

CODE and **2:15** (2 min. 15 sec.) appears in the display. **POPCORN** automatically sets the cooking time for a 3 to 3 1/2 oz. bag of microwave popcorn.

2. Touch **START/STOP**.

NOTE: To change the preset POPCORN time: Touch **POPCORN** twice. **ENTER TIME** appears in display. Touch number pads to enter minutes and seconds. Touch **START/STOP**. This new cooking time will remain whenever you use the POPCORN setting.

BAKED POTATO

For 4 to 6 oz. potatoes:

1. Touch **POTATO** once.
2. Enter number of potatoes by touching number pads from 1 to 4. Cooking times for small-medium potatoes are as follows:

| | |
|--------------------|-----------------|
| 1 potato: | 3 min. 20 sec. |
| 2 potatoes: | 6 min. 20 sec. |
| 3 potatoes: | 9 min. 20 sec. |
| 4 potatoes: | 12 min. 20 sec. |

3. Touch **START/STOP**.

For large 8 to 10 oz. potatoes:

1. Touch **POTATO** twice.
2. Enter number of potatoes by touching number pads from 1 to 4. Cooking times for large potatoes are as follows:

| | |
|--------------------|-----------------|
| 1 potato: | 5 min. 00 sec. |
| 2 potatoes: | 9 min. 00 sec. |
| 3 potatoes: | 13 min. 00 sec. |
| 4 potatoes: | 17 min. 00 sec. |

3. Touch **START/STOP**.

PIZZA

To reheat a slice of pizza:

1. Touch **PIZZA** once. **CODE** and **1:00** (1 min.) appears.
2. Touch **START/STOP**.

Heating a whole frozen pizza:

1. Touch **PIZZA** twice. **CODE** and **5:00** (5 min.) appears.
2. Touch **START/STOP**.

Operating Instructions (Cont.)

Quick Cook Settings (Cont.)

BEVERAGE

For 6 to 8 oz. cups:

1. Touch **BEVERAGE** once.
2. Enter number of cups by touching number pads from 1 to 4. Cooking times are as follows:

| | |
|----------------|----------------|
| 1 cup: | 1 min. 10 sec. |
| 2 cups: | 2 min. 10 sec. |
| 3 cups: | 3 min. 10 sec. |
| 4 cups: | 4 min. 10 sec. |

3. Touch **START/STOP**.

For larger 10 to 12 oz. cups:

1. Touch **BEVERAGE** twice.
2. Enter number of mugs by touching number pads from 1 to 4. Cooking times for coffee are as follows:

| | |
|----------------|----------------|
| 1 mug: | 2 min. 00 sec. |
| 2 mugs: | 3 min. 30 sec. |
| 3 mugs: | 5 min. 00 sec. |
| 4 mugs: | 6 min. 30 sec. |

3. Touch **START/STOP**.

FROZEN DINNER

Microwaving one or two small (7-9 oz.) frozen dinners:

1. Touch **FROZEN DINNER** once.
2. For 1 entree, just touch **START/STOP**. For 2 entrees, touch the number **2** pad. Cooking times for small-size entrees are as follows:

| | |
|-------------------|----------------|
| 1 entree: | 4 min. 35 sec. |
| 2 entrees: | 8 min. 15 sec. |

3. Touch **START/STOP**.

Microwaving one or two large (10-12 oz.) frozen dinners:

1. Touch **FROZEN DINNER** twice.
2. For 1 entree, just touch **START/STOP**. For 2 entrees, touch the number **2** pad. Cooking times for large entrees are as follows:

| | |
|-------------------|-----------------|
| 1 entree: | 9 min. 00 sec. |
| 2 entrees: | 15 min. 30 sec. |

3. Touch **START/STOP**.

REHEAT

1. Touch **REHEAT** pad. **CODE** and **3:15** (3 min. 15 sec.) appears.
2. Touch **START/STOP**.

User Maintenance Instructions

Care And Cleaning

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the window on both sides with a damp cloth to remove any spills or splatters.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions. In such case, it is normal.
7. It is occasionally necessary to remove the Glass Tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The Roller Rest and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The Roller Rest may be washed in mild sudsy water or dishwasher. When removing the Roller Rest from cavity floor for cleaning, be sure to replace in the proper position.
9. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl. Microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
10. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.

Before You Call For Service

If the oven fails to operate:

1. Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.
2. Check for a blown fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
3. Check to ensure that the control panel is programmed correctly and the timer is set.
4. Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

IF NONE OF THESE RECTIFY THE SITUATION, CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

LIMITED ONE YEAR WARRANTY

Warranty: This Westinghouse product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified, or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1 (800) 934-7455 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number WST3507SS when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (800) 934-7455.

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$40.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:


Attn: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 6916
Columbia, MO 65205-1637
1(800) 934-7455
Email: Salton@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and in no event shall Salton be liable for any incidental or consequential damages, losses or expenses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

WESTINGHOUSE,  and "YOU CAN BE SURE...IF IT'S WESTINGHOUSE" are trademarks of WESTINGHOUSE ELECTRIC CORPORATION and used under license by Salton, Inc.
For more information on Salton products: Visit our website: www.eSalton.com