 
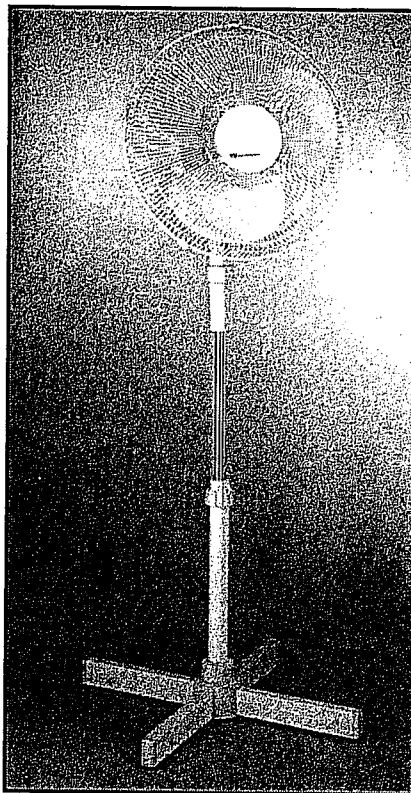 


OWNER'S MANUAL
MODEL WSF1600

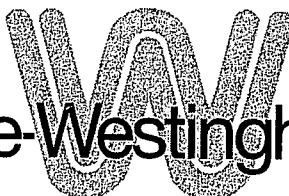

**16" EASY-TO-
ASSEMBLE
OSCILLATING
STAND FAN**


White-Westinghouse®

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

 
 
1. Use fan only for intended use, as described in instruction manual.
2. To protect against electrical shock, do not immerse unit, plug, or cord in water or spray with liquids.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
5. Never insert fingers, pencils or any other objects through the grille when fan is running.
6. Disconnect fan before cleaning.
7. Make sure fan is on a stable surface when operating to avoid chance of overturning.
8. Do not use fan in a window. Rain may cause an electrical hazard.
9. Do not operate in the presence of explosive and/or flammable fumes.
10. Do not place fan or any parts near an open flame, cooking or other heating appliances.
11. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner.
12. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
13. Always use on a dry surface.
14. This product is intended for household use only and not for commercial or industrial use.
15. Do not use fan near curtains, plants, window treatments, etc.

WARNING: To reduce the risk of fire or electrical shock, do not use this fan with any solid-state speed control device.

READ AND SAVE THESE INSTRUCTIONS

PARTS/ASSEMBLY DIAGRAMS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

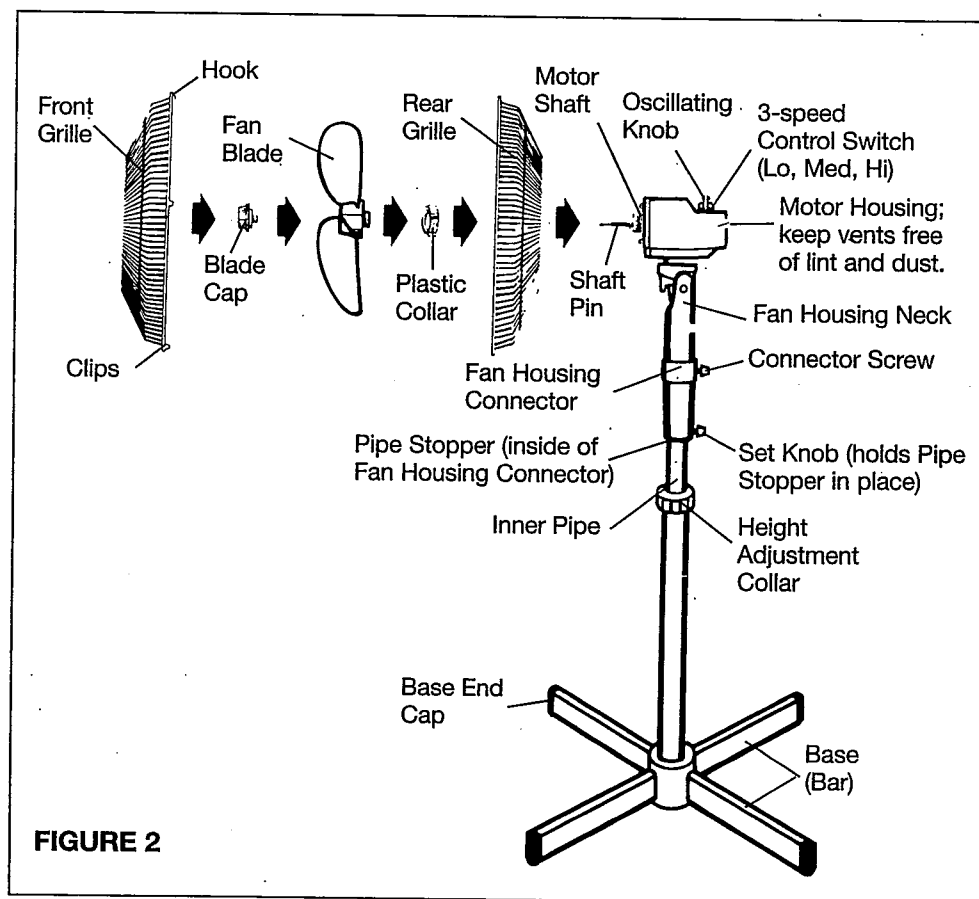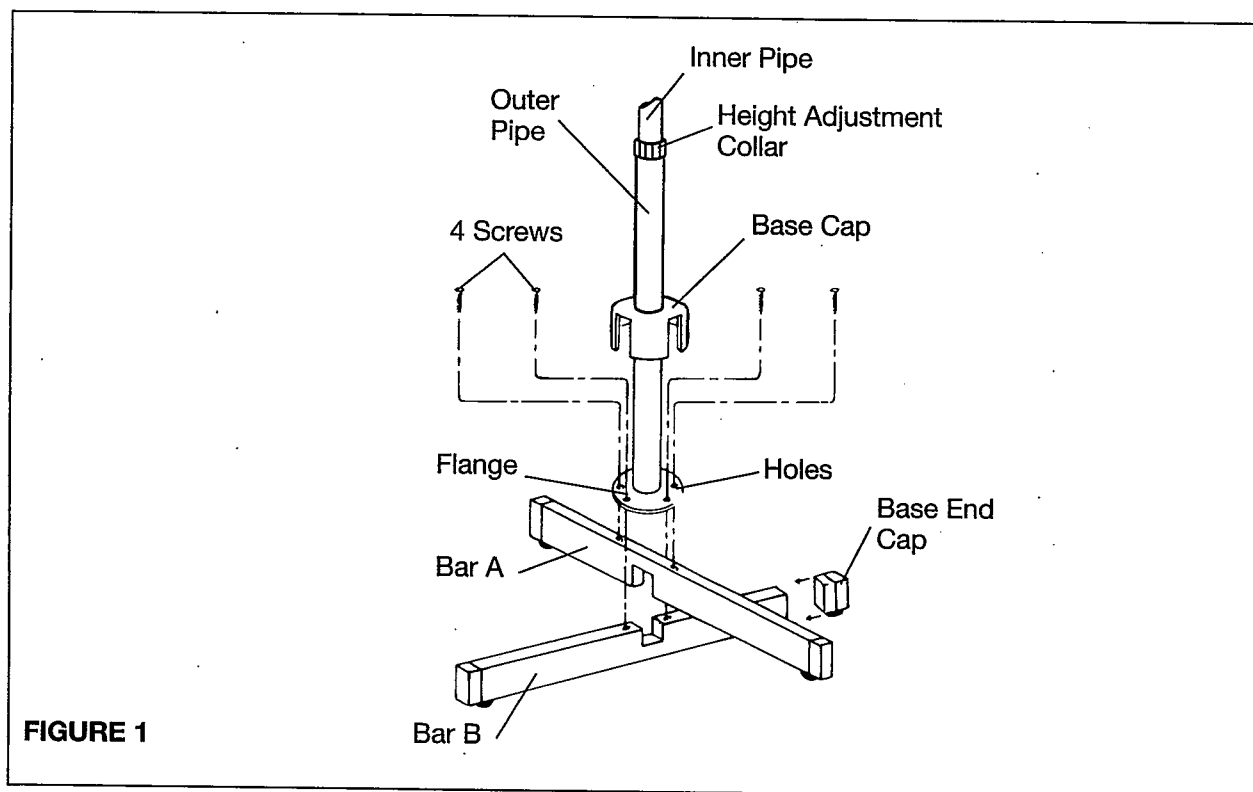

This appliance is for household use and may be plugged into any 120V AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

NOTE:

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

IMPORTANT:

During the first few minutes of initial use, you may notice a slight odor. This is normal and will quickly disappear.

ASSEMBLY INSTRUCTIONS

1. Push the Base End Caps onto both ends of Bar A and Bar B.
2. Loosen and remove the four screws from Bar A and Bar B. Cross the 2 bars as shown in Fig. 1 and align the four holes with those on the Flange. Secure the Flange to the Bars with the four screws. Slide the Base Cap down over the assembly.

CAUTION: NEVER REMOVE THE SET KNOB, WHICH HOLDS THE PIPE STOPPER IN PLACE (SEE FIG. 2).

3. If necessary, slightly loosen the Set Knob by turning it counterclockwise. Slide the Fan Housing Connector down over the Inner Pipe and tighten the Set Knob. Make sure the Set Knob is tightly secured.
4. Loosen and remove Connector Screw from the Fan Housing Neck. Align notch on the Fan Housing Neck with groove on the Fan Housing Connector and push down to connect the two parts. Secure by inserting the Connector Screw through the holes and tightening.
5. Unscrew the Plastic Collar from the shaft end of the Motor Housing by turning the Collar counterclockwise.
6. Mount the Rear Grille to the Motor Housing by matching the 3 holes on the Rear Grille to the 3 round pins on the front of the Motor Housing. Push in firmly until the 3 pins protrude through the 3 holes.
7. Secure the Rear Grille to the Motor Housing by inserting the Plastic Collar through the Shaft Pin and turning clockwise to tighten.
8. Insert the Blade onto the Motor Shaft, matching the slot on the back of the Blade with the Shaft Pin (Fig. 2). Secure Blade with Blade Cap, turning counterclockwise to tighten.
9. Test Blade operation by rotating it with your hand. There should be no friction with the Plastic Collar. If Blade does not rotate freely, repeat steps 4 through 7.
10. Mount the Front Grille to the Rear Grille by positioning the hook on the Front Grille over the top of the Rear Grille. Secure the two Grilles with the Clips attached to the Front Grille (Fig. 2).

OPERATING INSTRUCTIONS

1. Place the fan on a safe, flat surface where it cannot fall or be pulled by the cord.
2. To adjust height, loosen the Height Adjustment Collar, adjust fan to the desired height and retighten.
3. Control the direction of the airflow by firmly holding the Fan Housing Neck in one hand and by pushing the Fan Grille back to tilt up or by pushing it forward to tilt down.
4. To make the fan oscillate, push down on the Oscillating Knob located on the top of the Motor Housing. To stop the fan from oscillating, pull up on the Oscillating Knob.
5. Plug into an electrical outlet.
6. Turn the control switch to the desired speed.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance and contains no user serviceable parts. Do not try to fix it yourself. Refer it to qualified service personnel if servicing is needed.

Your fan is permanently lubricated and will not require additional lubrication for the life of the fan.

TO CLEAN: Before cleaning, turn fan off and unplug from electrical outlet. Wipe off excess dust with a lint-free cloth. To ensure adequate air circulation to the motor, keep vents located at the rear of the motor housing free from dust accumulation. A vacuum cleaner hose can be used to clean these vents. Do not submerge your fan in water or any other liquid. Disassemble grilles and blade (Fig. 2). Grilles and blade may be cleaned with mild soap and water. Use a soft, slightly damp cloth to wipe the remaining fan parts. Do not allow water or any other liquid to get into the motor housing or base. Reassemble fan after grilles and blade have dried completely. Do not plug fan into electrical outlet until it has been fully reassembled.

TO STORE: Make sure to disassemble and clean the fan before storing. Retain the original packaging for the purpose of storing your fan. Always store fan in a dry place. Never store it while it is still plugged in. **Never wrap the cord tightly around the fan,** and do not put any stress on the cord where it enters the fan, as it could cause the cord to fray and break.

ONE-YEAR LIMITED WARRANTY

This White-Westinghouse product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied, and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model (at the store's option) when the product is returned to Kmart. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Important Notice

If any parts are missing or defective, return this product to the place of purchase, or contact our Consumer Service Department for assistance.

Consumer Service

This White-Westinghouse product is distributed by:

Salton/MAXIM Housewares, Inc.
550 Business Center Drive
Mount Prospect, IL 60056
E-mail: Salton550@aol.com

Any questions or comments can be directed to Salton/MAXIM's address, or call the Consumer Service Department:

1-900-884-8818
Monday-Friday
9 a.m. - 5 p.m. CST

You will be charged 95 cents per minute, with a maximum charge of \$3.80 for this call.

White-Westinghouse trademark used under license.
©1996 White Consolidated Industries, Inc.

Made in China for
Kmart Corporation
Troy, Michigan 48084

Printed in Hong Kong