

ST+ARCK®

USE AND CARE MANUAL

MEN'S BEARD, GOATEE AND
SIDE BURN TRIMMER

Model PS602

IMPORTANT SAFEGUARDS

Read all instructions before using.

When using electrical appliances, basic safety precautions should always be followed, including the following:

DANGER

To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Disconnect immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not drop into water or other liquids.
4. Always unplug this appliance from the electrical outlet after charging.
5. Unplug this appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended when plugged in, except when charging
2. Close supervision is necessary when this appliance is used by, on or near children or invalids.
3. Do not use attachments not recommended by manufacturer.
4. Never operate this appliance if it has a damaged plug, if it is not working properly, been dropped or damaged, or dropped into water.
5. Do not use this appliance with damaged or broken Foil or Cutter Head, as facial injury may occur.
6. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
7. Never drop or insert any object into any opening.
8. Do not remove or replace the head assembly while Shaver is running as it may cause damage to the unit's Foil or Cutters. To avoid possible damage to the Cutters, it is not recommended to remove the Cutter Assembly except for replacement. If, however, the Cutter Assembly pops off during the cleaning process, it may be easily remounted.
9. Always store your Shaver in a moisture-free area.
10. Keep the cord away from heated surfaces.

 
SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

Polarized Plug


This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

MEN'S BEARD, GOATEE AND SIDE BURN TRIMMER



PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

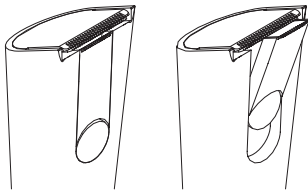

Miniature Trimmer

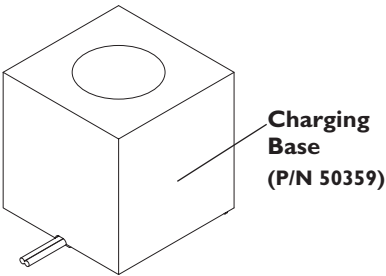 



Charging Base
(P/N 50359)

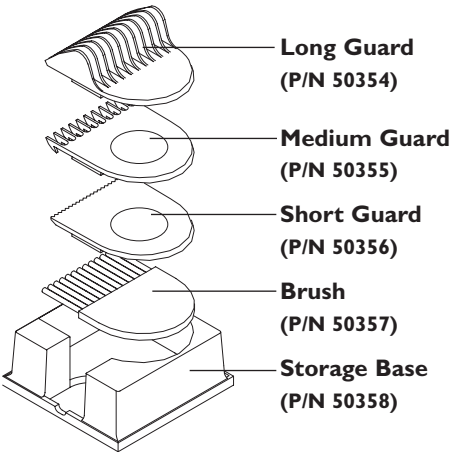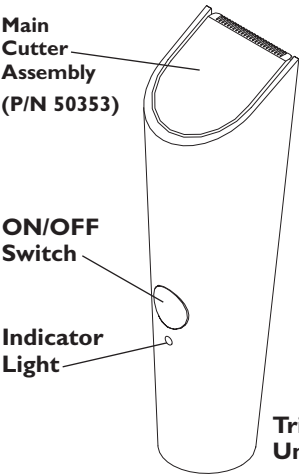  

HOW TO USE YOUR BEARD TRIMMER

Initial Charging

  1. Make sure your Trimmer is turned OFF.
2. Place your Trimmer into the Charging Base.
3. Put the plug into 120V electrical outlet.
4. The Indicator Light will illuminate when charging. Allow 14-16 hours to fully charge the battery.
5. For optimal battery life we recommend that twice a year you unplug the Charger Base and use the Beard Trimmer until the battery has been completely drained. Then simply follow the initial charging procedure. Following this procedure more frequently will further extend the life of your battery.

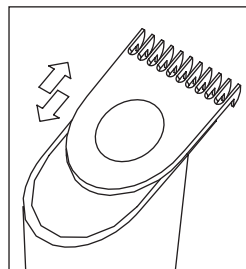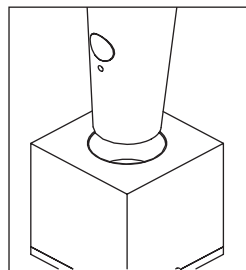

Changing Accessories

1. Be sure your Trimmer is turned OFF.
2. Gently slide out the Accessory from the Trimmer.
3. Gently slide the Accessory back into position on the Trimmer.

Trimming Beards

1. Before you trim, comb your beard in the direction that it grows.
2. Determine how much beard you want to cut and select the Accessory accordingly.
3. Press the ON/OFF Switch to turn the Beard Trimmer ON. The Indicator Light will illuminate. Begin trimming.
4. When you are finished trimming, turn the Beard Trimmer OFF.

Trimming Mustaches and Sideburns

1. Slide Miniature Trimmer up.
2. Hold Trimmer perpendicular to the hair.
3. Trim any stray hair.

CAUTION: The main Cutter is still operating.

RECHARGEABLE BATTERY REMOVAL AND RECYCLING INSTRUCTIONS FOR THE MEN'S BEARD, GOATEE AND SIDE BURN TRIMMER



 
This product's handle contains a nickel cadmium rechargeable battery. Battery must be recycled or disposed of properly.

CAUTION: Batteries cannot be replaced and opening the Handle will destroy the product and invalidate the warranty.


When your Rechargeable Trimmer battery reaches the end of its useful life, the Ni-Cd batteries must be removed from the Trimmer and recycled or disposed of properly in accordance with your local and state requirements.

Procedure

1. Remove Trimmer from Charging Base.
2. Use a small Phillips head screwdriver to remove the screws from the Cutting Blades.
3. Use a small Phillips head screwdriver to remove the screws from the Cutter Assembly. Remove the Cutter Assembly and the Motor (you may have to cut the wire from the Motor.) Pull out the Side Trimmers.

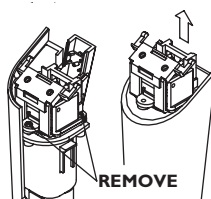


 4. Pull or gently pry the Push-Button and spring.

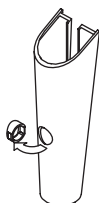


RECHARGEABLE BATTERY REMOVAL (Con't.)

 5. Pull out the Inner Housing.

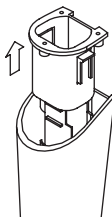

 6. Cut the wire from the batteries.
Pull out the batteries from the
Inner Housing.

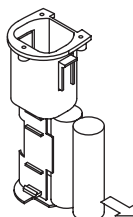

As a service to you and because we care about the environment, we will recycle your Men's Beard Trimmer for you. For more information about this program call 1-800-934-7455.

DO NOT put your Men's Beard Trimmer or battery in the trash. Use the collection system provided in your community.

Help take care of our environment. Recycling helps us to conserve our natural resources and protect our environment. Batteries need to be recycled because some of the materials used to manufacture batteries are considered hazardous. The nickel-cadmium battery, although considered hazardous, poses no safety or health problems when used and disposed of properly. Recycling Ni-Cd rechargeable batteries addresses the potential risks posed by landfill disposal or incineration of these batteries.

USER MAINTENANCE INSTRUCTIONS

To Clean

1. Remove Trimmer from Charging Base. Make sure Trimmer is OFF.
2. Slide out the Accessory from the Trimmer.
3. Remove the Cutter using a small Phillips head screwdriver.
4. Use a small brush to clean thoroughly. Blow out hair clippings.
5. Replace the Cutter and the Accessory.

LIMITED ONE YEAR WARRANTY

Warranty: This product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1 (800) 934-7455 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number PS602 when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (800) 934-7455.

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$6.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

ATTN: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 7366
Columbia, MO 65205-7366
1 (800) 934-7455
E-mail: Salton@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall Salton be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products: visit our website: www.salton-maxim.com

©2002 Salton, Inc. All rights reserved.

Made in China

P/N 60993

3/02

