 


Relaxor®

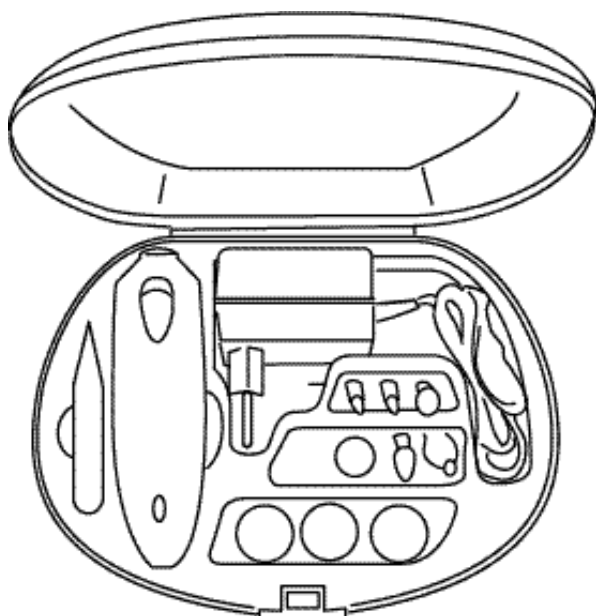

Nail Care

OWNER'S MANUAL &
OPERATING INSTRUCTIONS

Model MP8S

SPA THERAPY™

IMPORTANT SAFEGUARDS

Please read carefully before using your Nail Care Set

This Manicure/Pedicure Set is designed exclusively for domestic use. To maintain the unit in good operating condition, it is recommended that the appliance to be switched off for 15 minutes after each 20 minute uninterrupted usage.

 
Warning — To Reduce the Risk of Burns, Electrocution, Fire or Injury to Persons:

- 1. Before connecting the unit to the electrical outlet, make sure the voltage on the Adapter's rating plate corresponds to the local voltage.*
- 2. Keep the appliance out of children's reach. Close supervision is necessary when this appliance is used by, on, or near children, invalids or disabled persons.*
- 3. Use this appliance only for its intended use as described in this manual. Do not use any attachments not recommended by the manufacturer.*
- 4. Do not use this appliance when bathing or showering. Do not place or store the unit where it may fall or be pulled into a tub or sink. Do not submerge or drop into water or any other liquid.*
- 5. Do not reach for the appliance if it falls into water: UNPLUG IMMEDIATELY.*
- 6. Do not use under a blanket or a pillow to avoid overheating.*
- 7. Never operate this appliance if it has a damaged cord or plug. See Warranty instructions at the back of this booklet if this product is not working properly, or it has been dropped, damaged, or dropped into water.*
- 8. Keep the appliance and cord away from heated surface.*
- 9. Do not carry the appliance by its power cord or use the cord as a handle.*
- 10. Never use while sleepy or drowsy.*
- 11. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.*
- 12. Do not use if there are open wounds or a rash on fingers or toes.*
- 13. Consult a physician before using this appliance, if you have diabetes or vascular problems.*
- 14. Only use this appliance for its intended use as described in this manual.*

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

**Congratulations on owning the Relaxor®
Nail Care**


Treat yourself to a sensational manicure or pedicure at home. This Kit has everything you need for shaping, filing, smoothing and polishing nails. With regular use, nails may be healthier. Unit is packed in an attractive compact case for easy storage or portability.

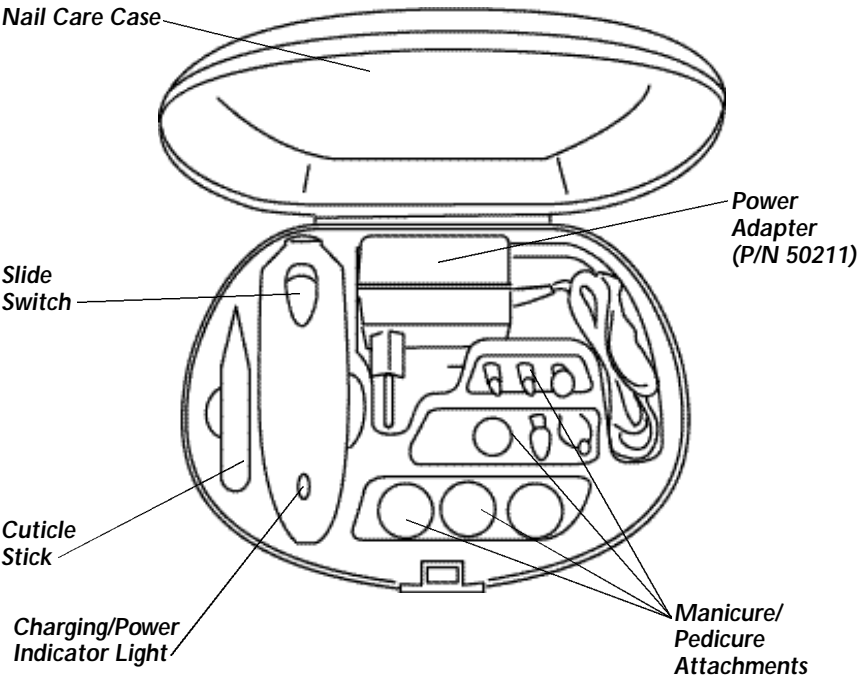

HOW TO USE YOUR MANICURE/PEDICURE SET

HOW TO RECHARGE

 1. **CORDLESS USE:** For the first use you must charge the unit for a least 24 hours to ensure that the batteries are fully charged.
2. The normal recharge time is 6 hours for a full charge.
3. To recharge, turn the Switch of 0 (OFF position). Connect unit to the Adapter cord and plug the Adapter into the electrical socket. The LED- charging indicator will light up to ensure proper charging. Unplug Adapter before use.

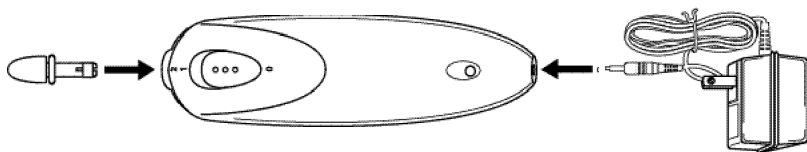


To connect the Attachments to the Main Body, directly push them in. To remove them, pull them off from the head of the unit. Make sure Main Body Slide Switch is in the OFF position before connecting and removing Attachments.


DIRECT-DRIVE BY ADAPTER

1. The unit can be used as direct-drive with the Adapter supplied with the unit when the batteries are not charged. **Use only the Adapter (P/N 50211) supplied with this unit.**
2. Connect the unit to the Adapter cord and plug the Adapter to the electrical socket for direct use.
3. A 30 second charge-up time is required with usage of the direct-drive feature. This enables the unit to run at full power.

 
SUGGESTED USE OF MANICURE/PEDICURE ATTACHMENTS

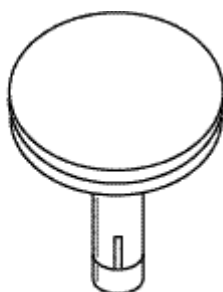

 
**Soft, Padded
Buffing Disk**
(P/N 50238)

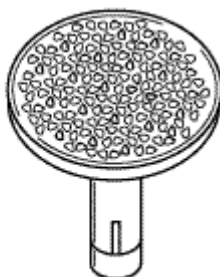

Large Skin Smoothing Disk
(P/N 50239)

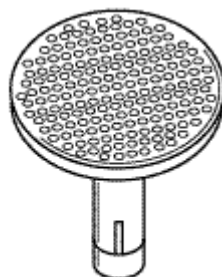 

Coarse Disk
(P/N 50240)

 


Cuticle Stick
(P/N 50243)



**Cuticle
Lifter**
(P/N 50237)



 **Large
Filing Cone**
(P/N 50212)

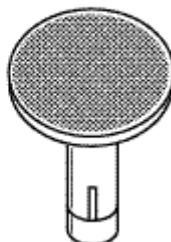

Small Shaping Disk
(P/N 50241)



Small Shaping Disk
(P/N 50242)



**Cleaning
Brush**
(P/N 50218)



**Thick Point
Filing Cone**
(P/N 50216)



**Thin Point
Filing Cone**
(P/N 50217)

MANICURE/PEDICURE ATTACHMENTS (Con't.)

(FOR BETTER PERFORMANCE OF THE PRODUCT, DO NOT BATHE YOUR FEET BEFORE TREATMENT, DO IT ONCE THE PEDICURE IS COMPLETED.)

Here are some suggestions on how to use the different Attachments in order to ensure a salon perfect manicure or pedicure.

1. **Large Skin Smoothing Disks:** To remove dead skin from hands and feet. For rough skin use the Rough Disk (jagged edges). For smoother skin use the Coarse Disk (round dots). Lightly apply the Disk to rough skin areas on the soles, at the heel and even on the hands. Move manicure tool in a back and forth motion, gently exfoliating the skin surface.
2. **Large Filing Cone:** To smooth calluses, corns and coarse skin. Gently apply the filing cone to the skin, moving in a back and forth motion while covering the rough skin areas.
3. **Thick Point Filing Cone:** To file and treat the surface of thick toenails.
4. **Thin Point Filing Cone:** To remove dead skin and treat ingrown nails. Suggested use is to move the instrument from the outside towards the inside of the nail bed.
5. **Small Shaping Disks:** To file and sculpt nails. For soft or fine nails, use the Fine Filing Disk (fine texture). For thicker, stronger nails use the Coarse Disk (round dots), and finish by using the Fine Filing Disk.
6. **Cuticle Lifter:** Gently apply the Cuticle Lifter, using caution to not allow the tip deep under the skin. Start on one side of the nail and work across to the other side of the nail, then back again.
7. **Cleaning Brush:** Can be used to clean nails at end of filing session. The Brush can also be used to clean away any residual cuticle, and prepare the nail for buffing.
8. **Soft Padded Buffing Disk:** Used to lightly polish the nails at the end of the manicure/pedicure treatment. The Disk can be used to smooth out the filed nails and may add shine.
9. **Cuticle Stick:** Can be used to push back cuticles manually. It can be carried in a purse for quick touch-ups while on the go.

Finish your treatment by soaking hands in warm, soapy water, and then apply your favorite moisturizer or lotion. This will help to keep hands hydrated and protect nails.

MAINTENANCE AND CLEANING

- 1. The Power Adapter provided with this unit has been especially designed for the RELAXOR® Nail Care. If damaged, it must be replaced with the exact same Adapter (P/N 50211) . See warranty instructions at the end of this booklet for instructions on how to contact RELAXOR® Consumer Service.*
- 2. Avoid dropping the unit to prevent internal parts from being damaged.*
- 3. Always unplug the Adapter before cleaning the unit.*
- 4. Never use liquids or abrasive cleaners to clean the housing or case of this unit. Just wipe off with a damp cloth.*
- 5. The Attachments can be cleaned from time to time with rubbing alcohol.*

LIMITED ONE YEAR WARRANTY

Warranty: This Relaxor® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1 (800) 233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number MP8S when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (800) 233-9054.

Out-of Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$6.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

ATTN: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 1637
Columbia, MO 65205-1637
1-800-233-9054
E-mail: Salton@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall Salton be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products: visit our website: www.salton-maxim.com

©2001 Salton, Inc. All rights reserved.

Made in China

P/N 60748

06/01