



Magic Chef®

S O R I G H T A T H O M E.™

2-Slice Cool-Touch Toaster

Cool-Touch Exterior

Extra-Wide Slots

Electronic
Toasting
Control

Slide-Out
Crumb
Tray

Cord
Storage



OWNER'S MANUAL MCCT920

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USE.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons, do not immerse cord, plug, or Toaster in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from wall outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. To disconnect, make sure bread lever is in the raised position, then remove plug from wall outlet.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock, or injury to persons.
9. Do not use outdoors.
10. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Oversized foods, metal foil packages, or utensils must not be inserted in Toaster as they may involve a risk of fire or electric shock.
13. A fire may occur if Toaster is covered or touches flammable material, including curtains, draperies, walls, and the like, when in operation.
14. Do not attempt to dislodge food when Toaster is plugged in.
15. Failure to clean crumb tray may result in a fire hazard.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a shock hazard.
17. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS
THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.

 
Longer extension cords are available and may be used if care is exercised in their use.

If an extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, (2) if the appliance is of the grounding type, the extension cord should be a grounding type 3-wire cord, and (3) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.


POLARIZED PLUG

This appliance has a **polarized plug** (one blade is wider than the other): To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do **not** attempt to modify the plug in any way.

GETTING TO KNOW YOUR MAGIC CHEF® MCCT920 2-SLICE COOL TOUCH TOASTER

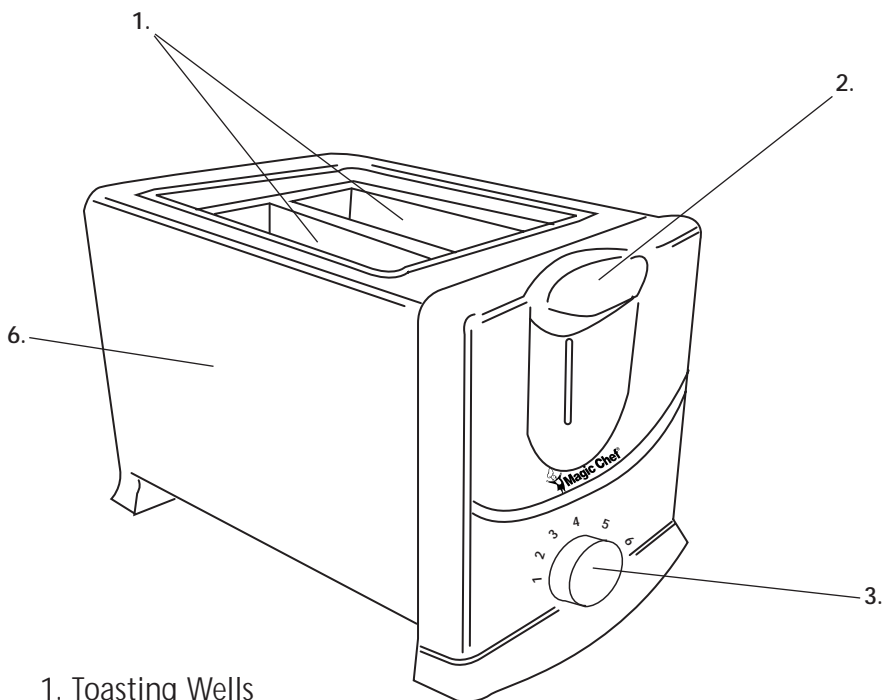

 - 1. Toasting Wells
- 2. Bread Lever
- 3. Color Selector Control
- 4. Crumb Tray
- 5. Power Supply Cord
- 6. Cool Touch Body

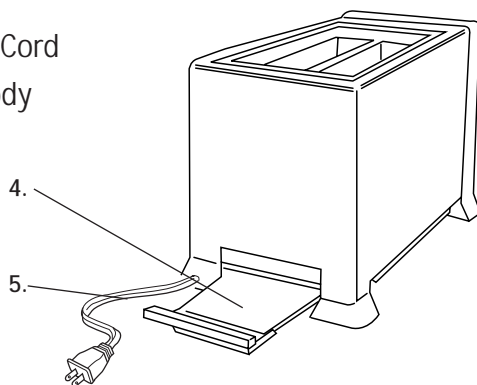

OPERATING INSTRUCTIONS

BEFORE FIRST USE

 
- Carefully unpack your Toaster and remove all packaging materials.
- To remove any dust that may have accumulated during packaging, simply wipe the Toaster exterior with a clean, damp cloth.
- Do not use abrasive cleansers.
- Do not put the Toaster, cord or plug in water.

USING YOUR TOASTER:

SELECTING TOAST COLOR

The Color Selector Knob is located at one end of your Toaster.

Simply turn the Knob to the desired toast color: LIGHT (#1) is for warming and very light toasting; DARK (#6) for dark toasting. The numbers are a guide to help you select your desired color (the higher the number, the darker the toast). However, there are an infinite number of settings you can choose.

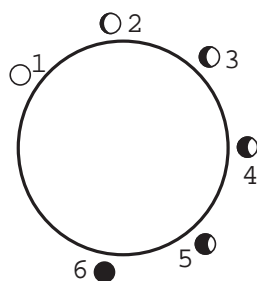

The first time you toast, it is best to position the Knob at the middle of the range (between #3 and #4); then adjust each subsequent toasting to your preference.

TOASTING BREAD

- Place your Toaster on a flat, level surface.
- Plug power cord into a 120 volt AC outlet.
- Adjust the Color Selector Knob to the desired lightness or darkness. Turn Knob to the LEFT for LIGHT toast (#1) or to the RIGHT for DARK toast (#6).
- Insert the desired number of bread, bagel or pastry slices into the Toasting Wells. Depress the Bread Lever. The bread carriage will automatically adjust to the thickness of food, centering it vertically for even browning.

TOASTING BREAD (Continued)

- Toast will automatically pop up when the selected color is reached.
- Your Cool Touch Toaster is never hot to the touch.
- Unplug cord from wall outlet when not in use.

TOASTING PASTRIES AND CONVENIENCE FOODS

Many varieties of fresh or frozen pastries and convenience foods may be toasted in your Toaster. Exact settings are difficult to recommend due to personal preference: experiment to suit your taste. For best results, follow the instructions printed on the package. If the package does not have instructions, position the Color Selector in the middle (between #3 and #4). Thick foods and those containing fillings will require a longer toasting time. Turn the Color Selector Knob to the right to increase toasting time.

NOTE: Some frozen pastries and convenience foods may require two heating cycles for proper results.

HINTS AND TIPS

1. Do not use torn or “curled up” slices of bread, these may become lodged and jam the eject mechanism and can cause a fire.
2. When toasting more than one slice of bread, use slices of similar size, thickness and freshness.
3. Bread which has been toasted but not buttered may be reheated. Use a lighter setting and watch it carefully.
4. Stale bread, thin bread or sweet bread products, such as tea cakes and fruit loaf, brown much more quickly than ordinary bread, so they should be toasted on the lighter settings.

IMPORTANT POINTS

- The Bread Lever controls two Toasting Wells. Either one or two slices of bread can be toasted in the Toasting Wells.
- Remove all protective wrappings from food before placing in Toasting Wells.
- Avoid toasting foods with frostings or icings that may run or that are made with open fillings.
- **For best results, clean Crumb Tray frequently.**
- To remove lodged food, unplug Toaster and allow to cool completely. Turn upside down and shake.
Never insert fork or other metal object into Toasting Wells.
- Different breads require different color settings. Bread Lever may be raised manually at any time to check toast color.
- **Do not block top openings. Do not place any object over the top openings.**
- **Do not toast buttered bread or buttered pita bread. Melted butter will cause fire.**
- Never immerse Toaster in water.
- This appliance is for **HOUSEHOLD USE ONLY!**
- There are no user-serviceable parts inside. Do not attempt to service this product yourself.

TO CLEAN

- Unplug Toaster from wall outlet. Allow Toaster to cool.
- Wipe outside with soft, damp cloth. Never use abrasive cleansers or steel wool to clean.

TO CLEAN CRUMB TRAY

The Crumb Tray is located at the back of the Toaster. Use tab to slide open the tray and brush out crumbs. Wipe surface with a damp cloth to remove stubborn spots or stains.

LIMITED WARRANTY

This Magic Chef product warranty extends to the original purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

Warranty Coverage: This product is warranted against defective materials and workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied, and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above ninety day warranty period, a product with a defect will be replaced with a comparable model when the product is returned to Wal-Mart with an original store receipt. The replacement product will be in warranty for the balance of the ninety day warranty period and an additional one-month period. No charge will be made for such replacement.

IMPORTANT NOTICE

If any parts are missing or defective, return this product to the place of purchase, or contact our Consumer Service Department for assistance:

Customer Service Department
708 South Missouri St.
Macon, MO 63552

Any questions or comments can be directed to the above address or call our toll free number:

1-800-233-9054

Monday - Friday 7:30 AM to 6:00 PM CST

Refer to Item #MCCT920

MAGIC CHEF, THE MAGIC CHEF LOGO and "SO RIGHT AT HOME" are trademarks of the Maytag Corporation and used under license to Wal-Mart Stores, Inc.

Made in China