

 
 
MARVIN THE MARTIAN

Snow Cone
Maker

USE & CARE
GUIDE




MODEL IS1LTM

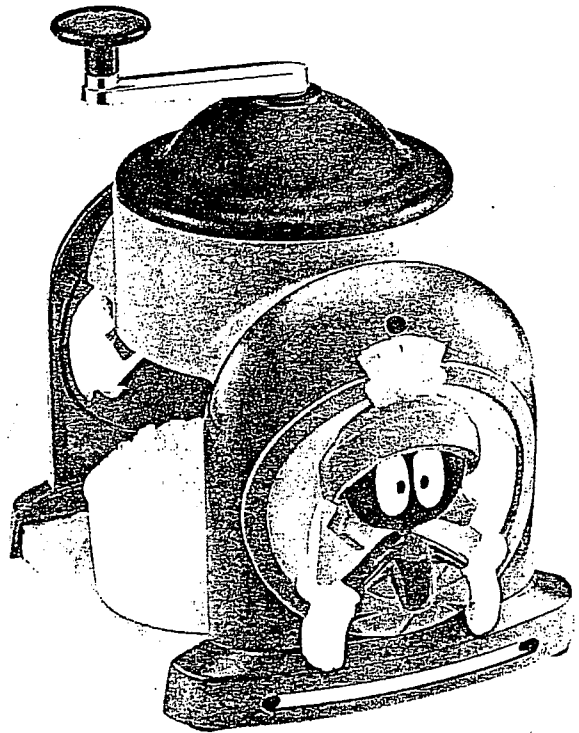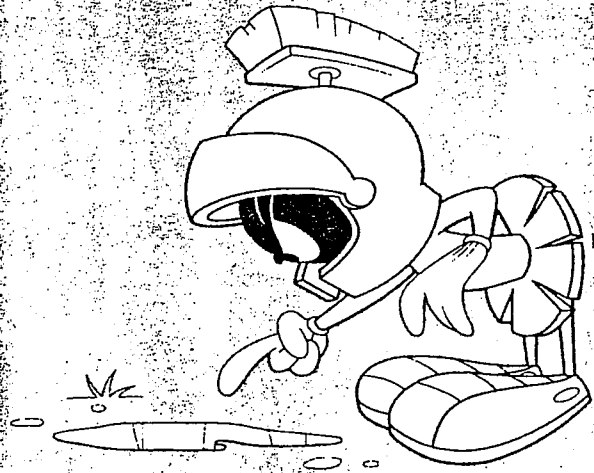

IMPORTANT SAFEGUARDS

1. Read all instructions.
2. Blades are sharp. Handle carefully.
3. Close supervision is necessary when any appliance is used by or near children.
4. Do not use fingers to move ice away from cutter blade in ice chamber. A cut-type injury may result.
5. **Avoid contacting moving parts. Never place fingers or other utensils into feed or discharge areas.**
6. The use of attachments not recommended by Salton/MAXIM Housewares, Inc. may cause injury.

 THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS

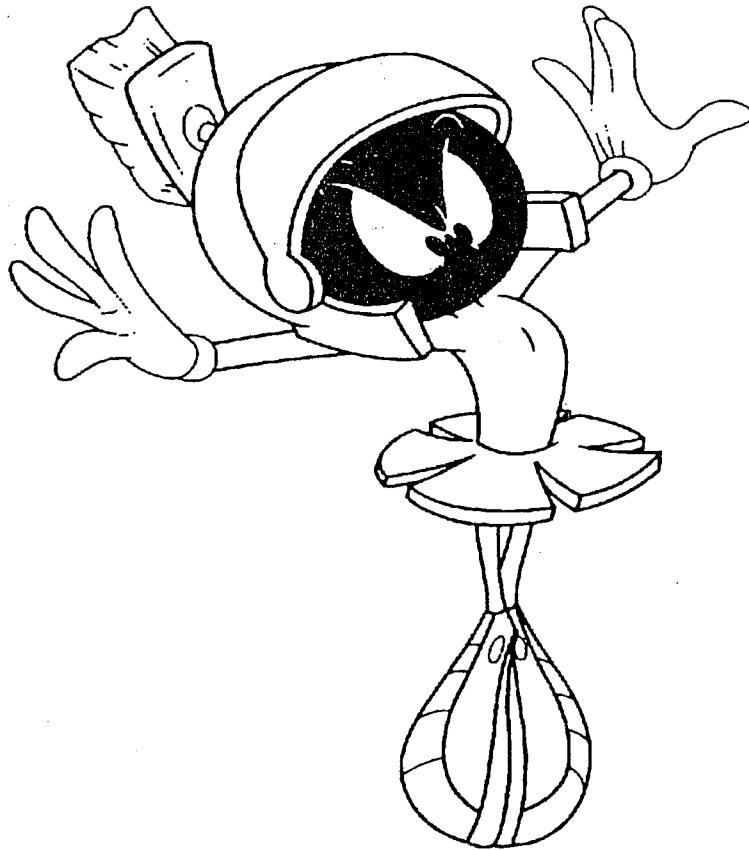

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS


 
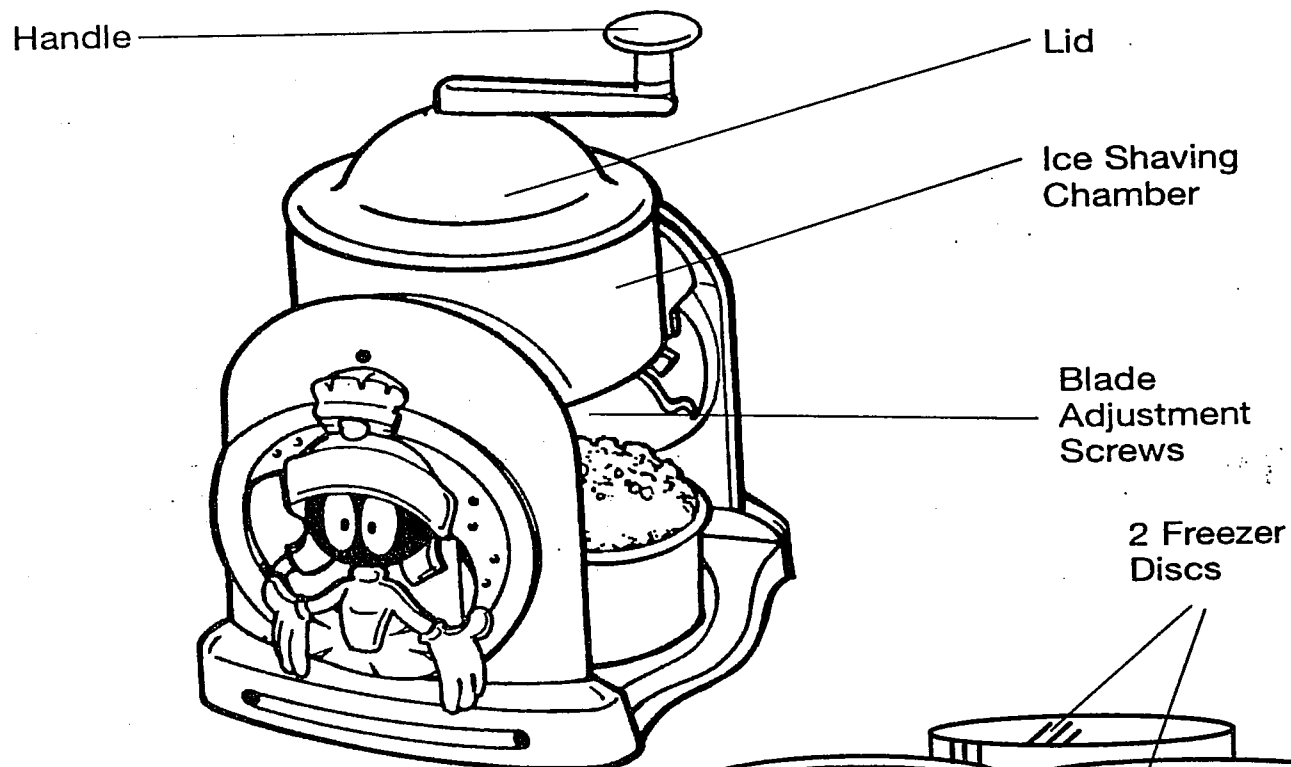 


FIGURE 1

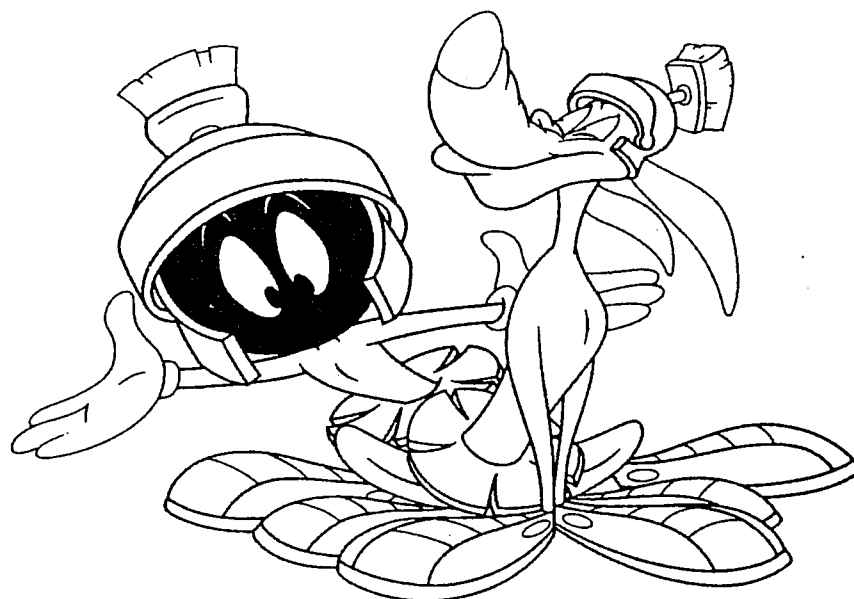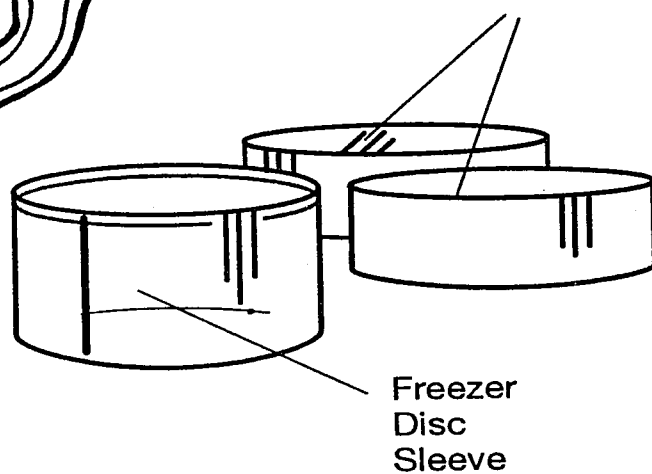 

INSTRUCTIONS FOR USE

CAUTION! When taking apart the unit, be aware that there is an exposed blade that can cause injury.

ALL CHILDREN MUST BE SUPERVISED BY AN ADULT WHEN USING THIS PRODUCT! THIS IS NOT A TOY!

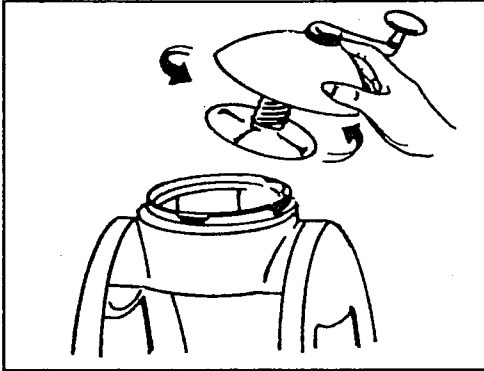 


FIGURE 2


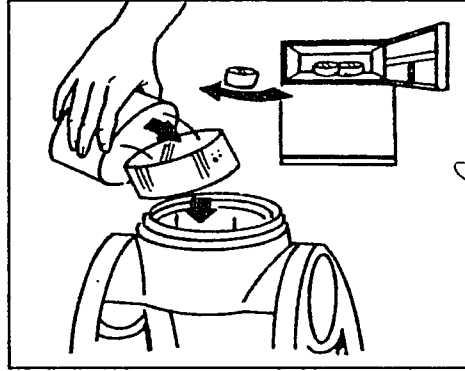 


FIGURE 3

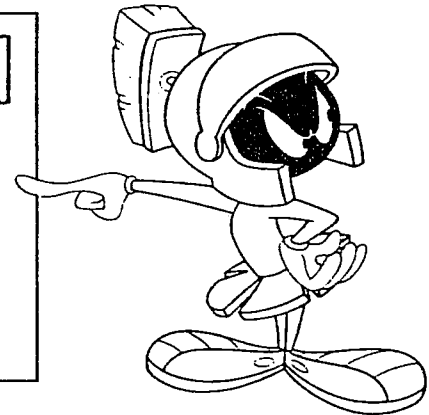 

1. Before using the Snow Cone Maker, fill freezer discs with water or other liquid. (See Serving Suggestions for ideas.) When liquid is frozen, you are ready to use the Snow Cone Maker.
2. To open the lid of the Snow Cone Maker, turn it counter-clockwise and pull up. (See Figure 2.)
3. Place the pre-made ice round down into the ice shaving chamber. (Figure 3)

Note: To remove the ice from the freezer disc with ease, run under warm tap water until it begins to loosen from the sides.

Note: If you have not pre-made the ice round, you may use regular ice cubes.

4. Replace the lid by turning clockwise until it is secure.
5. Place the empty freezer disc or small bowl or container underneath the unit to catch the shaved ice.
6. While pressing down gently, turn the handle clockwise to begin the slicing process. (Fig. 4)
7. You may adjust the position of the blade to slice small or large shavings of ice. The more the blade is exposed, the larger the ice shavings will be. The less exposed the blade is, the smaller the ice shavings will be.

*To adjust the blade, simply loosen or tighten the screws located on the bottom of the unit. You will need a Phillips head screw driver. (See Figure 5.) **USE CARE! BLADE IS SHARP!**

**If you are using ice cubes, the blade must be set at a more exposed position.

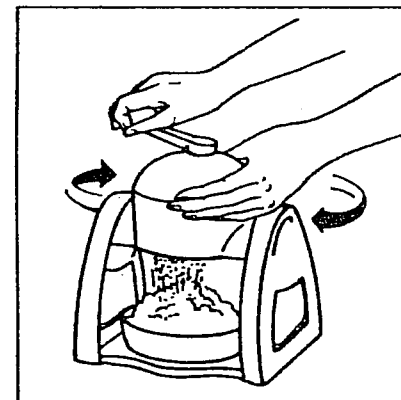 


FIGURE 4

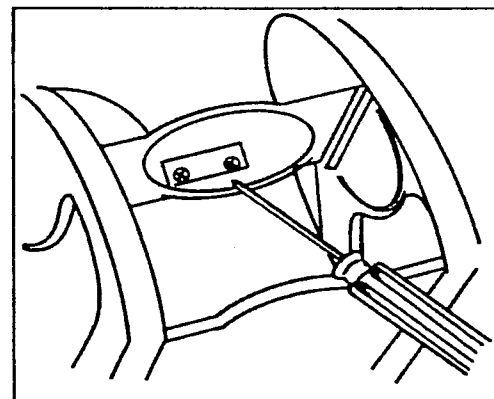 


FIGURE 5



SERVING SUGGESTIONS

 
You can make a variety of flavored ices.
Follow these simple instructions:

1. You can freeze water, then shave the ice and add flavored syrup. Flavored syrups can be found in coffee specialty shops, gourmet food stores, and some grocery stores.

When adding the syrup, add one teaspoon at a time until desired taste.

2. Fruit juices, lemonade or other flavored drinks can be frozen in the freezer discs and placed directly in the Snow Cone Maker **for instant flavored ice**. Once it is frozen, then follow the steps explained previously.
3. You may use soft drinks as well. When pouring into the freezer discs, only fill them 1/2 - 3/4 of the way full. This will ensure that the soft drinks will not overflow when frozen. When carbonated beverages freeze they tend to expand.
4. You can use shaved ice to add to frappes or other frozen drinks.
5. Shaved ice can also be used to keep salads, seafood or other food products chilled while on a buffet table. Depending upon the size of the display, place the ice in a larger container than the food to be displayed. Place the tray or bowl of food down into the ice to keep chilled for up to 1 hour.

To serve, put shaved ice in small bowls or in paper Snow Cone cups. Snow Cone cups can be found in most specialty or party shops.

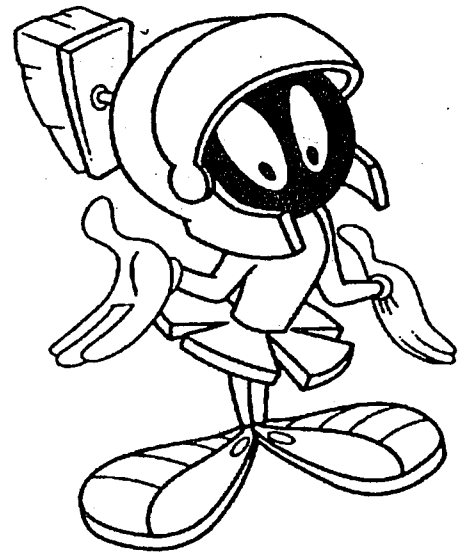

CLEANING INSTRUCTIONS

 
When you have finished using the Snow Cone Maker simply run all parts under warm water. The excess ice and flavorings should just wash away.

If extra cleaning is necessary wash with warm soapy water. **DO NOT USE HARSH ABRASIVES OR CLEANERS.**

Dry all parts thoroughly before storing.

DUE THE EXPOSED BLADE, STORE THIS PRODUCT OUT OF CHILDREN'S REACH.

THIS IS NOT A TOY!!

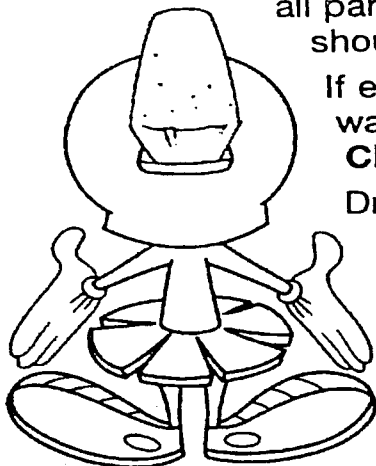

ONE-YEAR LIMITED WARRANTY

This Salton/MAXIM product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares, Inc., or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton/MAXIM Housewares, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at Salton/MAXIM's option) when the product is returned to the Salton/MAXIM facility. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair

Should the appliance malfunction, you should first call toll-free 1-800-233-9054 **between the hours of 9:00 am and 5:00 pm Central Standard Time** and ask for CUSTOMER SERVICE stating that you are a consumer with a problem.

In-Warranty Service (USA) for an appliance covered under the warranty period, no charge is made for service or postage. Call for pre-paid return mailing label. (U.S. Customers Only)

In-Warranty Service (Canada) for an appliance covered under the warranty period, no charge is made for service or postage. Please return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the address listed below. Customs duty/brokerage fee, if any, must be paid by the consumer.

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$6.00 (U.S.) for return shipping and handling.

Salton/MAXIM Housewares, Inc. cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem; your full return address and daytime phone number; a note describing the problem you experienced; a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Return the appliance to:

ATTN: Repair Department, Salton/Maxim Housewares, Inc.
550 Business Center Drive, Mt. Prospect, Illinois 60056

For more information on Salton/MAXIM products:

visit our website: <http://www.salton-maxim.com>,
or you can email us at: salton@saltonusa.com

LOONEY TUNES, characters, names and all related indicia are trademarks of Warner Bros. © 1998.

Printed in Taiwan

© 1998 Salton/MAXIM Housewares, Inc.

