 
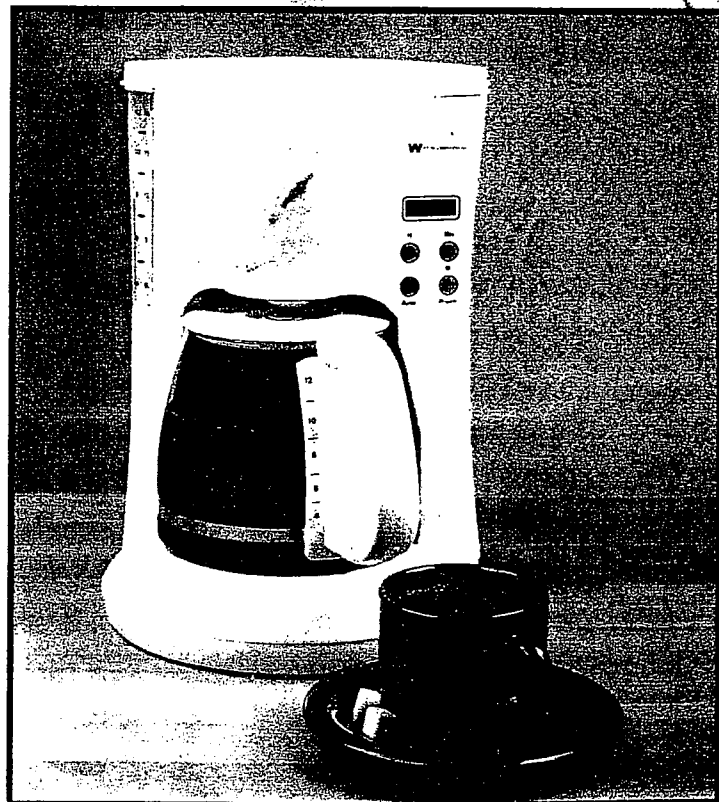 


White-Westinghouse™

# **12 Cup Digital Drip Coffee Maker**

OWNER'S MANUAL

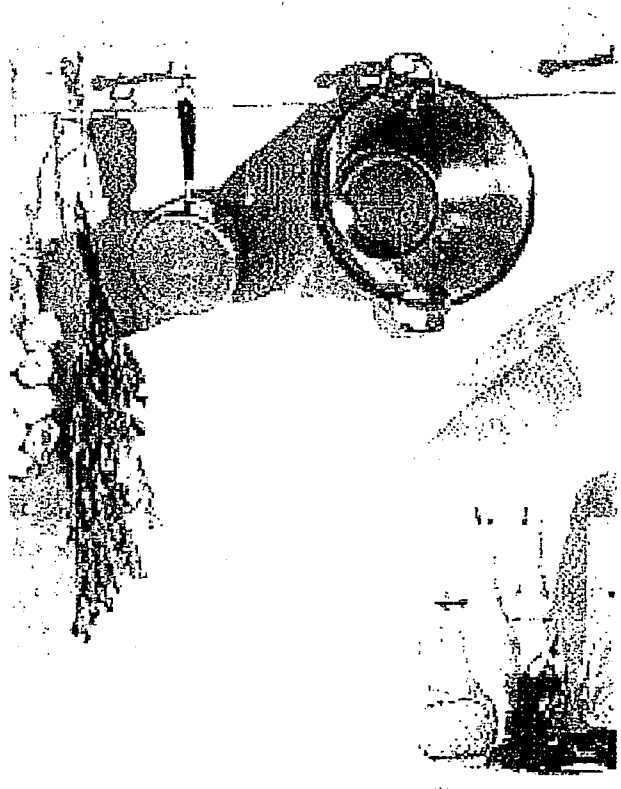

MODEL WWCM6502

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of electric shock, and/or injury to persons, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electrical shock, and injury to persons, do not immerse cord, plug, or Coffee Maker in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when Coffee Maker is not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock, or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, press the **Power** Button, then remove plug from wall outlet.
12. Do not use appliance for other than intended household use.
13. Carafe Use and Care:  
Breakage may occur if the following instructions are not followed:
  - a. This Carafe is designed for use with your Coffee Maker and therefore must never be used on a rangetop or in any oven, including a microwave.
  - b. Do not set a hot Carafe on a wet or cold surface.
  - c. Do not use a cracked Carafe or a Carafe having a loose or weakened handle.
  - d. Do not clean the Carafe with cleansers, steel wool pads, or other abrasive materials.
  - e. Discard Carafe immediately if it is ever boiled dry.
  - f. Avoid sharp blows, scratches or rough handling.
14. **WARNING:** To reduce the risk of fire or electric shock, do not remove the bottom Cover. No user serviceable parts inside. Repair should be performed by authorized personnel only.

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

## **SHORT CORD INSTRUCTIONS**

A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.

Longer extension cords are available and may be used if care is exercised in their use.



If an extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

## **POLARIZED PLUG**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

# OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

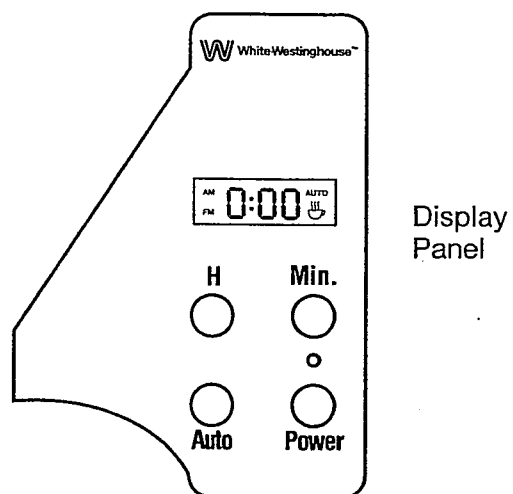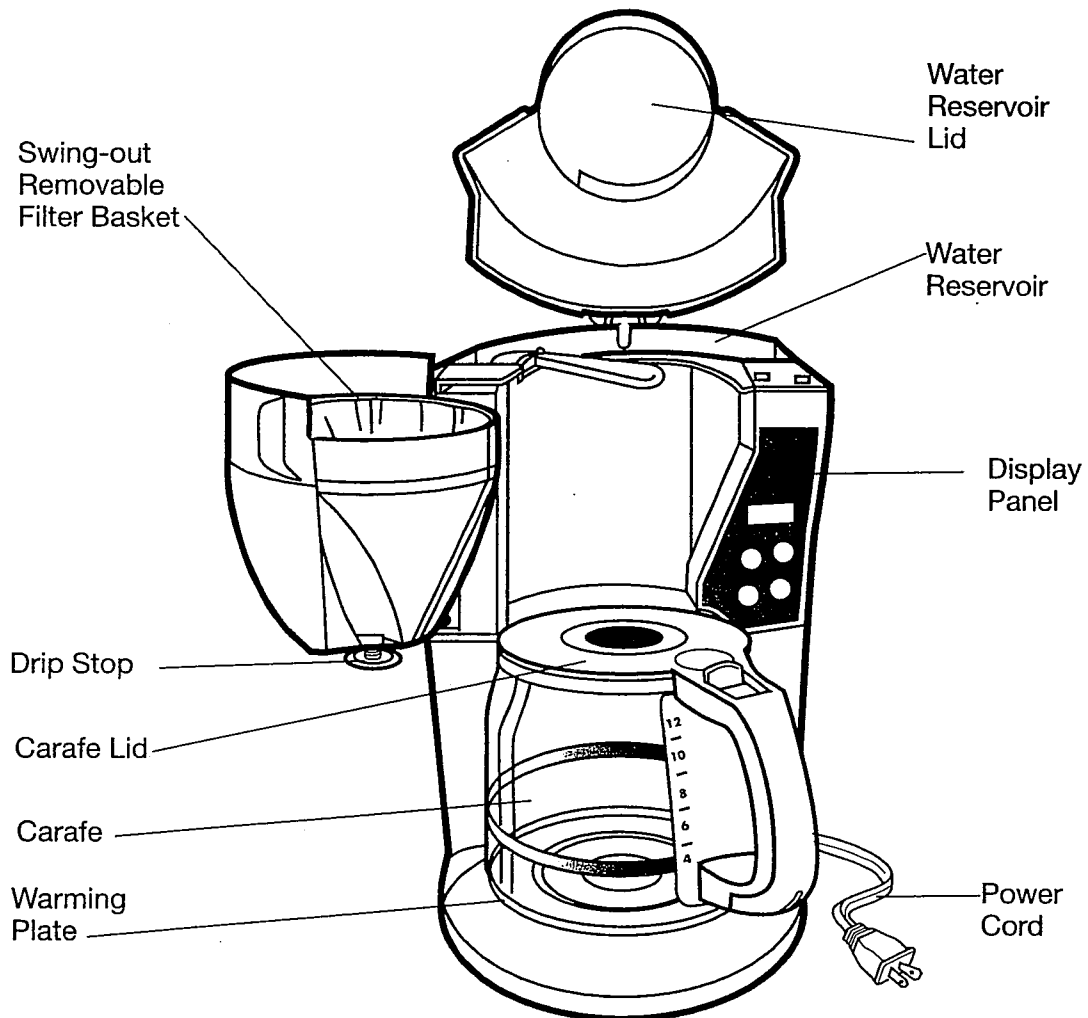

## **BEFORE BREWING COFFEE FOR THE FIRST TIME**

1. Carefully unpack Coffee Maker. Before preparing coffee in your new Coffee Maker, thoroughly clean the Carafe, Carafe Lid, Removable Filter Basket, and Water Reservoir in hot, sudsy water. Rinse and dry.

**NOTE:** Press upwards on the Removable Filter Basket until the bottom Pin falls loose. Swing the Basket outwards for easy removal. To replace, simply place the top Pin into the top hole and adjust until the bottom Pin falls easily into place.

2. Wipe all outside surfaces with a slightly damp, soft cloth. Never immerse the main unit in water.
3. Set the Coffee Maker on a dry, clean and flat countertop surface, where it can be easily plugged into an electrical outlet.
4. Brew 12 cups of fresh water only. Follow the instructions under BREWING COFFEE Section but do not add coffee grounds to the paper filter.
5. When all the water has brewed into the Carafe, press the **Power** Button to turn the Coffee Maker off.
6. Wait 10 minutes, discard the water from the Carafe, then repeat steps 2 and 3.
7. Wash and dry the Filter Basket, Carafe and Carafe Lid.

## **COFFEE FILTERS**

Cone-shaped paper filters are available locally at grocery stores and where coffee makers are sold. Standard #4 filters should be used in this model. Permanent gold filters may also be purchased, eliminating the need for disposable paper filters.

The use of basket-style paper filters is not recommended, since they do not conform to the shape of the Filter Basket and may cause coffee to back up and spill over during brewing.

## **COFFEE YIELD**

12-cup Coffee Maker: 12 5-oz. cups

**NOTE:** A 5-oz. cup is the American standard and is used by most coffee maker manufacturers. To fill up your favorite mug, fill the Coffee Maker Water Reservoir with enough water for 2 cups (10 ounces).

## HINTS FOR GREAT TASTING COFFEE

- A clean Coffee Maker is essential for making great tasting coffee. Regular cleaning is highly recommended.
- Always use fresh, cold water in your Coffee Maker.
- Finer grinds, such as drip coffee, promote fuller extraction and provide rich, full-bodied coffee. Regular grind will require slightly more coffee per cup to provide the strength of a finer grind.
- Store coffee in a cool, dry place. Once coffee has been opened, keep it tightly sealed in the refrigerator to maintain freshness.
- For optimum coffee flavor, buy whole beans and grind them finely just before brewing.
- Small oil droplets on the surface of brewed, black coffee is due to the extraction of oil from the coffee grounds. Oiliness may occur more frequently if heavily roasted coffees are used. Cleaning your Coffee Maker regularly will help prevent oil build-up.



## HOW TO SET YOUR CLOCK/COFFEE MAKER

**NOTE: YOUR COFFEE MAKER WILL NOT BREW COFFEE UNTIL THE CLOCK IS SET AND THE SYMBOL OF THE COFFEE CUP APPEARS.**

This is a safety feature to prevent the Coffee Maker from automatically turning on as a result of power interruption.


1. Set the Coffee Maker on a dry, clean and flat countertop surface, where it can be easily plugged into an electrical outlet.
2. Plug the Coffee Maker into the wall outlet. The numbers on the LCD Clock will begin to flash.
3. Set the Timer to the correct time of the day. Press the **H** (hours) Button until the current hour is displayed. Press the **Min.** Button until the correct minutes are displayed. The Clock is now set.

**NOTE:** The LCD in the upper left corner of the Display indicates either A.M. or P.M.

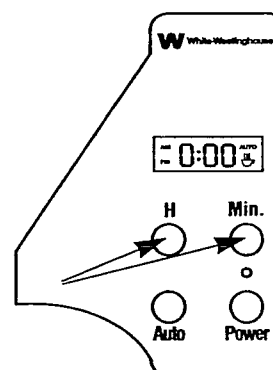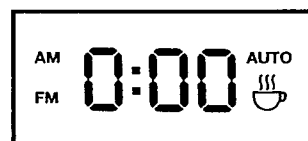

## HOW TO USE THE AUTO FEATURE

1. Press the **Auto** Button and "AUTO" will appear in the upper right corner of the LCD Display.
2. Hold down the **Auto** and **H** Buttons simultaneously until the correct hour is set. Press the **Auto** Button and the **Min.** Button simultaneously until the correct start-up time is displayed.
3. At the programmed time, the Coffee Maker will turn on.
4. The Timer will automatically shut the Coffee Maker off 2 hours after the programmed time.
5. If you would like your Coffee Maker to begin brewing at the same time the next day, simply fill the Water Reservoir and push the **Auto** Button again.

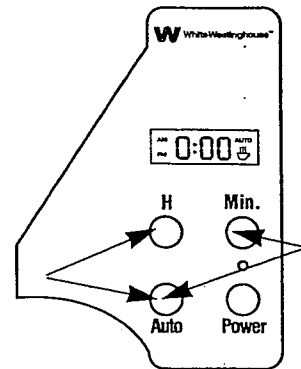

## 1 - 3 CUP BREWING FUNCTION

If you only need to brew a small amount of coffee, this Coffee Maker is equipped with a special 1-3 Cup Brewing Function. When you are ready to begin brewing, press the **Power** Button twice, until the coffee cup icon at the lower right of the Display begins to flash. This indicates that the 1-3 Cup Brewing Function is activated. When using the Auto Feature, press the **Auto** Button twice to activate the 1-3 Cup Brewing Function. "AUTO" will begin to flash in the upper right corner of the LCD Display, indicating that the Coffee Maker will only brew 1-3 cups of coffee at the programmed time.

## BREWING COFFEE

1. Make sure the clock is set.  
(See instructions on the previous page.)
  2. To brew coffee, swing out the Filter Basket and place a #4 paper coffee filter in it.
  3. Put coffee grounds in the filter, using one level tablespoon of drip grind coffee for each cup of brewed coffee. For stronger or milder coffee, adjust the amount of coffee to suit your taste.  
(See Figure A)
  4. Return the Filter Basket to its closed position. Be sure the Filter Basket is pushed securely into the unit.
  5. Remove the Carafe Lid. Fill the Carafe with cold water to the level for the desired number of cups. Open the Water Reservoir Lid, and pour the water from the Carafe into the Water Reservoir. Close the Water Reservoir Lid.
- NOTE:** The amount of brewed coffee will always be less than the amount of water placed into the Coffee Maker, as about 10% is absorbed by the coffee grounds and the Filter.
6. Place the Carafe on the Warming Plate, making sure the Carafe Lid is on the Carafe.
  7. Press the **Power** Button once to begin brewing.
- NOTE:** If you are planning to brew 1 - 3 cups of coffee, press the **Power** Button twice, until the coffee cup icon at the lower right of the Display begins to flash. This indicates that the 1-3 Cup Brewing Function is activated.
8. If you wish to serve a cup of coffee before the Brew Cycle is completed, the Drip Stop feature allows you to simply remove the Carafe from the Warming Plate. The dripping will automatically cease. Return Carafe to its position on the Warming Plate within 45 seconds and dripping will resume.
  9. Upon completion of the Brew Cycle, wait about one minute until the dripping has stopped. The Carafe Lid should remain in place to facilitate safe serving and to help keep coffee at proper serving temperature.
  10. To keep coffee hot, return Carafe to the Warming Plate after serving. The Warming Plate will automatically cycle to maintain ideal serving temperatures as long as the Coffee Maker is on.

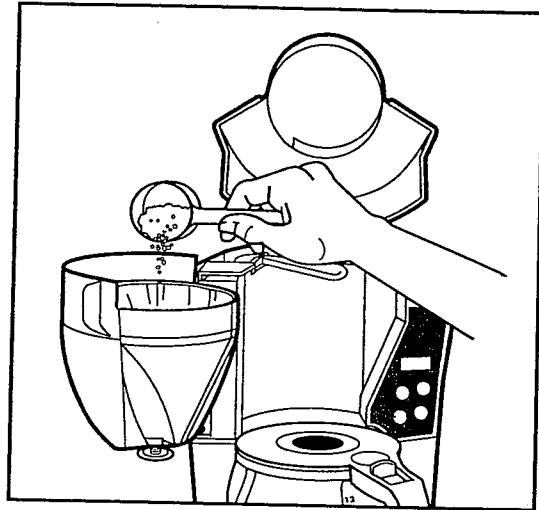


Figure A



## **BREWING COFFEE (Continued)**

11. Press the **Power** Button to turn the Coffee Maker off when Carafe is empty or when unit is not in use.
12. To brew another Carafe of coffee, turn the unit off and wait 10 minutes to allow the Heating Element to cool.

**IMPORTANT:** If the unit is not allowed to cool before immediate repeated use, water placed in the Water Reservoir may become overheated and a spray of steam could be released when opening, creating a risk of burns.

## **BREWING A SECOND POT OF COFFEE**

It is recommended that the Coffee Maker be turned off for at least 10 minutes between cycles, in order to allow the unit to cool properly. While the unit is off, dispose of the used coffee filter, and rinse the Carafe and Filter Basket in water. Place a fresh coffee filter in the Filter Basket. Add fresh coffee grounds and repeat the brewing procedure.

## **DRIP STOP FEATURE**

This Coffee Maker has an automatic Drip Stop feature. During the brewing cycle, the Carafe can be removed to pour a cup of coffee from the Carafe.

**IMPORTANT:** The Carafe must be replaced under the Filter Basket in 45 seconds to prevent overflowing.

## **CLEANING AFTER BREWING COFFEE**

**NOTE:** Do not place anything other than water or the cleaning solution specified in this book into the Water Reservoir.

1. To clean your Coffee Maker after brewing coffee, be sure the Coffee Maker is turned off and is cool. Discard the coffee filter.
2. Wipe Coffee Maker with soft, damp cloth and dry. Do not use abrasive soaps or scouring pads.
3. Hand wash Carafe and Lid in hot, sudsy water.

**DO NOT PLACE IN DISHWASHER.**

## **CARING FOR YOUR CARAFE**

A damaged Carafe may result in possible burns from hot liquid. To avoid breaking a Carafe:

1. Do not allow all liquid to evaporate from Carafe while on the Warming Plate. Do not heat Carafe when empty. If this happens, discard Carafe.
2. Discard Carafe if damaged in any manner. A chip or crack could result in breakage or contaminate liquid contents with glass particles.
3. Never use abrasive scouring pads or cleansers as they will scratch and weaken the glass.
4. Do not place the Carafe on or near a hot gas or electric burner, in a heated oven, or in a microwave oven.
5. Avoid rough handling and sharp blows.

## **MINERAL DEPOSITS AND DESCALING**

Mineral deposits left by water can clog your Coffee Maker. It is necessary to regularly descale your Coffee Maker to flush out these deposits.

Clean your Coffee Maker about every 1 - 3 months. Frequency of descaling will be affected by water hardness. If you live in a hard water area, you may have to descale the Coffee Maker more frequently. Excessive steaming or a prolonged brewing cycle are signs that descaling is needed.

During descaling, more steaming occurs than when brewing coffee.

## TO DESCALE YOUR COFFEE MAKER

1. Pour white vinegar up to the half Carafe level mark on the Carafe. Add cold water up to the top level.
2. Pour this cleaning solution into the Water Reservoir. Place the Carafe on the Warming Plate, making sure the Carafe Lid is on securely.
3. Swing out the Filter Basket and place a coffee filter into it. Put the Filter Basket back into place.
4. Make sure the clock has been set. Press the **Power** Button once to turn the Coffee Maker on.
5. Let half of the cleaning solution brew into the Carafe, then press the **Power** Button to turn the Coffee Maker off.
6. Let the Coffee Maker cool for 15 minutes to soften the mineral deposits.
7. Pour the liquid that brewed into the Carafe back into the Water Reservoir.
8. Turn the Coffee Maker on and let all the cleaning solution brew into the Carafe.
9. Turn the Coffee Maker off and discard the cleaning solution and soiled coffee filter.
10. Fill the Coffee Maker with fresh water, and follow the steps in the BEFORE BREWING COFFEE Section to flush out the remaining cleaning solution.
11. Handwash Carafe and Lid with hot, sudsy water.  
**DO NOT PLACE IN DISHWASHER.**

## USER MAINTENANCE INSTRUCTIONS

There are no user-serviceable parts inside. Do not attempt to service this product yourself.

**TO CLEAN:** NEVER IMMERSE UNIT IN WATER OR ANY OTHER LIQUID. Unplug appliance and allow it to cool. Use a soft, slightly damp cloth or sponge to wipe the surface. Never use abrasive cleaners or solvents, as they may scratch the surface.

**TO STORE:** Unplug appliance, allow it to cool, and store in its box or in a clean, dry place. Never store unit while it is hot or still plugged in. Never wrap cord around the unit or put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

## **ONE-YEAR LIMITED WARRANTY**

This White-Westinghouse product warranty extends to the original consumer purchaser of the product.

**Warranty Duration:** This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

**Warranty Coverage:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Warranty Disclaimers:** This warranty is in lieu of all warranties expressed or implied, and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model (at the store's option) when the product is returned to Kmart. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

### **Important Notice**

If any parts are missing or defective, return this product to the place of purchase.

### **Consumer Service**

This White-Westinghouse product is distributed by:

Salton, Inc.  
550 Business Center Drive  
Mount Prospect, IL 60056  
E-mail: [White-Westinghouse@saltonusa.com](mailto:White-Westinghouse@saltonusa.com)

Any questions or comments can be directed to Salton's address, or call the Consumer Service Department:

1-800-233-9054  
Monday-Friday  
8 a.m. - 5 p.m. CST

White-Westinghouse trademark used under license.  
©1999 White Consolidated Industries, Inc.

Made in China for  
Kmart Corporation  
Troy, Michigan 48084

Printed in China

P/N 60456