

A
LEADING
BRAND IN THE UK

Russell Hobbs®

CLASSIC SATIN



6 Slice Toaster Oven-Broiler

OWNER'S MANUAL
RHTOB6

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated Oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect, turn the Temperature Control to the lowest position, turn the Function Control OFF, turn the Timer Control to OFF; then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Use extreme caution when removing Bake/Broil Pan or disposing of hot grease.
15. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
16. Oversize foods or metal utensils must not be inserted in a Toaster Oven as they may create a fire or risk of electric shock.
17. A fire may occur if the Toaster Oven is covered or touching flammable material, including curtains, draperies, walls and the like, when in operation. Do not store any items on top of the appliance when in operation.

IMPORTANT SAFEGUARDS *(Continued)*

18. Extreme caution should be exercised when using containers constructed of materials other than metal or glass.
19. Do not store any materials, other than manufacturer's recommended accessories, in this Oven when not in use.
20. Do not place any of the following materials in the Oven: paper, cardboard, plastic and the like.
21. Do not cover Crumb Tray or any part of the Oven with metal foil. This will cause overheating of the Oven.
22. The Toaster Oven is OFF when the Function Control and the Timer Control are both in the OFF position.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

ADDITIONAL IMPORTANT SAFEGUARDS

CAUTION HOT SURFACES: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. **Unplug from outlet when not in use and before cleaning. To avoid electrical shock, never immerse or rinse this appliance in water or any other liquid.**
3. If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. **Do not reach into the water!**
4. When using this appliance, provide adequate air space above and on all sides for air circulation. Do not operate this appliance while it is touching or near curtains, wall coverings, clothing, dish towels or other flammable materials.
5. To reduce the risk of fire, do not leave this appliance unattended during use.
6. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair a malfunctioning appliance!
7. The cord to this appliance should only be plugged into a 120V AC electrical wall outlet.
8. Do not use this appliance in an unstable position.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

ELECTRIC POWER

If the electric circuit is overloaded with other appliances, your appliance may not operate. It should be operated on a separate electrical circuit.

PLASTICIZER WARNING

CAUTION: To prevent Plasticizers from migrating from the finish of the counter top or table top or other furniture, place **NON-PLASTIC** coasters or place mats between the appliance and the finish of the counter top or table top.

Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.

INTRODUCTION

Your Russell Hobbs® 6 Slice Toaster Oven-Broiler performs 5 everyday cooking functions: BROIL, TOAST, BAGEL TOAST, BAKE, TOP BROWN. Its attractive styling and beautiful curved Glass Door make it a handsome addition to any kitchen.

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

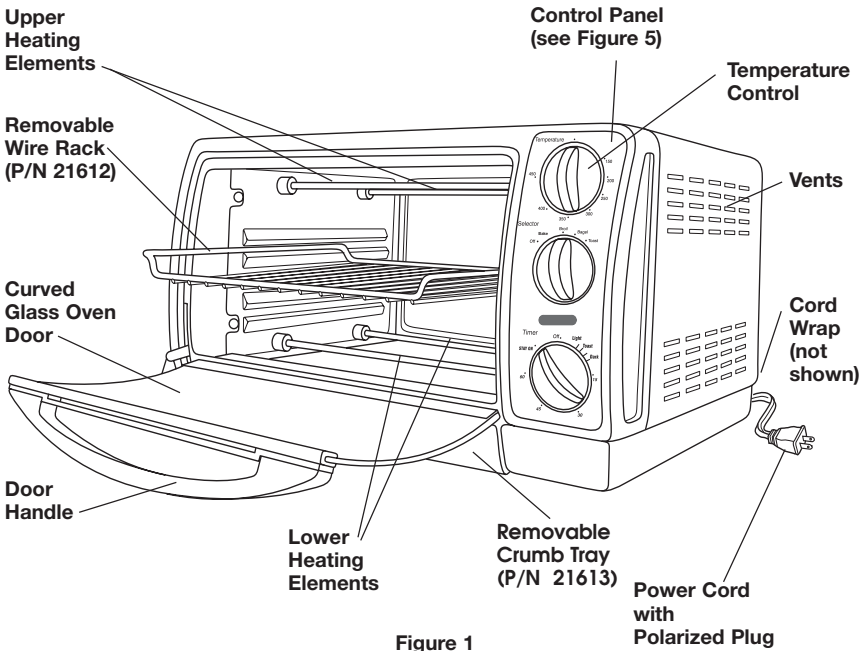 


Figure 1

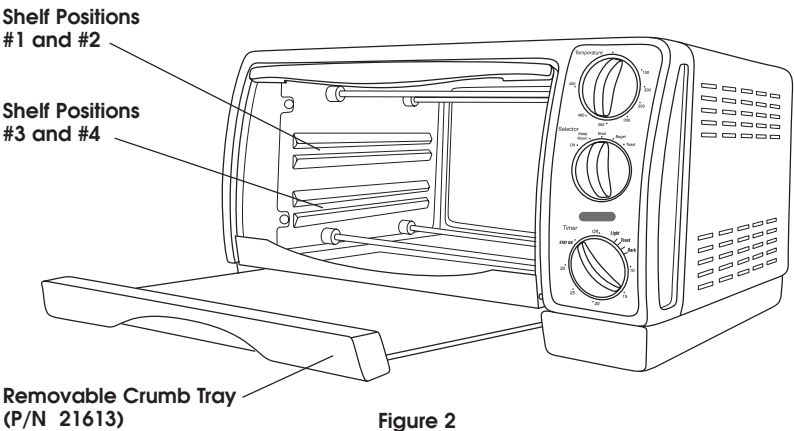 


Figure 2

TOASTER OVEN-BROILER ACCESSORIES

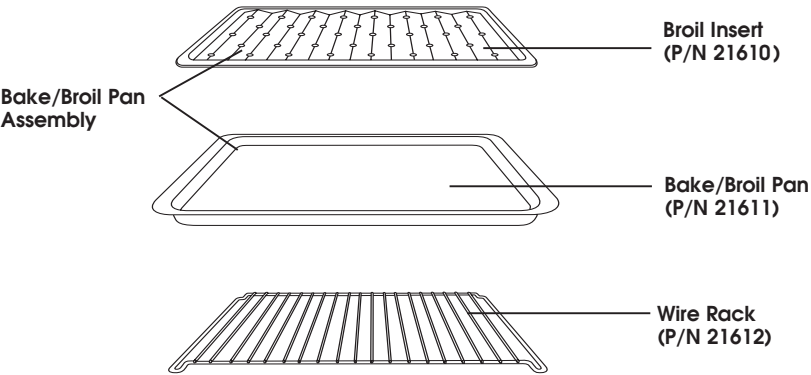 


Figure 3

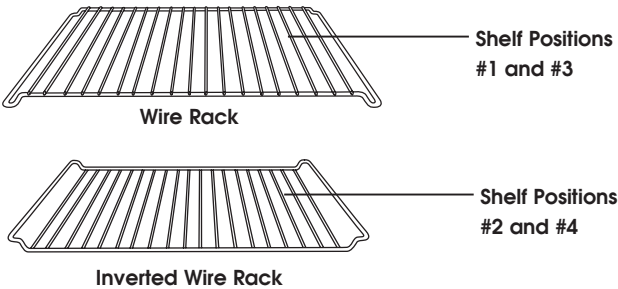 


Figure 4
Wire Rack
Shelf Positions

CONTROL PANEL

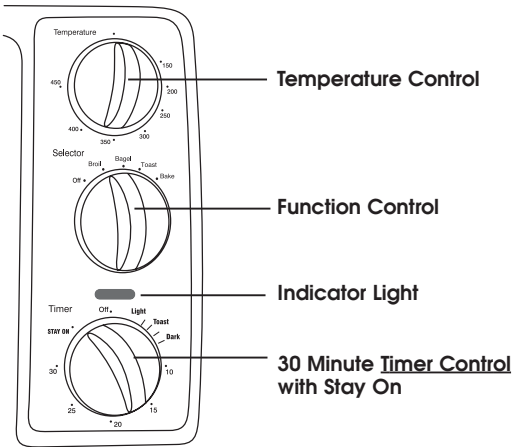 


Figure 5

Operating Instructions

BEFORE USING YOUR 6 SLICE TOASTER OVEN-BROILER FOR THE FIRST TIME

1. Read all instructions in this Owner's Manual carefully.
2. Carefully unpack your Toaster Oven-Broiler and remove all packaging materials.
3. Place your Toaster Oven-Broiler on a level surface such as a countertop or table. Be sure the sides, back, and top of the Toaster Oven-Broiler are at least four inches away from any walls, cabinets, or objects on the counter or table.
4. Remove all stickers from the Toaster Oven-Broiler except the rating label located on the back.
5. Remove Broil Insert, Bake/Broil Pan, Wire Rack and Crumb Tray and wash in warm, soapy water. Rinse and dry thoroughly before placing in the Toaster Oven-Broiler.
6. To remove any dust that may have accumulated during packaging, simply wipe the Toaster Oven-Broiler exterior with a clean, damp cloth.
7. Do not use abrasive cleansers.
8. Do not put the Toaster Oven-Broiler, cord or plug in water.
9. When you are ready to use the Toaster Oven-Broiler, plug the cord into a 120V AC outlet.
10. To eliminate any protective substance or oil that may have been used for packing and shipping, turn the Function Control to TOAST and set the Timer Control for 15 minutes. A small amount of smoke and odor may be detected. This is normal.
11. To avoid scratching, marring, or discoloration, do not store anything on top of the Toaster Oven-Broiler during operation.

CAUTION: Appliance surfaces are hot during and after use.

CAUTION: Always wear protective, insulated oven mitts on hands when touching hot Toaster Oven-Broiler or hot dishes and food or when inserting or removing Wire Rack, baking dish and food.

NOTE: After using the Toaster Oven, turn the Temperature Control to the lowest position, turn the Function Control OFF, turn the Timer Control to OFF; then remove plug from wall outlet.

HINTS FOR BEST RESULTS

- To prevent heat loss, avoid opening the door excessively.
- To speed up browning, brush lean cuts of meat, chicken and fish with oil, margarine or melted butter.

COOKING CONTAINERS

- The Bake/Broil Pan included with the Toaster Oven-Broiler is suitable for items such as cookies, rolls, biscuits, nachos and pork chops.
- A variety of standard baking dishes, such as an 8" round or square cake pan, a 6-cup muffin pan, and 1 & 2 quart round, square, or rectangular casserole dish may be used for foods other than those listed above.
- Choose bakeware made of metal, or glass/ceramic without lids.
- Dark or dull pans absorb heat faster; foods will bake more rapidly and crust will brown more easily than in shiny bake pans.
- Check package directions and/or with the ovenware manufacturer to determine if the container is suitable for use in a Toaster Oven-Broiler.
- Do not use oven roasting bags in this Toaster Oven-Broiler, as they may come in contact with the Heating Elements.

CAUTION: Allow at least 1" air space between the top of the container and the Upper Heating Elements. Never use glass lids on glass or metal bakeware. If a lid is necessary, cover tightly with heavy-duty aluminum foil.

INSTRUCTIONS FOR BAGEL TOASTING

1. Remove Bake/Broil Pan and Broil Insert.
2. Insert Crumb Tray into place.
3. Plug into 120V ~ 60 Hz outlet.
4. Set the Temperature Control to 450°F.
5. Set the Function Control to Bagel.
6. Place bagels to be toasted on the Wire Rack in Shelf Position #2 or #3 (see Figure 4). Place cut side up.
7. Turn Timer Control to the desired darkness. The Indicator Light will illuminate.

NOTE: To set the Timer Control for less than 10 minutes, turn to 10 and then turn back to the appropriate amount of time.

NOTE: DO NOT set the Timer Control to the Stay On position when using the BAGEL Function.

CAUTION: DO NOT LEAVE TOASTER OVEN-BROILER UNATTENDED DURING BAGEL TOASTING.

8. A signal will sound at the end of the BAGEL Cycle. The Indicator Light will turn off. Watch to avoid over-browning. To stop manually, turn Timer Control to OFF.
9. Unplug and allow to cool completely before cleaning.

INSTRUCTIONS FOR TOASTING

1. Plug into 120V AC 60 Hz outlet. Close the Glass Door.
2. Make sure the Crumb Tray is firmly in place in the bottom of the Toaster Oven-Broiler.
3. Open the Glass Door and center bread on the Wire Rack. Close the Glass Door.
4. Set the Temperature Control to 450°F.
5. Turn the Function Control to TOAST.
6. Turn the Timer Control to the desired toast color. The Indicator Light will illuminate.

NOTE: DO NOT set the Timer Control to the Stay On position when using the TOAST Function.

NOTE: To set the Timer Control for less than 10 minutes, turn to 10 and then turn back to the appropriate amount of time.

CAUTION: As soon as the Timer Control is engaged, the Toaster Oven-Broiler will turn ON. Both the Upper and Lower Heating Elements will cycle ON and OFF to maintain temperature for the entire cooking time.

CAUTION: As soon as the Timer Control is engaged both Heating Elements will become hot immediately. Use care not to place anything on top of the Toaster Oven-Broiler. Do not touch the Toaster Oven-Broiler or any part of the Toaster Oven-Broiler without wearing oven mitts.

7. With the Timer Control set, the Toaster Oven-Broiler will shut OFF automatically when the TOAST Cycle is complete. A signal will sound; the Indicator Light will turn off.

If toasting is completed before the Timer Control shuts the Toaster Oven-Broiler OFF, you may shut the Toaster Oven-Broiler OFF manually by turning the Timer Control to the OFF position. The Indicator Light will turn off.

NOTE: Watch toast until desired color is achieved.

8. Open the Glass Door. Wear protective oven mitts to remove toast from Toaster Oven-Broiler. Be careful when removing toast from the Wire Rack's Upper Shelf Position. The inside of the Toaster Oven-Broiler is very hot. Close Glass Door.
9. Unplug unit and allow to cool before cleaning.

CAUTION: DO NOT LEAVE TOASTER OVEN-BROILER UNATTENDED DURING TOASTING.

See User Maintenance Instructions. Unplug when not in use.

HINTS FOR TOASTING

- Remove all protective wrappings from food before placing in Toaster Oven-Broiler. Follow toaster food directions.
- Frozen and heavy bread require a longer time setting (e.g. bagels and English muffins).

NOTE: Use extra caution when using this Toaster Oven-Broiler for toasting pastry items with runny-type frosting or open fillings.

- When toasting more than one slice of bread, use slices of similar size, thickness and freshness.
- One slice of bread requires a lighter setting than several slices of bread.
- Stale bread, thin bread or sweet bread products, such as tea cakes and fruit loaves, brown much more quickly than ordinary bread, so they should be toasted for less time.
- Different breads require different toasting times. Turn Timer Control to the OFF position and open the Glass Door to check toast color. Close Glass Door and reset Timer Control if more toasting time is needed.
- For best results, clean Crumb Tray frequently.

INSTRUCTIONS FOR BAKING

1. Plug into 120V AC 60 Hz outlet. Close the Glass Door.
2. Make sure the Crumb Tray is firmly in place in the bottom of the Toaster Oven-Broiler.
3. Set the Temperature Control to the desired temperature.
4. Turn the Function Control to BAKE.
5. Preheat the Toaster Oven-Broiler for approximately 5 minutes.

NOTE: To set the Timer Control for less than 10 minutes, turn to 10 and then turn back to the appropriate amount of time.

After that time, a signal will sound and the Toaster Oven-Broiler will automatically shut OFF.

6. Remove all protective wrappings from food before placing in Toaster Oven-Broiler.
7. Wearing protective oven mitts, open the Glass Door. Carefully place the Wire Rack in Shelf Position #2, #3, or #4 (see Figure 4) depending on the height of the pan and food or recipe directions. Use the Bake/Broil Pan or an appropriate baking container. If you would like your food browned top and bottom, place food directly on Rack and close Glass Door. Bake according to package or recipe time.

INSTRUCTIONS FOR BAKING *(Continued)*

8. Turn the Timer Control to the desired time or to the Stay On position. The Indicator Light will illuminate.

CAUTION: As soon as the Timer Control is engaged, the Toaster Oven-Broiler will turn ON. Both the Upper and the Lower Heating Elements will cycle ON and OFF to maintain temperature for the entire cooking time.

CAUTION: As soon as the Timer Control is engaged both Heating Elements will become hot immediately. Use care not to place anything on top of the Toaster Oven-Broiler. Do not touch the Toaster Oven-Broiler or any part of the Toaster Oven-Broiler without wearing oven mitts.

CAUTION: DO NOT LEAVE TOASTER OVEN-BROILER UNATTENDED DURING BAKING.

9. With the Timer Control set, the Toaster Oven-Broiler will shut OFF automatically when the BAKE Cycle is complete. A signal will sound; the Indicator Light will turn off.

If baking is completed before the Timer Control shuts the Toaster Oven-Broiler OFF, you may shut the Toaster Oven-Broiler OFF manually by turning the Timer Control to the OFF position. The Indicator Light will turn off.

If the Stay On position has been selected, the Toaster Oven-Broiler must be shut OFF manually by turning the Timer Control to the OFF position. The Indicator Light will turn off.

10. Open the Glass Door. Wear protective oven mitts to remove food from Toaster Oven-Broiler. The inside of the Toaster Oven is very hot. Close the Glass Door.
11. Unplug the unit and allow to cool completely before cleaning.

NOTE: Do not use glass covers on baking pans. If using a glass or glass-ceramic baking container, make sure it is at least 1-1/2 inches away from the Upper Heating Elements.

See User Maintenance Instructions. Unplug when not in use.

HINTS FOR BAKE

- Heavy-duty aluminum foil may be used to cover top of baking container to reduce over-browning. Tuck ends of foil closely against edge of pan.
- Place food toward the back of the Toaster Oven-Broiler for better browning.
- Food may cook faster than recipe or package time. Check for doneness prior to end of cook time.
- Rotate and turn food over for more even browning halfway through the cooking process.
- To prevent heat loss, avoid opening the Glass Door excessively.
- For best results, foods that contain a leavening agent should be baked on the lowest Shelf Position #4 of the Toaster Oven-Broiler.

INSTRUCTIONS FOR BROILING

Only the Upper Heating Elements will heat when this Toaster Oven-BROIL Function is used.

 
1. Plug into 120 V AC 60 Hz outlet. Close the Glass Door.
2. Make sure the Crumb Tray is firmly in place in the bottom of the Toaster Oven-Broiler.
3. Place the Broil Insert on top of the Bake/Broil Pan. Place food directly onto the Broil Pan Assembly. When broiling, both the Bake/Broil Pan and the Broil Insert must be used.
4. Open the Glass Door. Place the Wire Rack in Shelf Position #2 or #3, (see Figure 4) leaving approximately 1 to 2 inches between the food and the Upper Heating Elements.

NOTE: When broiling, both the Bake/Broil Pan and the Broil Insert must be used.

5. Place the food on the Broil Pan Assembly. Brush food with sauces or oil as desired. Place the Broil Pan Assembly with food into the Toaster Oven Broiler and close the Glass Door. The Bake/Broil Pan will catch any juices that drip during broiling. Never cover the Broil Insert with aluminum foil as this prevents juices and fat from dripping into the Bake/Broil Pan.
6. Set the Temperature Control to 450°F.
7. Turn the Function Control to BROIL.
8. Turn the 30 Minute Timer to the desired time. The Indicator Light will illuminate.

NOTE: DO NOT set the Timer Control to the Stay On position when using the BROIL Function.

NOTE: To set the Timer Control for less than 10 minutes, turn to 10 and then turn back to the appropriate amount of time.

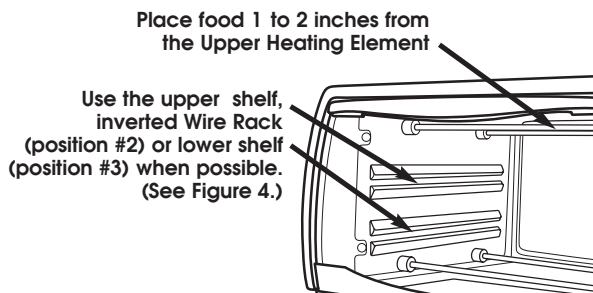

INSTRUCTIONS FOR BROILING *(Continued)*

CAUTION: As soon as the Timer Control is engaged, the Toaster Oven-Broiler will turn ON. The Upper Heating Elements will remain ON for the entire cooking time.

CAUTION: As soon as the Timer Control is engaged the Upper Heating Elements will become hot immediately. Use care not to place anything on top of the Toaster Oven-Broiler. Do not touch the Toaster Oven-Broiler or any part of the Toaster Oven-Broiler without wearing oven mitts.

9. Broil according to package or recipe time. When broiling food that needs to be cooked on both sides, set the Timer Control for the time necessary for one side.
10. With the Timer Control set, the Toaster Oven-Broiler will shut OFF automatically when the BROIL Cycle is complete. A signal will sound; the Indicator Light will turn off.
If broiling is completed before the Timer Control shuts the Toaster Oven-Broiler OFF, you may shut the Toaster Oven-Broiler OFF manually by turning the Timer Control to the OFF position. The Indicator Light will turn off.
11. Open the Glass Door. Wear protective oven mitts to carefully pull the Wire Rack and Assembled Broil Pan about halfway out of the Toaster Oven-Broiler. Turn the food, slide the Wire Rack and Assembled Broil Pan into the Toaster Oven-Broiler and close the Toaster Oven-Broiler Glass Door. Turn the Timer Control to the desired time.
12. When the Broiling time is complete, a signal will sound, and the Timer Control will finish in the OFF position. The Indicator Light will turn off.
13. Open the Glass Door. Wear protective oven mitts to remove food from Toaster Oven-Broiler. Be careful when removing food. The inside of the Toaster Oven-Broiler is very hot. Close the Glass Door.
14. Unplug unit and allow to cool completely before cleaning.

CAUTION: DO NOT LEAVE TOASTER OVEN-BROILER UNATTENDED DURING BROILING.

See User Maintenance Instructions. Unplug when not in use.

HINTS FOR BROILING

- Watch food to avoid over-browning or burning.
- Do not place aluminum foil on top of Broiling Insert. Doing this traps grease and can cause a fire.
- When broiling, trim excess fats from meat and score edges to reduce curling, splattering and smoking.
- Always thaw meat before broiling.

INSTRUCTIONS FOR TOP BROWNING

To TOP BROWN foods, follow the BROIL instructions but place the food into the Bake/Broil Pan on the Wire Rack.

Use the Upper Shelf Position #2 or #3, (see Figure 4) leaving approximately 1 to 2 inches between the food and the Upper Heating Elements.

CAUTION: DO NOT LEAVE TOASTER OVEN-BROILER UNATTENDED DURING TOP BROWNING.

Unplug when not in use. See User Maintenance Instructions.

HINTS FOR TOP BROWNING

- Watch food to avoid over-browning or burning.
- TOP BROWN may be used to toast English muffins or to melt cheese on sandwiches or casseroles.

Special Features

30 MINUTE TIMER CONTROL WITH STAY ON

Turn the 30 Minute Timer Control with Stay On clockwise to select the appropriate cooking time. If cooking less than 10 minutes, turn the Timer Control to 10 minutes and then turn back to desired cooking time.

When the cooking Cycle is completed, a signal will sound and the unit will turn OFF automatically. If you wish to turn the Toaster Oven-Broiler OFF at any time, manually turn the Timer Control to the OFF position.

If you need to BAKE for longer than 30 minutes, you may use the Stay On Setting. To use the Stay On Setting, turn the Timer Control counter-clockwise to the Stay On marking. While at this Setting, the unit will remain ON until the Timer Control is manually turned to the OFF position. Unplug Toaster Oven-Broiler when not in use.

REMOVABLE WIRE RACK

The Wire Rack must be used for all cooking Functions. The Rack is removable for easy cleaning and must be properly re-inserted before use.

REMOVABLE CRUMB TRAY

The Crumb Tray may be removed.

INDICATOR LIGHT

When you turn the 30 Minute Timer Control with Stay On to the desired time, the Indicator Light will illuminate.

The unit will shut OFF automatically when using the 30 Minute Timer Function. When the cooking Cycle is complete the Indicator Light will turn off.

BAKE/BROIL PAN, BROIL INSERT

For best results use the Bake/Broil Pan to BAKE or to TOP BROWN, to keep foods warm and to minimize clean-up due to spills.

NOTE: When broiling, both the Bake/Broil Pan and the Broil Insert must be used.

User Maintenance Instructions

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

CARE AND CLEANING

1. Make sure the Function and Timer Controls are in the OFF position and unplug the Toaster Oven-Broiler before cleaning.
2. Allow Toaster Oven-Broiler and accessories to cool completely before cleaning.
3. Clean the outside of the Toaster Oven-Broiler with a damp cloth and dry thoroughly. A non-abrasive liquid cleaner may be used for stubborn stains. Rinse and dry thoroughly. Do not use metal scouring pads or abrasive cleaners that will scratch the surface.
4. Clean the Glass Door with a cloth or sponge dampened with warm, sudsy water. Dry thoroughly.
5. Remove Broil Insert, Bake/Broil Pan, Wire Rack and Crumb Tray. Wash in soapy water and dry thoroughly.
6. If crumbs and spills have accumulated on the Crumb Tray, wipe with a damp cloth. Always dry the Crumb Tray thoroughly before replacing.
7. DO NOT use abrasive cleaners or metal scouring pads to clean Broil Insert, Bake/Broil Pan or Wire Rack. For stubborn stains, clean with a nylon or polyester mesh pad and a mild, non-abrasive cleaner. Rinse and dry thoroughly.

CAUTION: DO NOT use spray-on or other oven cleaners. Using these types of cleaners may cause electrical damage.

INTERIOR CLEANING

1. Always unplug unit and allow to cool completely before cleaning or moving.
2. Remove Broil Insert, Bake/Broil Pan, Wire Rack and Crumb Tray.
3. Clean interior with a mild or non-abrasive cleaner and plastic scouring pad after each use to avoid build-up. Do not rub too hard as surface can be scratched.
4. To remove baked on food, pour a small amount of cooking oil onto the food and allow to stand for 5 to 10 minutes. Remove the softened food with a soft cloth. Do not use steel wool, scouring pads or abrasive cleaners.
5. Rinse and dry thoroughly before closing the Glass Door.

EXTERIOR CLEANING

Wipe surfaces with a clean, damp cloth. Do not use abrasive cleaners, as they may scratch the surface.

TO STORE

Unplug unit, allow to cool, and clean before storing. Store in its box in a clean, dry place. Never store appliance while appliance is hot or still plugged in. Use the Cord Wrap at the back of the unit to store the power cord when not in use. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

LIMITED ONE YEAR WARRANTY

Warranty: This Russell Hobbs® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1 (800) 233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number RHTOB6 when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization (800) 233-9054.

Out-of Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$12.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

ATTN: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 7366
Columbia, MO 65205-7366
1-800-233-9054
E-mail: Salton@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall Salton be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products: visit our website: www.eSalton.com

©2003 Salton, Inc. All rights reserved.

Made in China

P/N 61330

5/03