 


White-Westinghouse™

Steam and Dry Iron

OWNER'S MANUAL

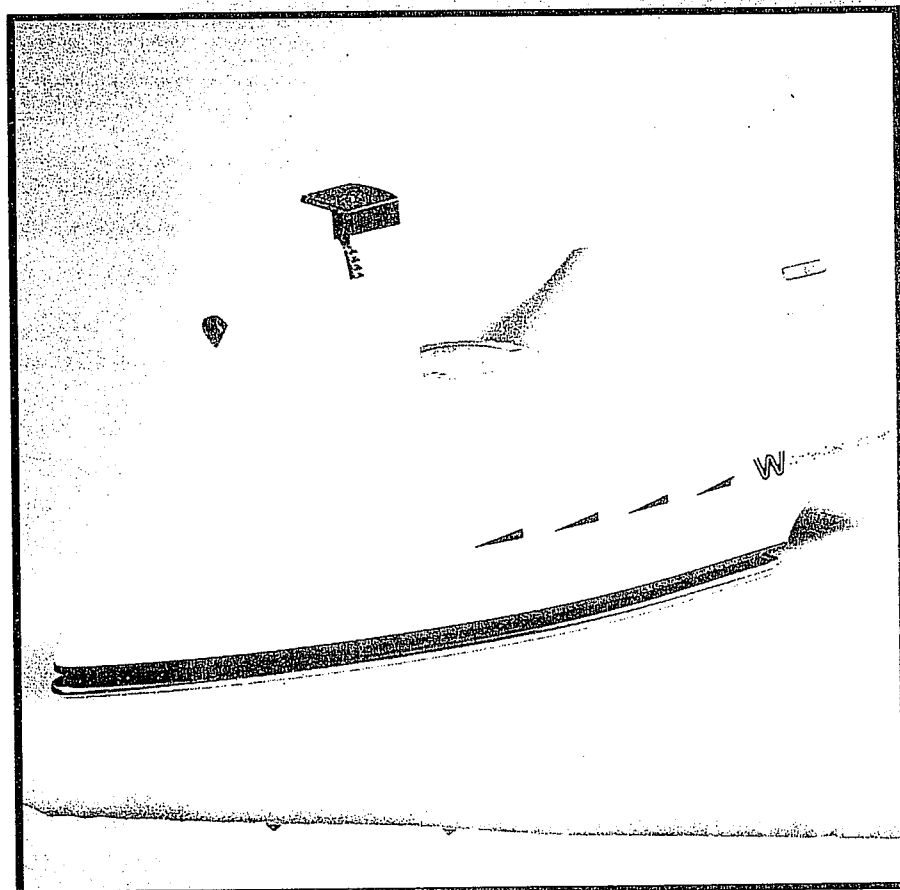

MODEL WWSR3331

IMPORTANT SAFETY INSTRUCTIONS

When using your Iron, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING.
2. Use Iron only for its intended use.
3. To protect against a risk of electric shock, do not immerse the Iron in water or other liquids.
4. The Iron should always be turned to **MIN** before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Let Iron cool completely before putting away. Loop cord loosely around Iron when storing.
6. Always disconnect Iron from electrical outlet when filling with water or emptying, and when not in use.
7. Do not operate Iron with a damaged cord or if the Iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the Iron; take it to a qualified service person for examination and repair. Incorrect reassembly can cause a risk of electric shock when the Iron is used.
8. Close supervision is necessary for any appliance being used by or near children. Do not leave Iron unattended while connected or on an ironing board.
9. Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a Steam Iron upside down. There may be hot water in the Reservoir.

SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 10-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tipped over.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

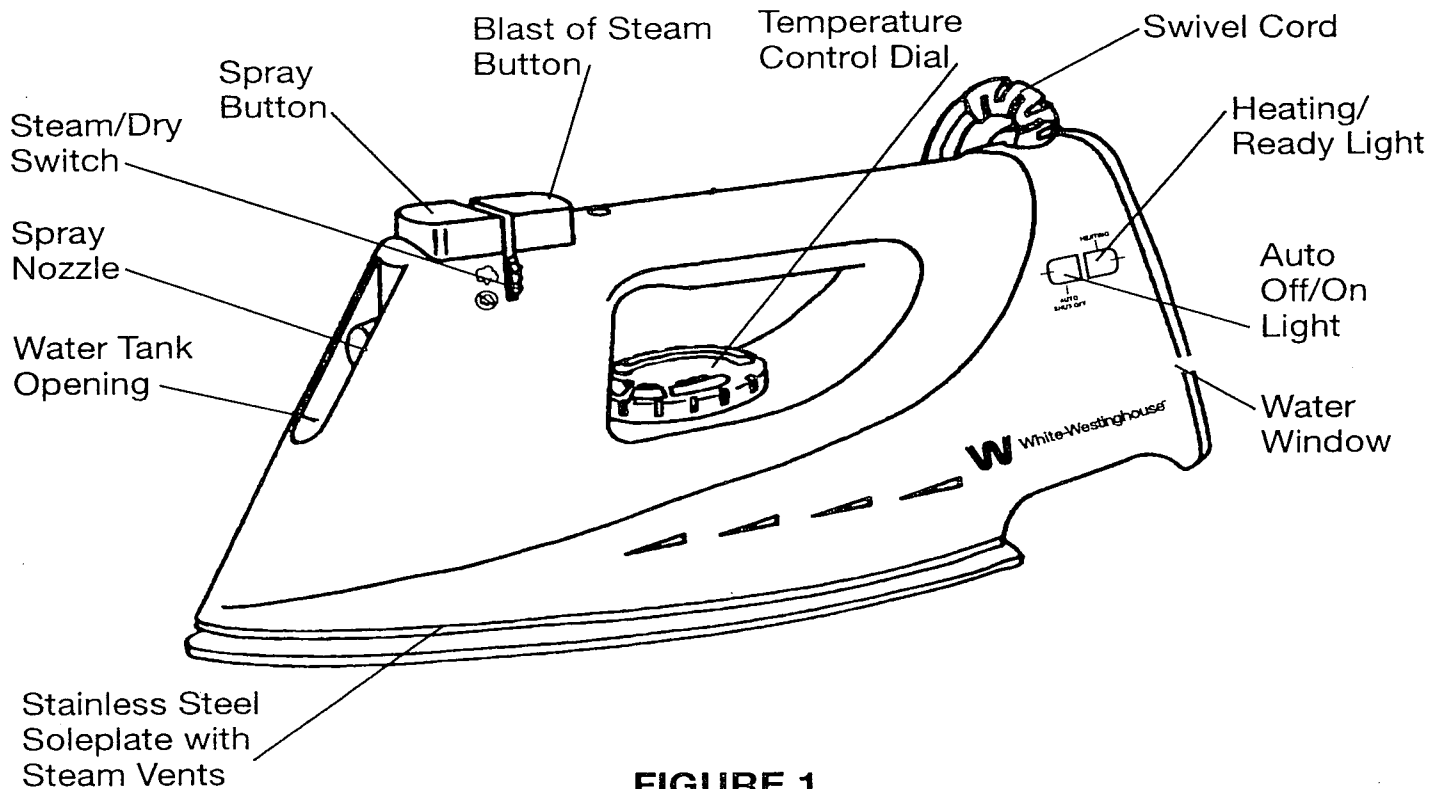 


FIGURE 1







POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.



USING YOUR IRON

NOTE: Before you use your Iron for the first time, you should flush the Soleplate Steam Vents to ensure that no stain is transferred onto fabric from residue, possibly left in the Vents from the manufacturing process. To do that, see SELF-CLEANING / FLUSHING.

TEMPERATURE AND STEAM GUIDE

Fabric	Temperature/Steam
Delicates Nylon Acetate Silk	Low  
Polyester Wool	Medium  
Cotton Linen	High  

For best results, check garment labels for the temperature and steam settings recommended by the fabric manufacturer

To prevent damaging garments from too hot of an Iron, it is best to first iron garments that require a low temperature. If you should need to switch from a high setting to a lower temperature, for example  Cotton to  Silk, allow the Iron about 5 minutes to reach the lower temperature.

Tips: If you are unsure of a garment's fabric content, start on a low setting and test the Iron on an area of the garment that does not show, such as a seam. Gradually increase the heat setting until wrinkles are removed without damaging the fabric.

 
To freshen up garments made of velvet, felt, suede or velour, hold the steaming Iron horizontally 2 inches above the fabric for a gentle steaming. Make sure the Iron does not come in contact with the fabric.

To prevent shine, iron dark garments or those made of silk, acetate or rayon, inside out.

AUTO OFF/ON

When Iron is on, the Green Light will come on.

When Iron is off, the Green Light will go off.

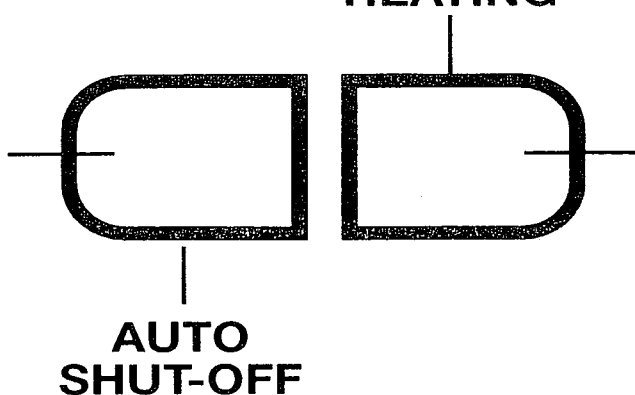

HEATING/READY

When Iron is heating up or temperature setting has been adjusted, the Red Light will come on.

When temperature setting has been reached, the Red Light will go off.

FIGURE 2

PATENTED AUTOMATIC SAFETY SHUT-OFF

This Iron has two kinds of Safety Shut-Off Mechanisms. One is a patented, touch-sensitive "brain" in the Handle which turns the Iron on or off when it is in the horizontal position. The other is a Timer which automatically shuts the Iron off if left on its Heel in the upright position for more than 15 minutes.

Horizontal Position: When the Iron is plugged in and in the horizontal position, it will remain on as long as your hand is making contact with the Handle. Once you take your hand off the Handle, the Iron automatically turns itself off. For example, if you are ironing and leave the Iron down on the ironing board to answer the phone, the Iron will automatically begin to de-energize. It will turn back on as soon as you grip the Handle and resume ironing.

IMPORTANT: To return the Iron to the desired temperature, allow it to rest in the upright position until the Red HEATING/READY Light goes off.

Upright Position: When the Iron is plugged in and resting on its Heel, it will remain on for 15 minutes, allowing ample time to reposition garments during the ironing process. If the Iron is left resting for more than 15 minutes, it will automatically shut-off. To begin ironing again after the Timer has shut off the Iron, pick it up by the Handle. The Green and Red Lights will come on. Turn the Temperature Dial to the desired setting and return the Iron to its upright position. When the temperature setting has been reached, the Red HEATING/READY Light will go off and then you may begin to iron.

FIGURE 3


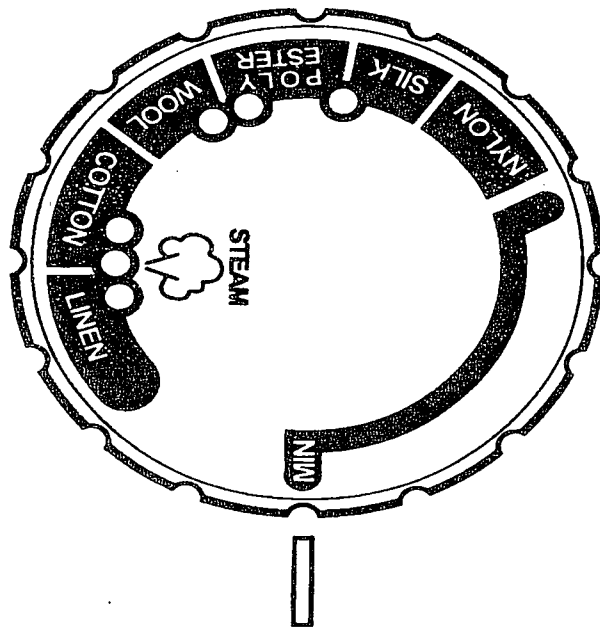 




FIGURE 4

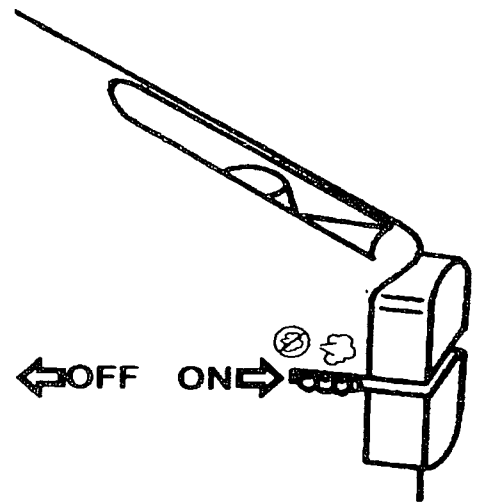 

IRONING WITHOUT STEAM

The Iron can be used on the Dry Setting  with or without water in the Tank. However, it is best to avoid having the Tank too full of water while dry ironing.

1. Position the Temperature Control Dial to **MIN**, the lowest setting. (See Figure 3.)
2. Shift the Steam Switch to the Dry  Position. (See Figure 4.)
3. Stand the Iron on its Heel in an upright position on an iron-safe surface and plug it in.
4. Turn the Temperature Control Dial to the desired setting.
5. When the HEATING/READY Light turns off, the Iron has reached the desired temperature.
6. If desired, you may still use the Spray or Blast Buttons, as long as there is water in the Tank.
7. When finished, turn the Temperature Control Dial to **MIN**, and unplug it. Allow Iron to cool before cleaning and storing.

NOTE: During ironing the HEATING/READY Light may turn on again which indicates the Iron is heating up to maintain the proper temperature.

CAUTION: If the Iron has been used for a long time and is hot, DO NOT fill it with water.

IRONING WITH STEAM

When using as a steam iron, be sure the temperature setting on the Temperature Control Dial is within the STEAM range to avoid water spotting on a garment.

Position the Temperature Control Dial to **MIN**, the lowest setting. (See Figure 3.)

With the unit unplugged, fill the Iron with water. (See FILLING THE WATER TANK instructions.)

Stand the Iron on its Heel in an upright position on an iron-safe surface and plug it in.

Turn the Temperature Control Dial to STEAM.

Allow approximately 2 minutes for the Iron to reach the desired temperature. (The HEATING/READY Light will turn off.)

Shift the Steam Switch to the STEAM  Position. (See Figure 4.)

As soon as the Iron is held horizontally, steam will flow through the Vents. Placing the Iron on its Heel in an upright position interrupts the flow of steam.

When finished, turn the Temperature Control Dial to **MIN**, and unplug it. Allow Iron to cool before cleaning and storing.

CAUTION: Avoid coming in contact with escaping steam.

IRONING WITH EXTRA STEAM

For a penetrating Blast of Steam to iron faster and to smooth difficult wrinkles, firmly depress the Blast of Steam Button. Between the individual Blasts of Steam, pause for at least 5 seconds to let the Iron heat for maximum additional steam. If water droplets escape as you use the Blast of Steam, turn the Temperature Control Dial to a slightly warmer setting and wait for the HEATING/READY Light to go out.

CAUTION: Avoid coming in contact with escaping steam.

USING THE SPRAY BUTTON

For a mist of water to moisten dry and difficult fabrics such as linen, cotton or wool, or to handle stubborn wrinkles, press the Spray Button. The Spray Function is also handy to moisten creases accidentally ironed into the fabric.

FIGURE 5


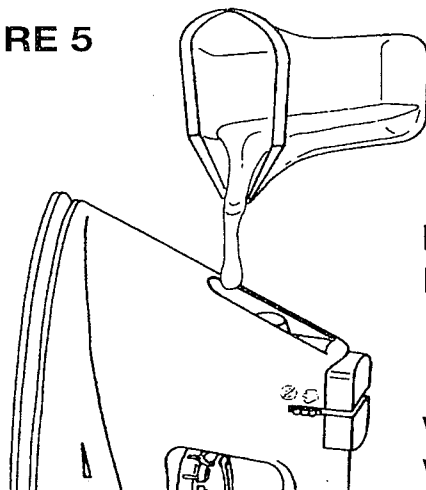 



FIGURE 6

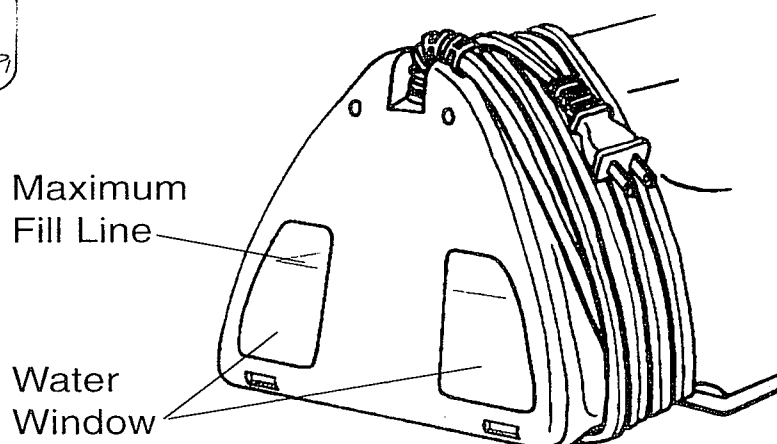 

FILLING THE WATER TANK


1. Unplug the Iron before filling.
2. Shift the Steam Switch to the Dry  Position, and hold the Iron upright.
3. Using the enclosed Measuring Cup, slowly pour water into the Water Tank opening. (See Figure 5.) Afterwards, hold the Iron horizontally and look through the Water Window to check the water level. Slightly more than 2 cupfuls with the enclosed Measuring Cup fills the Tank to its maximum. (See Figure 6.)

NOTE: Your Iron is designed to use tap water. However, if your water is very hard, it is recommended that you use distilled water. DO NOT use water from your home softening systems because such water may contain minerals that may harm the Iron.

EMPTYING THE WATER TANK




The Water Tank should be emptied after each use. To do so:

1. Unplug the Iron from the electrical outlet.
2. While the Iron is still warm, hold the Iron over a sink and allow the Iron to drain by tipping the point of the Iron down.
3. Gently shake the Iron to loosen any water drops that may be trapped. The warmth of the Iron should dry out any remaining water.

NOTE: If you empty the Water Tank after the Iron has cooled, set the Iron in an upright position on its Heel, plug it in and set the Temperature Dial to the highest heat setting,  for 2 minutes. Then unplug the Iron and let it cool before storing it.

SELF-CLEANING/FLUSHING

Flushing the Iron is advised after every 5 usages to prevent harmful mineral build-up that can clog the Iron and prevent it from heating and steaming properly. To flush the Iron:

1. Position the Temperature Control Dial to **MIN**, the lowest setting. (See Figure 3.)
2. Shift the Steam Switch to the Dry  Position. (Figure 4.)
3. Fill the Iron's Water Tank to its Maximum Fill Line. (Figure 6.)
4. Plug the Iron in and set the Temperature Control Dial to its highest setting  or linen. Let it heat for 2 minutes.
5. Set the Steam Switch to the STEAM  Position.
6. Place a hand towel over the ironing surface.
7. Holding the Iron horizontally 2 inches above the towel, depress the Blast of Steam Button several times, remembering to pause at least 5 seconds between blasts to allow the Iron to reheat.
8. Pass the Iron over a damp cloth to clean the Soleplate.
9. When finished, turn the Temperature Control Dial to **MIN**, and unplug. Allow Iron to cool before cleaning or storing.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance and contains no user serviceable parts. Do not try to fix it yourself. Refer it to qualified service personnel if servicing is needed.

TO CLEAN:

Approximately once a month or so, you should engage the self-cleaning feature to remove any scales or impurities. See the SELF-CLEANING/FLUSHING Section for instructions.

TO CLEAN SOLEPLATE:

The Iron should be fully cooled before Soleplate cleaning begins. Make sure the Iron is unplugged before cleaning. Empty the Water Tank of any remaining water. Apply a small amount of mild cleaner to a damp cloth. Gently rub Soleplate, then wipe with a moist cloth. **NEVER USE** scouring pads or abrasive cleaners on the Soleplate, as this may scratch the surface.

Wipe all other surfaces with a slightly damp cloth. Never allow water or any other liquid to get into the unit, except when filling the Water Tank. **NEVER** put any chemical cleaning agents or solvents in the Water Tank.

BEFORE USING AGAIN, preheat and move Iron over an old cloth several times to remove any residue from the Soleplate.

TO STORE:

Unplug appliance and allow to cool. **STORE IN UPRIGHT POSITION ON HEEL REST.** Never store Iron lying on the Soleplate. Never store it while it is hot or still plugged in. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

ONE-YEAR LIMITED WARRANTY

This White-Westinghouse product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied, and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model (at the store's option) when the product is returned to Kmart. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Important Notice

If any parts are missing or defective, return this product to the place of purchase.

Consumer Service

This White-Westinghouse product is distributed by:

Salton, Inc.
550 Business Center Drive
Mount Prospect, IL 60056
E-mail: White-Westinghouse@saltonusa.com

Any questions or comments can be directed to Salton's address, or call the Consumer Service Department:

1-800-233-9054
Monday-Friday
8 a.m. - 5 p.m. CST

White-Westinghouse trademark used under license.
©1999 White Consolidated Industries, Inc.

Made in China for
Kmart Corporation
Troy, Michigan 48084
Printed in China

P/N 60462