



SALTON® WET TUNES AM/TV1(FM)/TV2(WB) MULTI-BAND FLASH LIGHT RADIO

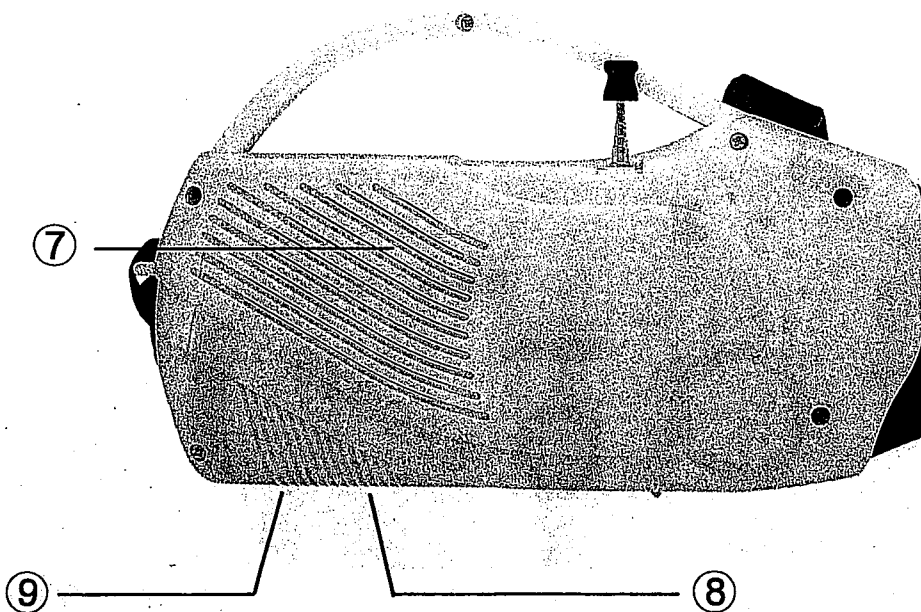

**OWNER'S MANUAL
MODEL NO. WT-12**

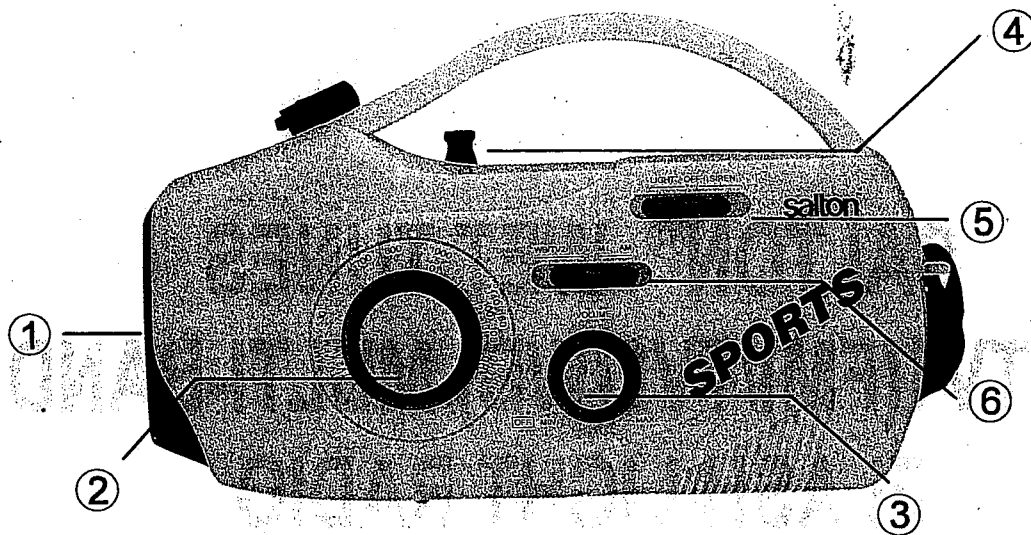

LOCATIONS OF CONTROLS

- | | |
|--|---------------------------------|
| 1) LIGHT | 5) LIGHT & SIREN ON/OFF SWITCH |
| 2) TUNING CONTROL | 6) AM/TV1(FM)/TV2(WB) SWITCH |
| 3) VOLUME CONTROL ON/OFF | 7) SPEAKER |
| 4) FM(TV1)/TV2(WB)
TELESCOPIC ANTENNA | 8) BATTERY DOOR AND COMPARTMENT |
| | 9) BATTERY DOOR SCREW |

THIS WET TUNES AM/TV1(FM)/TV2(WB) MULTI-BAND RADIO HAS BEEN CAREFULLY ENGINEERED AND MANUFACTURED TO GIVE YOU DEPENDABLE OPERATION. PLEASE TAKE A FEW MINUTES TO READ THIS MANUAL CAREFULLY BEFORE OPERATION.

POWER OPERATION

THIS UNIT IS DESIGNED TO OPERATE WITH 3 "C" SIZE BATTERIES (3 X 1.5V DC) OPEN THE BATTERY DOOR BY TURNING THE BATTERY DOOR SCREW ANTI-CLOCKWISE. INSTALL THREE "C" SIZE BATTERIES, OBSERVING THE BATTERY POLARITY (+ AND -) INDICATED IN THE BATTERY COMPARTMENT. CLOSE AND LOCK THE BATTERY DOOR BY TURNING THE SCREW IN CLOCKWISE DIRECTION.

NOTE: WEAK OR DEAD BATTERIES MAY SWELL AND LEAK. TO AVOID DAMAGE TO THE UNIT, IF IT IS TO BE STORED FOR A LONG PERIOD OF TIME, PLEASE REMOVE ALL BATTERIES, OR IF THE BATTERIES BECOME WEAK, REPLACE THEM WITH FRESH ONES.

RADIO AM/TV1(FM)/TV2(WB) BAND LISTENING

1. TELESCOPIC ANTENNA-EXTEND TO ITS FULL LENGTH FOR BEST TV1(FM)/TV2(WB) RECEPTION.
2. TURN VOLUME-CONTROL CLOCKWISE TO "ON" POSITION.
3. SET THE BAND SELECTOR TO EITHER AM/TV1(FM)/TV2(WB).
 - A. TUNING BAND - ROTATE THE TUNING DIAL UNTIL THE DESIRED STATION IS SELECTED.
 - B. TUNING TV1(FM) - ROTATE THE TUNING DIAL UNTIL THE DESIRED STATION IS SELECTED.
 - C. TV2(WB) - ROTATE THE TUNING DIAL UNTIL THE DESIRED STATION IS SELECTED.
4. ADJUST THE VOLUME CONTROL TO THE DESIRED LISTENING LEVEL.

LIGHT

THIS UNIT CAN BE USED AS A TORCH BY SETTING THE SWITCH TO LIGHT POSITION. SET THE SWITCH TO OFF POSITION TO SWITCH OFF THE LIGHT.

EMERGENCY SIREN

YOU CAN GET THE SIREN SOUND BY SETTING THE SWITCH TO SIREN POSITION.

CLEANING

CLEAN THE CASING WITH A SOFT CLOTH SLIGHTLY MOISTENED WITH WATER OR A MILD DETERGENT SOLUTION. DO NOT USE SOLVENTS SUCH AS ALCOHOL, BENZINE OR GASOLINE AS THEY MAY MAT THE FINISH OF THE CASING. NEVER IMMERSE UNIT IN WATER. THIS WILL DAMAGE THE ELECTRONIC COMPONENTS.

REMARKS:

NOTICE THE FOLLOWING POINTS WHILE THE UNIT EXPOSED TO RAIN OR MOISTURE.

1. BE SURE THAT THE BATTERY DOOR IS FULLY CLOSED.
2. AM/TV1(FM)/TV2(WB) TELESCOPIC ANTENNA MUST BE FOLDED.
3. DO NOT REMOVE THE COVER (BACK) OR DISASSEMBLE. INSIDE COMPONENTS CAN ONLY BE SERVICED BY QUALIFIED SERVICE PERSONNEL.
4. TO REPLACE LIGHT BULB, PRESS BLACK BUTTON LOCATED BENEATH THE LIGHT COVER, AND GENTLY REMOVE PLASTIC LIGHT COVER. REPLACE OLD LIGHT BULB WITH NEW LIGHT BULB, AND GENTLY PRESS THE LIGHT COVER BACK INTO ITS ORIGINAL POSITION. PLEASE ENSURE DURING RAIN AND STORM THAT LIGHT COVER IS FIRMLY IN PLACE

THIS PRODUCT IS NOT INTENDED FOR UNDERWATER USE. DO NOT SUBMERGE

©1993 Salton/Maxim Housewares Inc.
Printed In Hong Kong