



Magic Chef®

SO RIGHT AT HOME.™

Tall Can Opener

with Knife
Sharpener

Opens Tall Cans with
Ease

Power Pierce Action
Sharpens Knives &
Scissors

Removable Cutting
Blade



OWNER'S MANUAL
MCC0107S

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS.
2. To protect against electrical hazards, do not immerse in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not open pressurized (aerosol-type) cans.
11. Do not open cans of flammable liquids such as lighter fluids.

SAVE THESE INSTRUCTIONS
THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.

 
Longer extension cords are available and may be used if care is exercised in their use.

If an extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, (2) if the appliance is of the grounding type, the extension cord should be a grounding type 3-wire cord, and (3) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

POLARIZED PLUG

This appliance has a **polarized plug** (one blade is wider than the other): To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do **not** attempt to modify the plug in any way.

GETTING TO KNOW YOUR MAGIC CHEF® MCCO107S TALL CAN OPENER

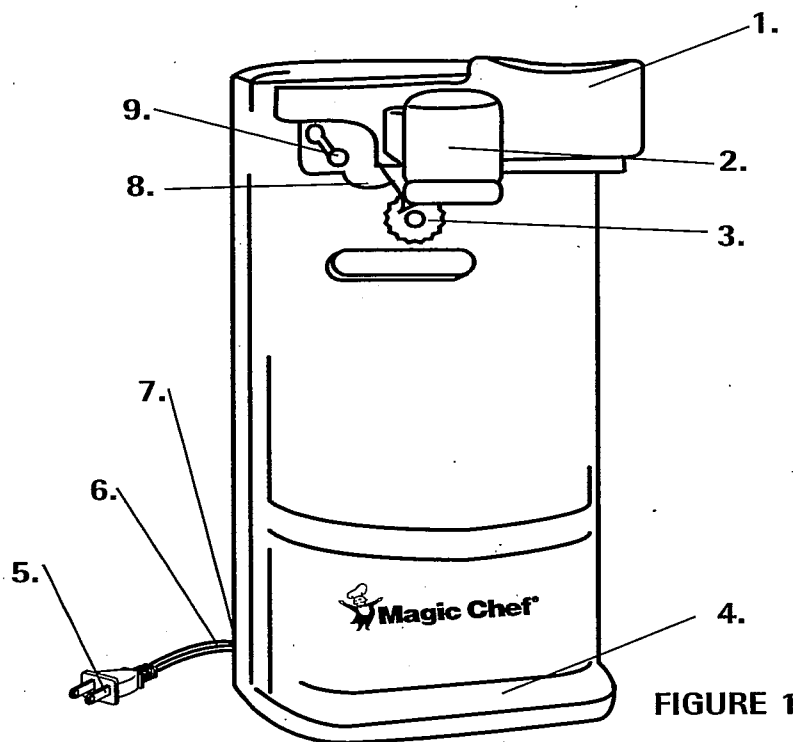

- 1. Lever
- 2. Detachable Magnet
- 3. Geared Wheel
- 4. Base
- 5. Polarized Plug
- 6. Power Supply Cord
- 7. Cord Storage
- 8. Cutting Blade
- 9. Guide Bar

FIGURE 1

**Specifically designed
to open tall cans.**


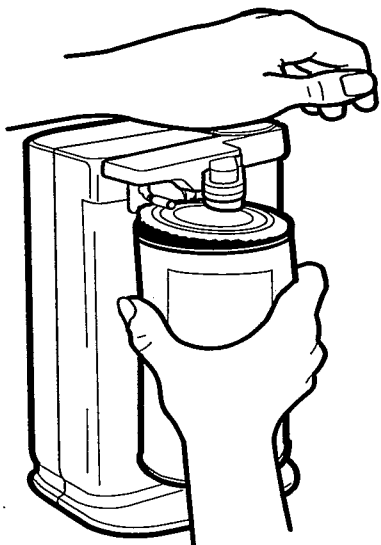 


FIGURE 2

 **Knife/Scissors
Sharpener**

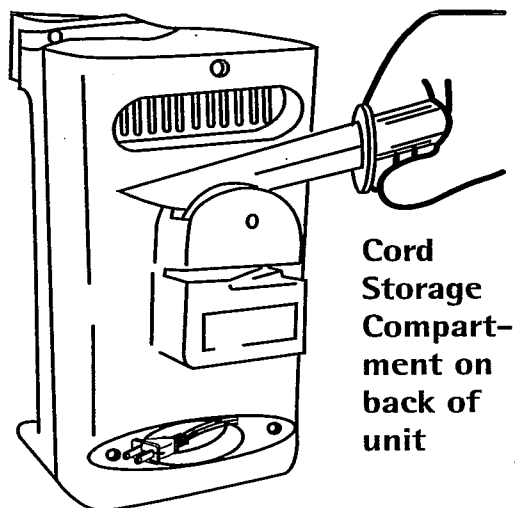

**Cord
Storage
Compartment on
back of
unit**

FIGURE 3

OPERATING INSTRUCTIONS

IMPORTANT: To ensure continued efficient performance, keep the Cutting Blade clean. Can Opener should be turned off for one minute after operating for 5 minutes.

BEFORE USING

1. Carefully unpack Can Opener.
2. Wipe with a soft cloth or sponge to remove small particles collected during packing and handling.
3. Carefully insert Lever into Can Opener. With the Lever in the lifted position, place the pivot into the pivot slot and push Lever in until it snaps into place; then let the Lever fall into place.
4. Plug Can Opener into electrical outlet, and press down on the Lever to make sure it is operating properly.

CAUTION: Do not touch beneath the Lever where the Cutting Blade and Geared Wheel are located; doing so may cause injury.

TO USE CAN OPENER

1. Raise Lever, place can under the Guide Bar and against the Geared Wheel. (See Figure 1 to identify parts.)
2. Press down on Lever to pierce lid of can (Figure 2). This automatically starts the cutting action. The Can Opener will continue to cut until the lid is completely severed from the can.
3. Grasp the can, then raise the Lever to release the can.
4. Carefully remove lid from the Magnet; use caution to avoid injury from edge of lid.

TO USE KNIFE/SCISSORS SHARPENER

1. Turn unit sideways so that Knife and Scissors Sharpener is to your right (Figure 3).
2. Press down Lever.
3. Place Blade lightly in either left or right groove. Draw knife slowly toward you with a slow, even motion.
4. Place Blade in other groove and repeat 4 or 5 times, alternating from one groove to the other until desired sharpness is achieved.
5. The Knife and Scissors Sharpener can also be used for sharpening scissors. A larger groove at the side of the Sharpener is designed especially for scissors. Place one Blade of the scissors in the groove, and then draw it toward you slowly and evenly. Repeat with the other Blade.

SPECIAL ATTENTION: Blades to be sharpened should be clean. Do not sharpen knives or scissors that have serrated Blades.

CARE AND MAINTENANCE

USER MAINTENANCE INSTRUCTIONS

This appliance contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified service personnel if servicing is needed, or return it to the manufacturer. See warranty for details.

Always unplug Can Opener from the electrical outlet when not in use and before cleaning. NEVER immerse unit or cord in water or any other liquid.

CLEANING INSTRUCTIONS

Can Opener should be kept clean to avoid food contamination.

Cleaning the Can Opener is easy. Unplug from electrical outlet and remove the Lever. To remove Lever, hold Can Opener facing you and lift the Lever upward, then gently pull toward you. **Exercise caution when removing, washing and replacing the Lever; Cutting Blade is sharp and can cause injury.**

Magnet also detaches for easy cleaning. Wash Lever and Magnet in warm, soapy water. To remove stubborn food spots, dab a small amount of regular dishwashing liquid onto a small brush and gently scrub clean. Rinse well and allow to dry thoroughly before replacing it on the unit.

Other parts can be wiped clean with a soft, slightly damp cloth or sponge. **Do not allow water, or any other liquid, to get into the unit.**

CAUTION: DO NOT use scouring pads or any type of harsh cleanser that may damage the surfaces or dull the Cutting Blade.

STORING INSTRUCTIONS

Unplug the unit from the wall outlet and clean all parts. Be sure all parts are dry before storing. Store appliance in its box or in a clean, dry place. Never store it while it is still plugged in. Never wrap cord tightly around the appliance; keep it loosely coiled, or push it back into the cord storage compartment.

LIMITED WARRANTY

This Magic Chef product warranty extends to the original purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

Warranty Coverage: This product is warranted against defective materials and workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied, and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above ninety day warranty period, a product with a defect will be replaced with a comparable model when the product is returned to Wal-Mart with an original store receipt. The replacement product will be in warranty for the balance of the ninety day warranty period and an additional one-month period. No charge will be made for such replacement.

IMPORTANT NOTICE

If any parts are missing or defective, return this product to the place of purchase, or contact our Consumer Service Department for assistance:

Consumer Service Department
550 Business Center Drive
Mount Prospect, IL 60056

Any questions or comments can be directed to the above address or call our toll free number:

1-800-233-9054
Monday-Friday 9am - 5pm CST
Refer to Item #MCC0107S

MAGIC CHEF, THE MAGIC CHEF LOGO and "SO RIGHT AT HOME" are trademarks of the Maytag Corporation and used under license to Wal-Mart Stores, Inc.