


# OWNER'S MANUAL

Model No. TO-6

## Sonata™

the perfect cool touch toaster

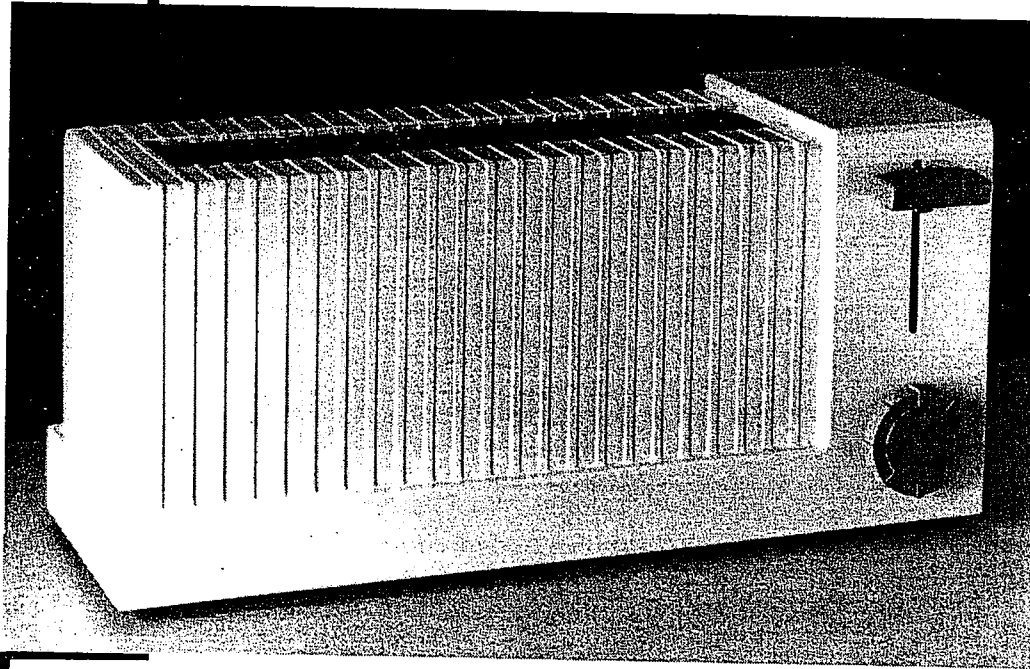

### It's TOUCHABLE

with a cool to the touch exterior, easy to use controls, tamper proof safety crumb trough Adjustable temperature control for the right temperature. Sleek European design wipes up clean in seconds.

### It's cool!

This ultra modern toaster loves browning all types of breads, extra wide designer English muffins, frozen pastries and most of all, BAGELS!

Sonata™ from Salton, a harmonious blend of design and function.

# salton™


*Get a taste of the good life with Salton.*

# IMPORTANT SAFEGUARDS

When using your SALTON toaster or any electrical appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not place any part of this toaster in water or any other liquid. See instructions for cleaning.
4. Close supervision is necessary when any appliance is used by or near children.
5. Do not leave appliance unattended.
6. To reduce the risk of fire or electrical shock, do not insert over-sized foods, metal foil packages, or metal utensils into the toaster.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning.
8. Do not operate any appliance with a damaged cord or plug or after the appliance has malfunctioned or been damaged in any manner. Return the appliance to SALTON for examination, repair, or adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
10. Do not use outdoors.
11. Failure to clean the crumb slot may result in a fire hazard.
12. Do not let the cord hang over the edge of the table or counter or touch hot surfaces.
13. Do not place on or near a hot gas or electric burner or in a heated oven.
14. Be sure the toaster is turned off before plugging into or unplugging from an outlet.
15. Do not use this toaster for other than intended use.
16. Use toaster in an open area with 4-6 inches air space above and on all sides for air circulation. A fire may occur if toaster is covered or touching flammable material, including curtains, draperies, walls, and the like, while in operation.
17. Do not attempt to dislodge food when toaster is plugged into an outlet. Should it be necessary to dislodge food, unplug the toaster and use only a wooden utensil.
18. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electrical shock.

## SAVE THESE INSTRUCTIONS

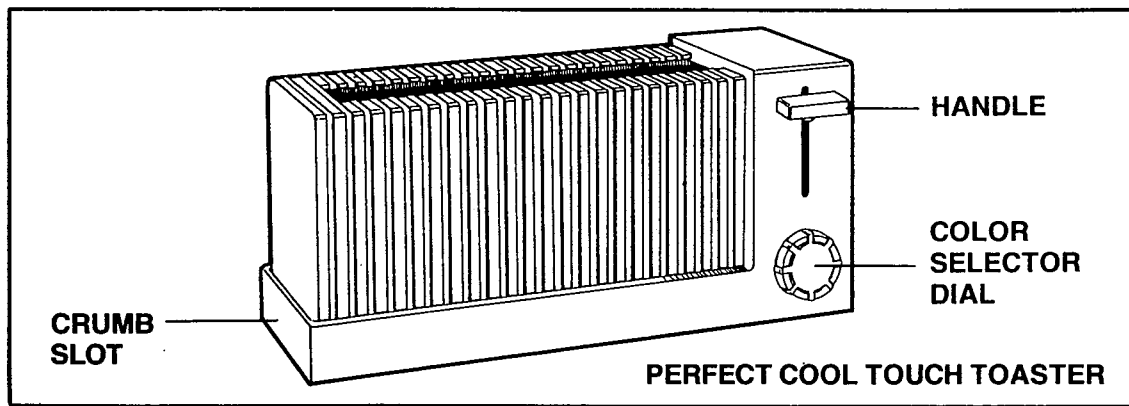

SALTON'S PERFECT COOL TOUCH TOASTER incorporates the very latest in technology with ease of use. The Sonata™ Cool Touch evenly toasts a variety of breads, toaster pastries and waffles.

Variable heat control lets you choose your toast the way you like, from light to dark.

## HOW TO USE SALTON'S COOL TOUCH TOASTER

1. Place your SALTON PERFECT COOL TOUCH TOASTER on a flat...dry...stable surface
2. Making sure that the handle is in the uppermost position... insert the plug into a standard electrical outlet
3. Set the color selector dial...the dial has settings numbered 1 - 6...1 is the lightest setting and 6 the darkest...the setting you choose depends on the thickness of the product being toasted and the moisture content...toasting from light to dark is as simple as adjusting the color selector for perfect results
4. Place bread or other toaster products into the slot...press the handle down until it locks into place...this will automatically turn on the heating element
5. When the toast is the color you selected...the carriage will automatically release and raise the toasted bread to the top of the slots...the power to the heating elements will automatically cut off
6. If you wish to interrupt the toasting cycle...simply lift the handle up...raising the food up and switching off the heating elements automatically

# TOASTING HINTS

To free broken or bent toast wedged in toaster...unplug toaster and turn upside down...shake. DO NOT insert forks or other sharp instruments as this may damage the mechanism and create a possible safety hazard.

Individual tastes vary...it is difficult to recommend exact toaster settings...a little experimenting will give you the best setting for your taste...you may also wish to refer to the heating instructions on the packages of the convenience foods you wish to toast.

Different breads have different moisture content requiring different settings for toasting...raise the front lever at any time to check the color.

All breads do not toast alike...when toasting dark or other rich breads...use a slightly darker color setting than used for plain white breads...use a lighter color setting for fruit loaves...sweet bread and white bread that is a few days old.

Bread that is a day or two old makes the best toast.

If you slice the bread yourself...cut the slices evenly...this will allow better, more even toasting.

Thin sliced bread should be toasted at a lighter color setting.

Toaster pastries may be toasted in your SALTON Toaster by using a "light" setting 1 - 3...DO NOT place foil-wrapped food (remove all protective wrappings before placing in toaster) or pastries with runny frostings or open fillings in the toaster slots.

Your SALTON PERFECT COOL TOUCH TOASTER should be used to toast foods that will fit freely into the toaster slots.

# **CLEANING AND CARE INSTRUCTIONS**

## **LET THE TOASTER COOL COMPLETELY BEFORE CLEANING**

1. Unplug toaster from electrical outlet.
2. DO NOT USE COARSE OR ABRASIVE CLEANERS OR STEEL WOOL to clean your toaster...never spray or apply cleaners directly to your SALTON Toaster...instead apply cleaner to a soft cloth.
3. Wipe the outside of the toaster with a soft, damp cloth...polish with a soft, dry cloth.

## **CRUMB SLOT**

To remove excess bread crumbs from inside your SALTON Toaster...invert over a paper towel or dish towel...lightly tap the base.

## **ELECTRICAL CORD**

This SALTON Toaster is a high-wattage appliance...to avoid a circuit overload...when possible, toaster should be operated on a separate electric circuit from other operating appliances.

A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the following must apply:

1. The marked electrical rating should be at least as great as the electrical rating of the appliance.
2. The extension cord should not drop over the counter top or tabletop where it can be pulled on by children or tripped over accidentally.

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.

## LIMITED WARRANTY

Machines distributed by Salton, Inc. are warranted for one year from date of purchase against defects in workmanship and material. During that period these defects will be repaired or the product will be replaced at Salton's option, without charge. This warranty covers normal consumer usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, neglect, installation, commercial use or improper maintenance. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton, Inc., or to units which have been altered or modified without authorization of Salton, Inc., or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

## Service and Repair

DO NOT attempt to repair your SALTON TO-6 PERFECT COOL TOUCH TOASTER. Should the machine malfunction, you should first call toll free 1-800-233-9054 between the hours of 9:00am and 5:00 pm Central Standard Time and ask for CONSUMER CUSTOMER SERVICE stating that you are a consumer with a problem. If the problem cannot be resolved, you will be asked to return the machine to the factory for repair. Under no circumstances should you attempt to open the housing and repair the machine. Should you do this, your warranty will be voided.

## To Return for Service

1. Securely package and return the product, PREPAID to —  
SALTON HOUSEWARES, INC., M  
550 BUSINESS CENTER DRIVE  
MT. PROSPECT, IL 60056
2. Be sure to enclose:
  - a. Your name, address and phone number.
  - b. The date of purchase (or receipt as a gift).
  - c. An explanation of the malfunction or reason for return.
  - d. To insure prompt "In-Warranty" service, be sure to include proof of date of purchase.

We recommend you take the necessary precaution of insuring the parcel.



**salton**<sup>TM</sup>

