 


**OWNER'S MANUAL**  
**MODEL No. CO-2**

**Automatic Can Opener &**  
**Knife Sharpener**

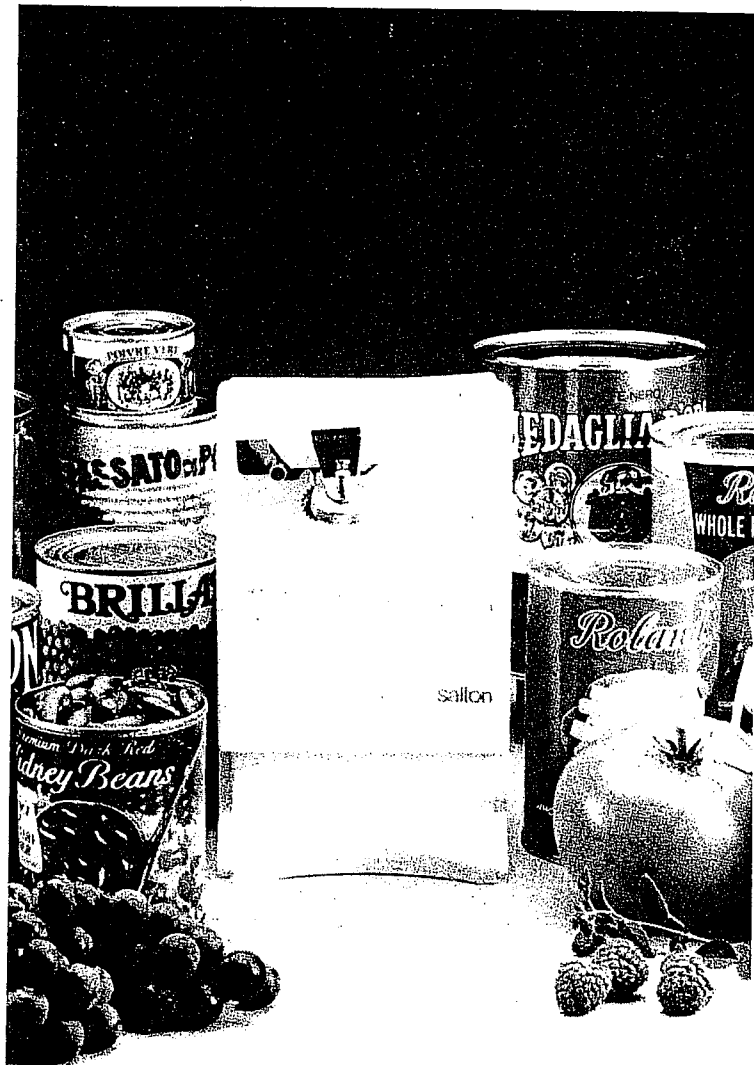

**salton®**

*Get a taste of the good life with Salton.*

# **IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1.** Read all instructions.
- 2.** To protect against electrical hazards, do not immerse in water or other liquid.
- 3.** Close supervision is necessary when any appliance is used by or near children.
- 4.** Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning the appliance.
- 5.** Avoid contact with moving parts.
- 6.** Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Salton/MAXIM Housewares, Inc. for examination, repair or adjustment. See Warranty.
- 7.** The use of accessory attachments not recommended by Salton/MAXIM may cause fire, electric shock or injury.
- 8.** Do not use outdoors.
- 9.** Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 10.** Do not open pressurized (aerosol-type) cans.
- 11.** Do not open cans of flammable liquids such as lighter fluids.

## **SAVE THESE INSTRUCTIONS**

# Getting to Know Your Salton Automatic Can Opener & Knife Sharpener

Your Automatic Can Opener & Knife Sharpener is for **HOUSEHOLD USE ONLY**. Place it on a level surface and insert plug into any standard 120V AC household outlet.

**NOTE:** This appliance has a **polarized plug** (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## IMPORTANT NOTES:

To ensure continued efficient performance by your can opener, keep the cutting blade clean.

Can opener should be turned off for one minute after operating for 5 minutes.

## How To Use Your Automatic Can Opener

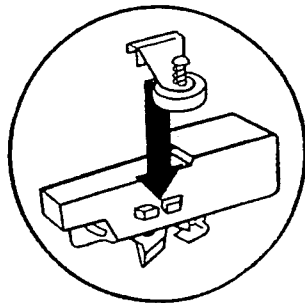 


Figure 1

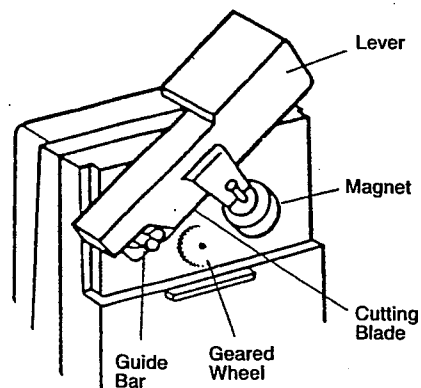 


Figure 2

1. Hook magnet in position as shown in Figure 1.
2. Raise lever, place can under the guide bar and against the geared wheel. (See Figure 2 to identify parts.)

## How To Use Your Can Opener *(continued)*

3. Press down on lever to pierce lid of can. This automatically starts the cutting action. The can opener will continue to cut until the lid is completely severed from the can.
4. Grasp the can, then raise the lever to release the can.
5. Carefully slide the lid away from the magnet using caution to avoid being injured by the sharp edge of the lid.
6. Extra-tall cans may be cut by placing the opener at the edge of the counter. The base of the can opener is contoured to allow the can to extend below the base of the opener and below the countertop.

## How To Use The Knife Sharpener

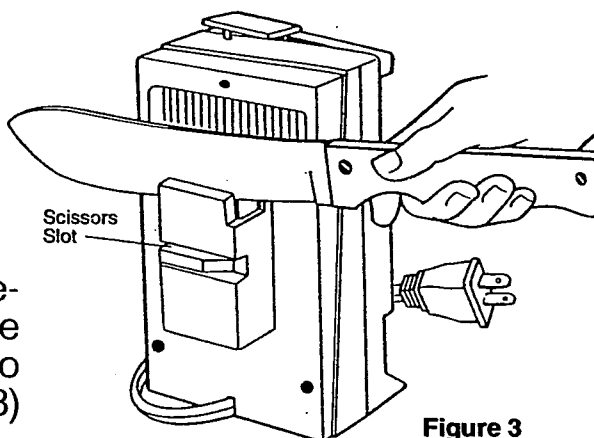 


Figure 3

1. Turn the unit sideways so that the knife sharpener is to your right. (Figure 3)
2. Press down lever.
3. Place blade lightly in either left or right groove. Draw knife slowly toward you with a slow, even motion.
4. Place blade in other groove and repeat 4 or 5 times, alternating from one groove to the other until desired sharpness is achieved.
5. Your Automatic Can Opener & Knife Sharpener can also be used for sharpening scissors. A larger groove at the side of the knife sharpener is designed especially for scissors. Place one blade of the scissors in the groove, and then draw it toward you slowly and evenly. Repeat with the other blade.

***IMPORTANT! Blades to be sharpened should be clean.***

***Do not sharpen knives that have serrated blades.***

# User Maintenance Instructions

## TO CLEAN

Unplug from electrical outlet. To remove lever, hold can opener facing you. Lift the lever upward and gently pull toward you. Wash lever in warm, soapy water and wipe outside surfaces of unit with a damp cloth.

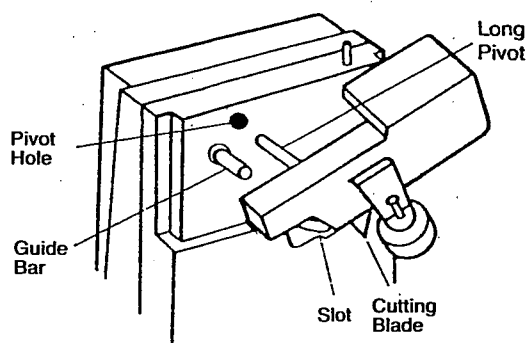 


Figure 4

To replace the lever, hold the can opener facing you with the lever in the lifted position, and put the long pivot into the pivot hole. At the same time, the guide bar will align with the slot of the lever. (See Figure 4.) Be sure to push completely into the pivot hole. Then let lever drop back onto top of can opener. ***If you do not push lever completely into the hole, it will not drop back on-top of opener.***

## TO STORE

Unplug can opener and store in its box or in a dry place. Store the cord loosely coiled; never wrap it tightly around the unit. Do not put any stress on cord where it enters the appliance as it may cause the cord to fray and possibly break.

## LIMITED WARRANTY

Products distributed by Salton/MAXIM Housewares, Inc. are warranted for one year from date of purchase against defects in workmanship and material. During that period these defects will be repaired or the product will be replaced at Salton/MAXIM's option, without charge. This warranty covers normal consumer usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, neglect, installation, commercial use or improper maintenance. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares, Inc., or to units which have been altered or modified without authorization of Salton/MAXIM Housewares, Inc., or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible. This warranty does not cover damage which results from unauthorized repairs.

## Service and Repair

 
DO NOT attempt to repair your SALTON® CO-2 Automatic Can Opener & Knife Sharpener. Attempts to repair this appliance yourself may render it dangerous to use. Should the appliance malfunction, you should first call our CONSUMER SERVICE DEPARTMENT toll free at 1-800-233-9054 Mon.-Fri. between the hours of 9:00 am and 5:00 pm Central Standard Time, stating that you are a consumer with a problem. If the problem cannot be resolved, you will be asked to return the appliance to the factory for repair. Under no circumstances should you attempt to open the housing and repair the appliance. Should you do this, your warranty will be voided.

## To Return for Service

1. Securely package and return the product, PREPAID to:  
Salton/MAXIM Housewares, Inc., Repair Department  
550 Business Center Drive, Mt. Prospect, IL 60056
2. Be sure to enclose:
  - a. Your name, address and phone number.
  - b. The date of purchase (or receipt as a gift).
  - c. An explanation of the malfunction or reason for return.
  - d. Six dollars (\$6.00) Check or Money Order payable to Salton/MAXIM Housewares, Inc. for return postage and handling.
  - e. To insure prompt "In-Warranty" service, be sure to include proof of date of purchase.

We recommend you take the necessary precaution of insuring the parcel.

3. **Toll Free Number: 1-800-233-9054.**

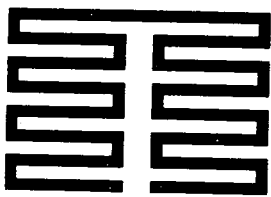

**salton®**

